


F.A.Q's for TEW-431BRP

Q: What is the default IP address of my router?

The Default IP is 192.168.0.1 with no username or password.


Q: How do I change the IP address of my router?

Log into the router by entering its IP address into a browser. The default IP address is <http://192.168.0.1>. On the left hand side click on LAN.

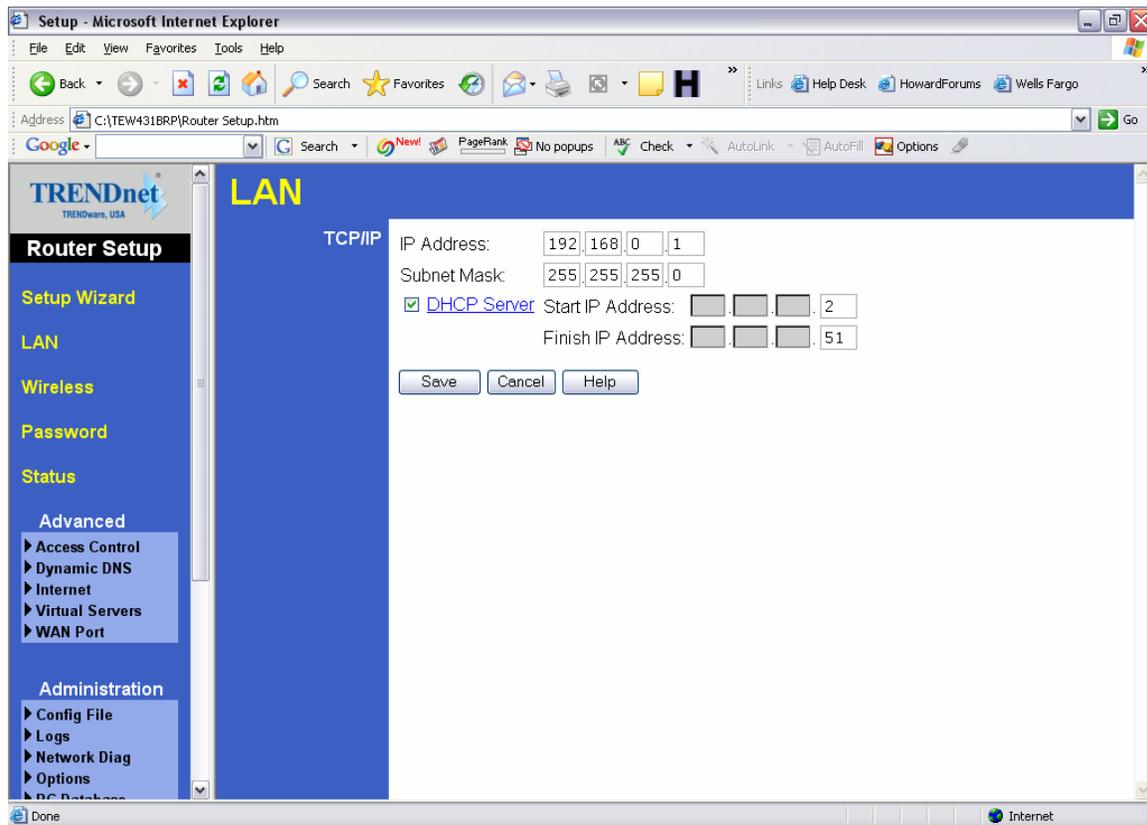

Q: How do I change the password on my router?

Log into the router by entering its IP address into a browser. The default IP address is <http://192.168.0.1>. Click on Password on the left hand side.

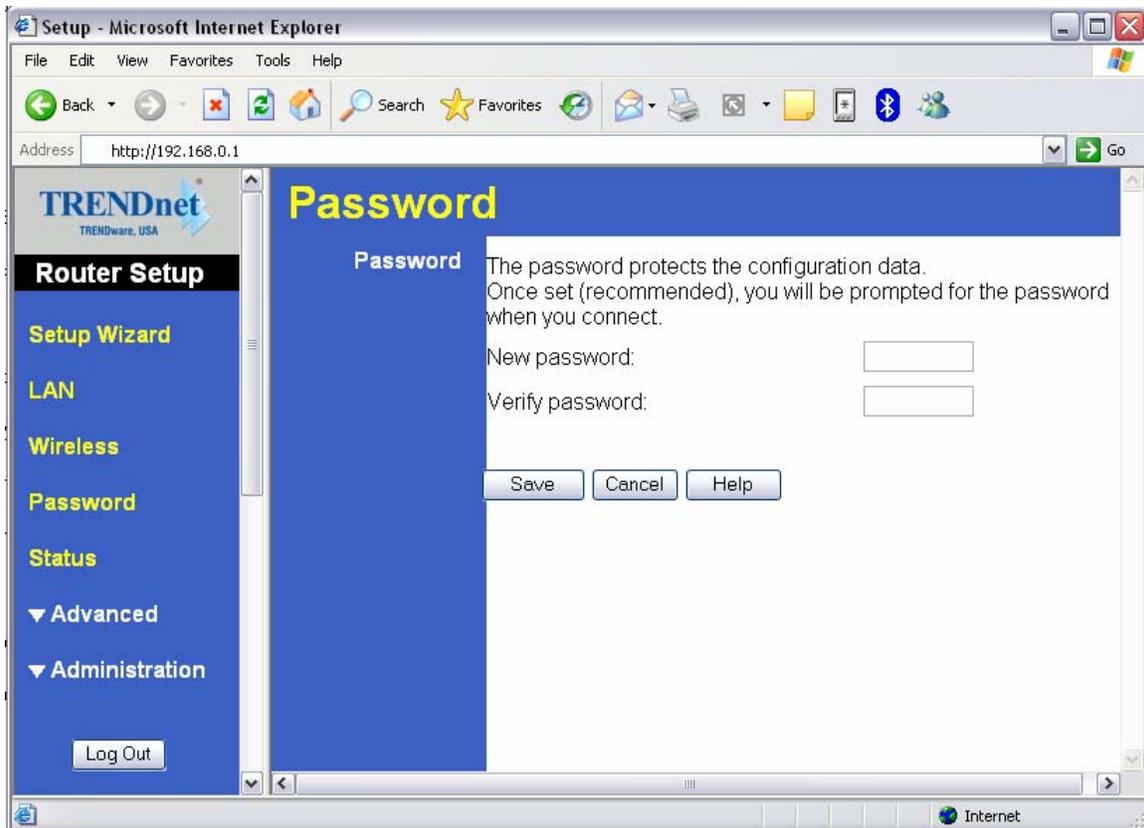


Q: What can I do if I forgot my password or want to reset back to factory defaults.

Press and hold in the reset button in the back of the router for approximately 15 seconds.




Q: How do I save or reload the configuration of my router?

Log into the router by entering its IP address into a browser. The default IP address is <http://192.168.0.1>. On the left hand side click on Administration>Config File.

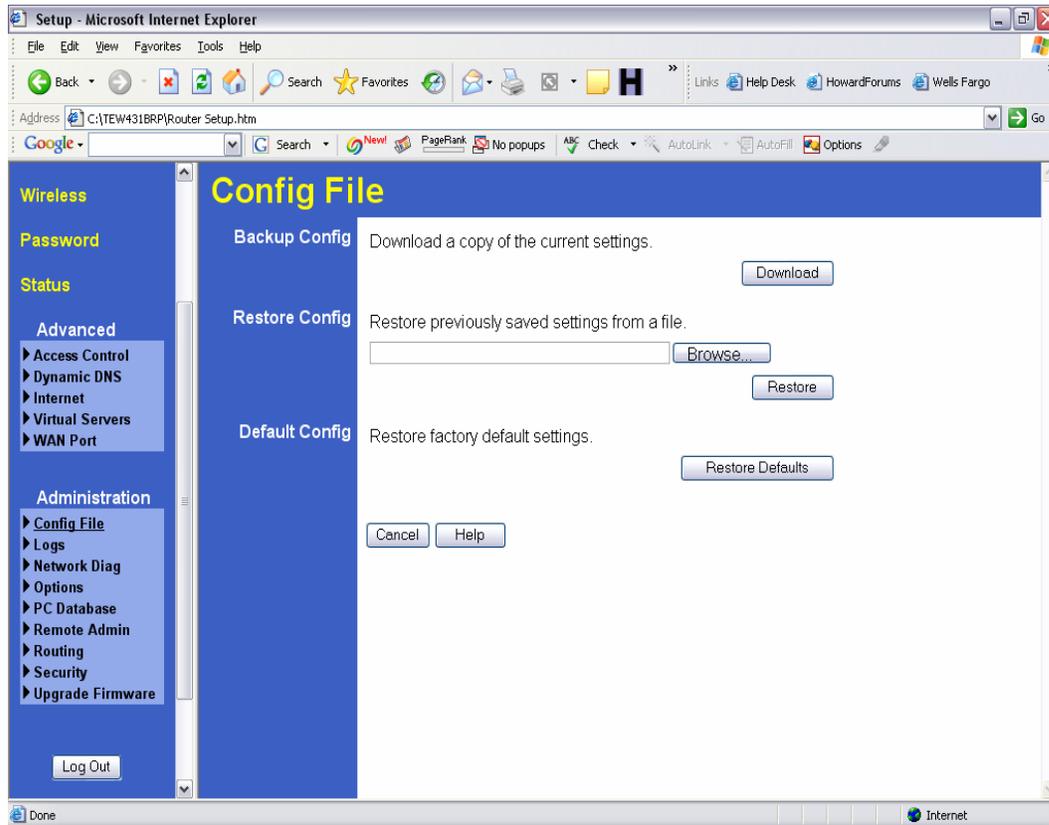

Q: How do I upgrade the firmware on my router?

Log into the router by entering its IP address into a browser. The default IP address is <http://192.168.0.1>. On the left hand side click on Administration>Firmware upgrade.

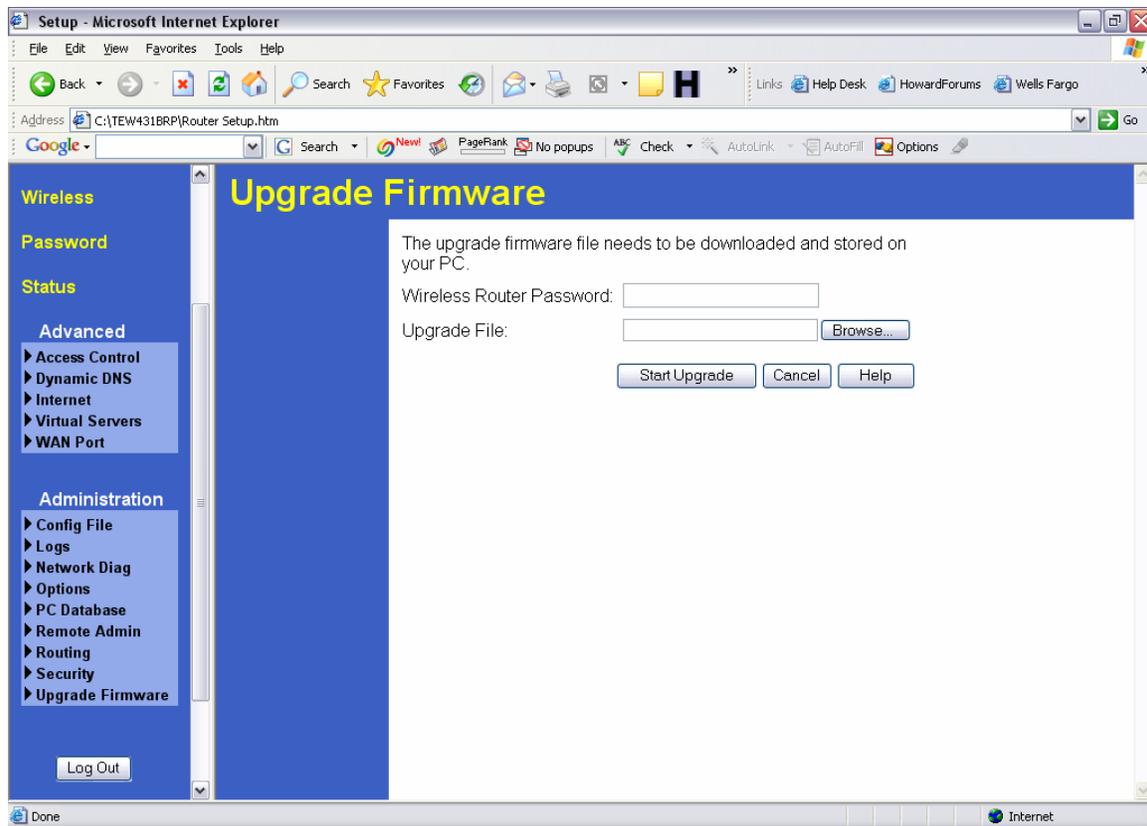


Q: How do I configure the router through the web-based configuration?

Log into the router by entering its IP address into a browser. The default IP address is <http://192.168.0.1>

Q: How do I enable encryption on my router?

Log into the router by entering its IP address into a browser. The default IP address is <http://192.168.0.1> Click on Wireless

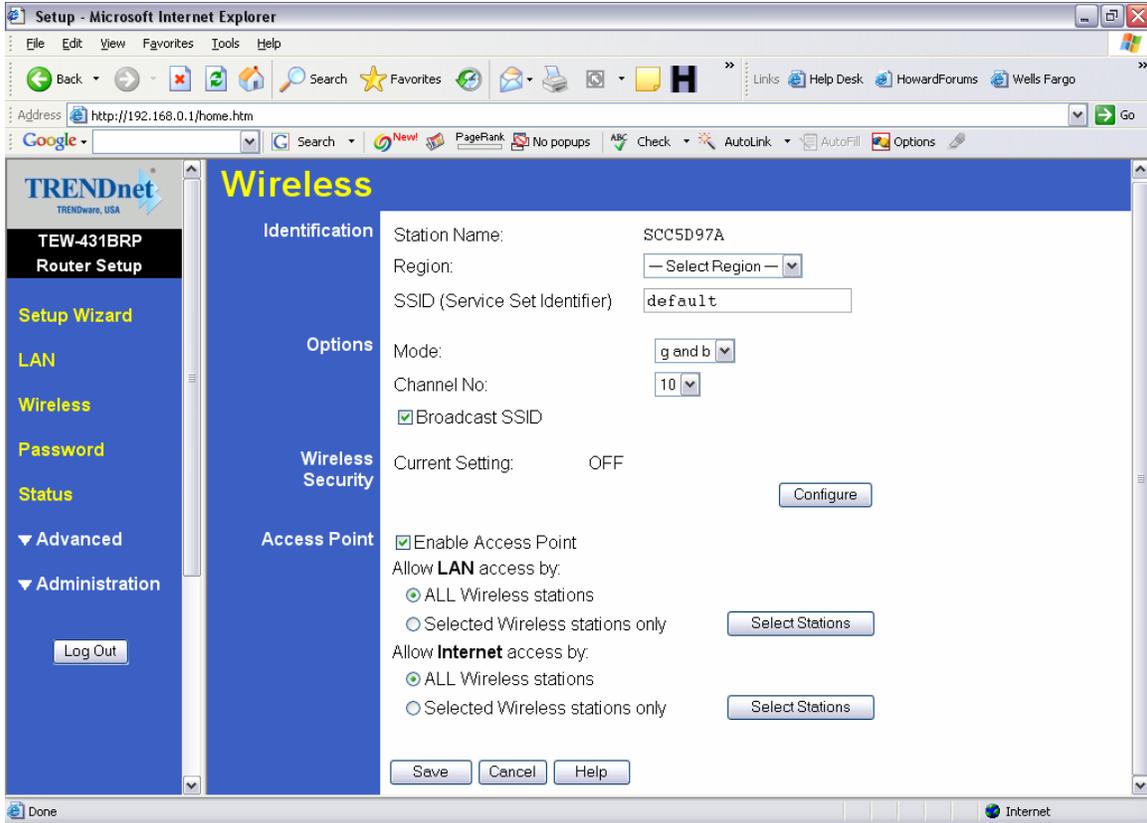


Click on configure settings, There you can select either WEP or WPA-PSK.



Q: Where can I find the MAC address of my router?


Log into the router by entering it's IP address into a browser. The default IP address is <http://192.168.0.1>. On the left hand side click on Advanced>Wan Port.

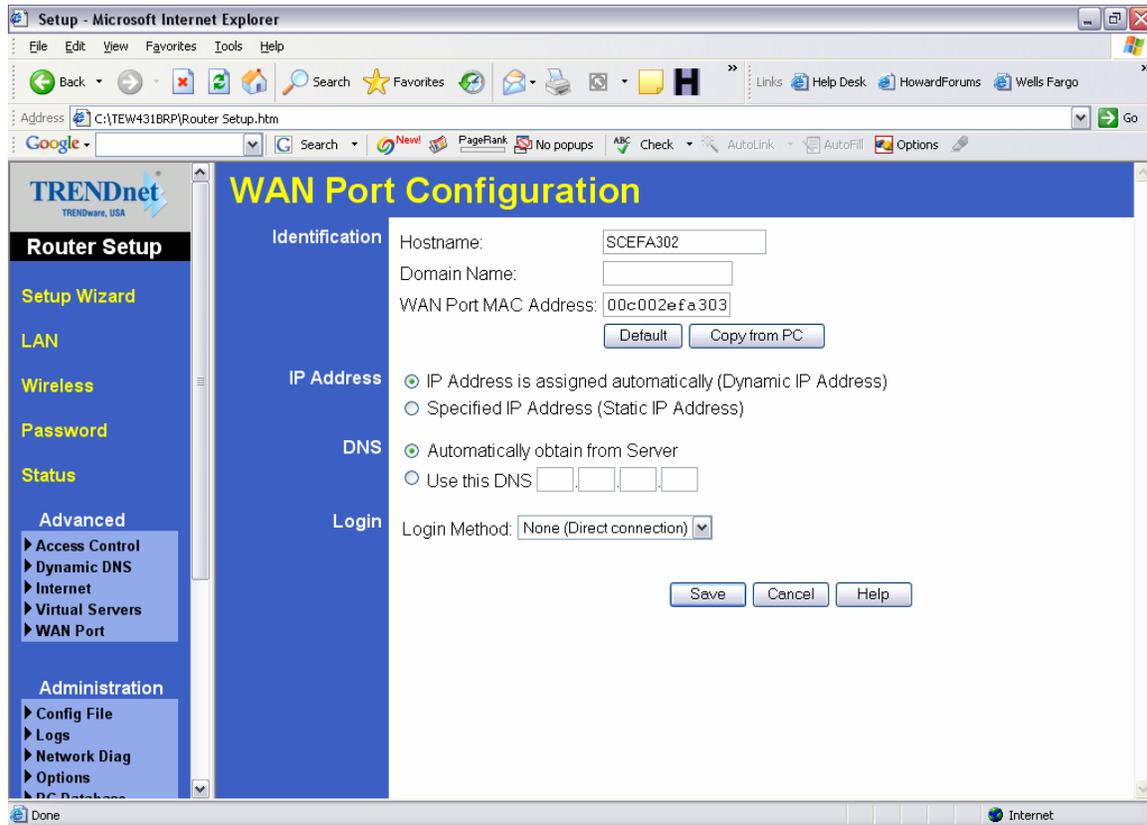

Q: How do I forward ports in my router?

Well Known Ports


- 1) Log into the router by opening a web browser and entering <http://192.168.0.1> in the address line.
- 2) Click on "Cancel" if the Setup Wizard comes up.
- 3) Click on Advanced on the left hand side.
- 4) Click on Virtual Server.

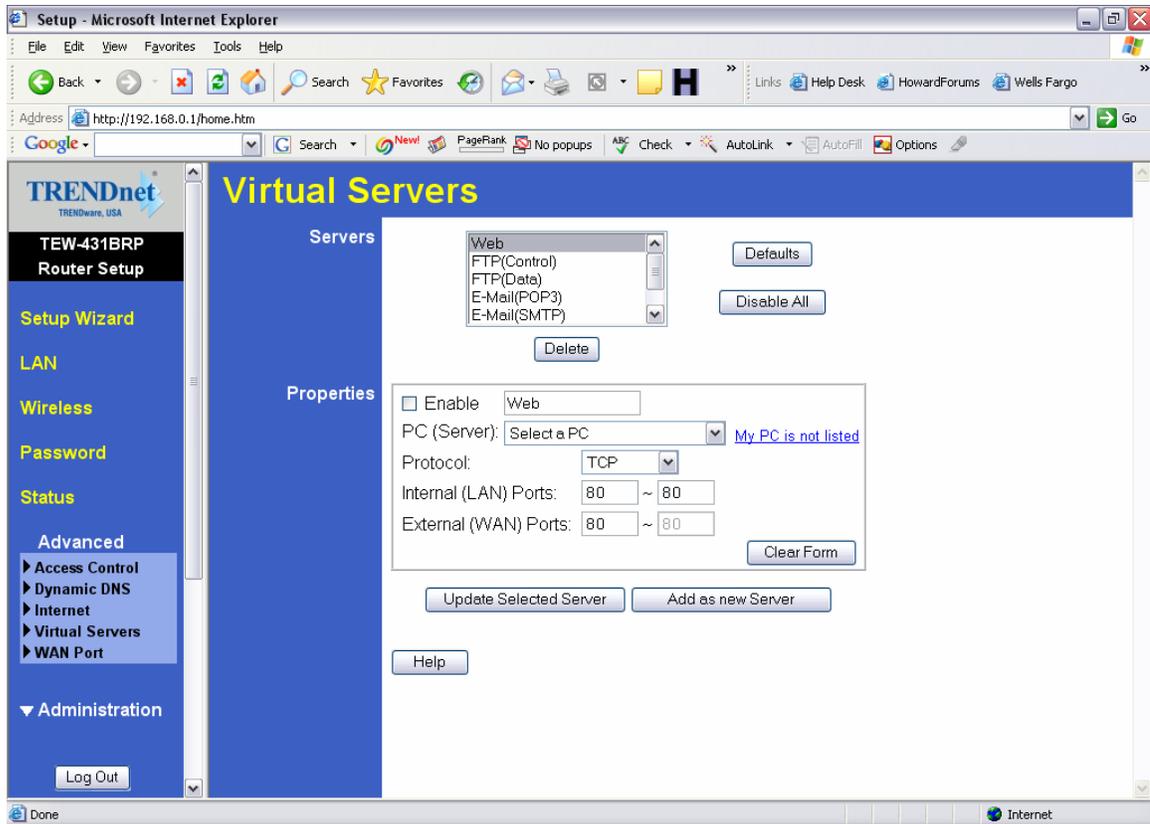

- 5) If it is a “well known” port click on the Service under the Servers section.
- 6) Click Enable in the properties section.
- 7) Choose the computer that you want the port forwarded to in the PC (Server) section. Note: If the computer is not listed here because it has been assigned a static IP address make sure you add it to the PC Database under Administration>PC Database.
- 8) Click “Add as a New Server”.

Custom Ports

- 1) Log into the router by opening a web browser and entering <http://192.168.0.1> in the address line
- 2) Click on “Cancel” if the Setup Wizard comes up.
- 3) Click on Advanced on the left hand side.
- 4) Click on Virtual Servers.

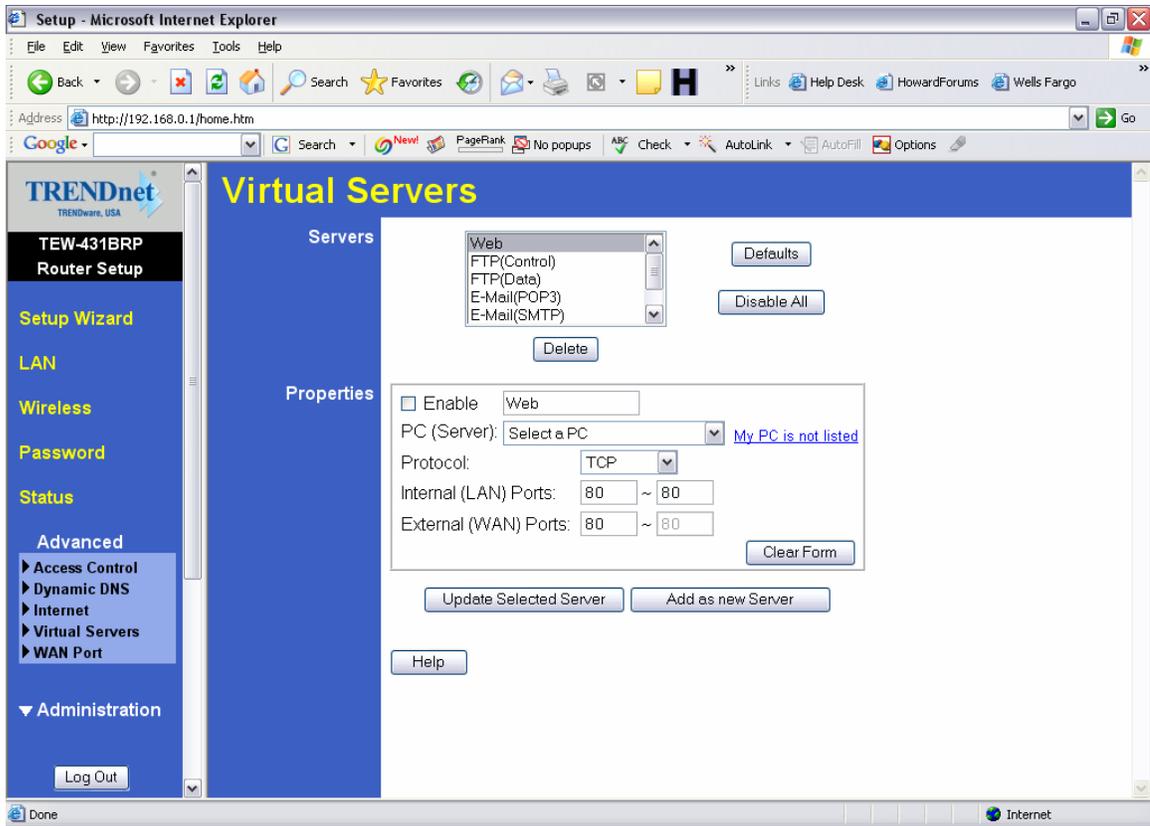

- 5) For Custom ports click Enable under the properties section.
- 6) Choose the computer that you want the port forwarded to in the PC (Server) section. Note: If the computer is not listed here because it has been assigned a static IP address make sure you add it to the PC Database under Administration>PC Database.
- 7) Choose the protocol(s).
- 8) Enter in the port(s).
- 9) Click “Add as a New Server”.