




Quick Installation Guide 💹 💥



# **Table of Contents**

English	1
1. Before You Start	1
2. How to Install	2
3. Printing	7
4. Faxing	8
5. Scanner	9
Troubleshooting	10

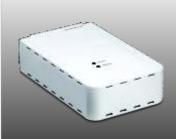

#### Package Contents

- TE100-MP1UN
- CD-ROM (Utility and User's Guide)
- Multi-Language Quick Installation Guide
- Power Adapter (12 V, 1A)

# **System Requirements**

• CD-ROM Drive

Supported Operating Systems	CPU	Memory
Windows 7 (32-bit)	1GHz or above	1GB RAM or above
Windows Vista (32-bit)	800MHz or above	512MB RAM or above
Windows XP (32-bit) / 2003 Server / 2000	300MHz or above	256MB RAM or above

#### Note:

- 1. Do not perform the following unless instructed to do so:
  - 1. Install the utility
  - 2. Connect printer to printer server
  - 3. Connect computer to Print Server
- 2. The utility must be installed on each computer in order to use your multi-function printer.


Install the printer drivers to your computer.
 Then power down the printer and disconnect the printer from your computer.

<u>Note</u>: Please refer to your printer's manual for printer installation instructions.




Connect the USB Printer to the USB port of the Print Server. Then click OK.



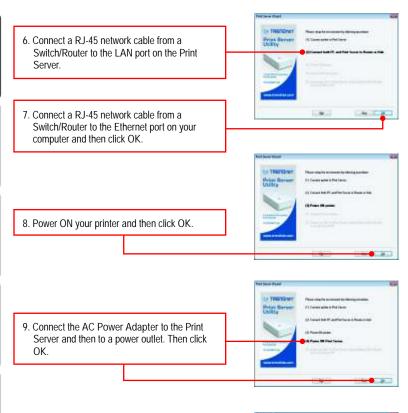

10. Verify the Status LED is on and the Error LED is off on the Print Server. Then click Yes.

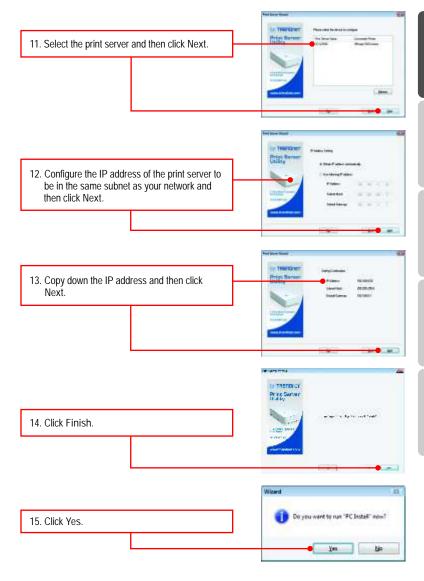



Ready

19. The printer driver wizard appears. Follow the printer driver wizard to install the printer.




## Print Server configuration is now complete.


For detailed information regarding the TE100-MP1UN configuration and advanced settings, please refer to the Troubleshooting section, User's Guide on the Utility CD-ROM, or TRENDnet's website at <a href="http://www.trendnet.com">http://www.trendnet.com</a>.

### **Register Your Product**

To ensure the highest level of customer service and support, please take a moment to register your product Online at: www.trendnet.com/register
Thank you for choosing TRENDnet

4. Click Disconnect.

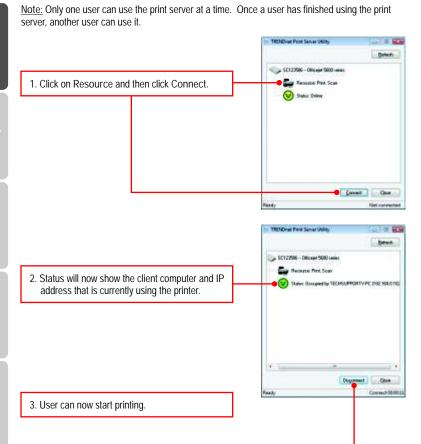

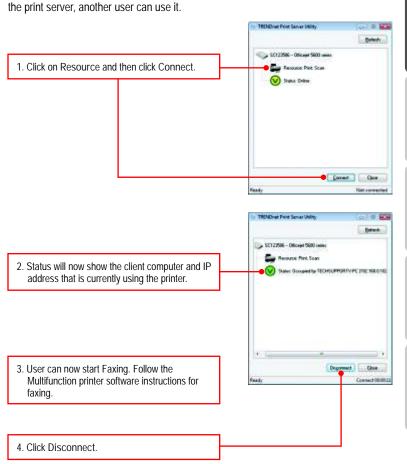

Note: Only one user can use the print server at a time. Once a user has finished using

Note: Only one user can use the print server at a time. Once a user has finished using the print server, another user can use it. TRENDing Print Server Utility O 3 8.00 Beleefe SC120506 - Ottored 5000 rever 1. Click on Resource and then click Connect. Resource Pile Scan Cornect Classe SC127506 - Officeart 5600 research Reinute First Soon 2. Status will now show the client computer and IP Boogiestsy TECHSUPPORTVPC (192,168.0.16) address that is currently using the printer. 3. Place the document on the Multi-Function Printer's Scanner bed. Then follow the Multifunction printer software instructions for scanning.

4. Click Disconnect.

## **Troubleshooting**

- 1. I inserted the Driver CD-ROM into my computer's CD-ROM Drive and the installation menu does not appear automatically. What should I do?
  - 1. For Windows 7, if the installation menu does not appear automatically, click on the Windows Icon on the bottom left hand corner of the screen,, click the "Search programs and files" box, and type D:\autorun.exe, where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Driver, and then press the ENTER key on your keyboard
  - 2. For Windows Vista, if the installation menu does not appear automatically, click Start, click the Start Search box, and type D:\autorun.exe where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.
  - 3. For Windows 2000/XP, if the installation menu does not appear automatically, click Start, click Run, and type D:\autorun where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.
- 2. The setup wizard/utility does not detect the Print Server and/or printer/storage device. What should I do?
  - Double check your hardware connections; make sure that the Print Server and printer are powered ON and are properly connected. Make sure the RJ-45 network cable is securely connected to the Print Server and Switch/Router.
  - Disable any software firewall programs such as ZoneAlarm or Norton Internet Security. If your computer is running Windows 7, Vista or XP, disable the built-in firewall.
  - 3. Click Refresh.
  - 4. Power cycle the Print Server. Unplug the power to the Print Server, wait 15 seconds, then plug the Print Server back in.
- 3. The setup wizard/utility does not detect my printer device. What should I do?
  - 1. Make sure the printer is powered on and properly connected to the Print Server
  - 2. Connect the printer with another USB cable.
  - 3. Reset the print server. Take a pin or paperclip and press the reset button on the print server for 15 seconds, then let go.

- 4. I am unable to print to my Print Server. What should I do?
  - 1. Make sure you follow the exact steps for installing the Print Server in section 2.
  - Make sure to right click on the print server in the utility and click connect. If another user is using the print server, you must wait until the user is finished using it.
  - 3. If you are connected to the print server and are idled for a couple of minutes, a warning message appears. If you do not respond within a minute, you will be automatically disconnected from the print server. You must connect to the print server again.
- 5. I can print a test page, but I cannot print anything from Microsoft Word or other applications.

Make sure to set the newly installed network printer as your default printer. Click Start and then click Printers & Faxes, verify that your printer icon has a check on it

- 6. I configured my Print Server to automatically receive an IP Address from a DHCP server, and now I cannot go into the Print Server's web utility. Open the print server setup wizard (See 3. Configure the Print Server) to locate your Print Server's IP Address.
- 7. Is there a way to force a computer to give up ownership to the print server? If the user has been idled for 5 minutes, the user will be automatically disconnected. You can also force a computer to give up owner ship to by unplugging the power to the print server and plug the power back in.

If you still encounter problems or have any questions regarding the TE100-MP1UN, please refer to the User's Guide included on the Utility CD-ROM or contact TRENDnet's Technical Support Department.

#### Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.





Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

#### **ADVERTENCIA**

En todos nuestros equipos se mencionan claramente las caracteristicas del adaptador de alimentacón necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños fisicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energia electrica domiciliaria existente en el pais o zona de instalación.



# **Product Warranty Registration**

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com/register