



Quick Installation Guide





Table of Contents

Français	1
1. Avant de commencer 2. Procéder à l'installation	1 2
3. Impression	7
5. Scannage	9
Troubleshooting	10

1. Avant de commencer



l'emballage

- TE100-MP1UN
- Guide d'installation rapide en plusieurs langues
- CD-ROM avec utilitaire
- Adaptateur secteur (5V, 2A)

Configuration du système

- D'un lecteur de CD-ROM
- DriveProcesseur: 300Mhz ou supérieur
- Mémoire: 256 MB ou supérieur/ 512MB ou supérieur (Window Vista)
- Windows 2000/XP/2003 Server/Vista (32 bits)

Remarque :

- 1. Ne suivez les instructions suivantes que si vous en avez reçu la consigne :
 - 1. Installez l'utilitaire
 - 2. Branchez l'imprimante au serveur d'impression
 - 3. Branchez l'imprimante au serveur d'impression
- L'utilitaire doit être installé sur chaque ordinateur afin d'utiliser votre imprimante multifonction.

Application



2. Procéder à l'installation

 Intallez les pilotes d'imprimante sur votre PC. Eteignez ensuite l'imprimante et débranchez-la de votre ordinateur.

<u>Remarque :</u> Veuillez consulter le manuel de votre imprimante pour les instructions d'installation de l'imprimante.



2 Français







 Configurez l'adresse IP du serveur d'impression afin qu'elle soit dans le même sous-réseau que votre réseau et cliquez sur Next (Suivant).





14. Cliquez sur Finish (Terminer).









La configuration du serveur d'impression est à présent terminée

Si vous désirez des informations détaillées sur la configuration et les paramètres avancés du **TE100-MP1UN**, veuillez consulter le Guide de l'utilisateur fourni sur le CD-ROM avec l'utilitaire ou le site Internet de TRENDnet sur www.trendnet.com.

Enregistrez votre produit

Afin d'être sûr de recevoir le meilleur niveau de service clientèle et le meilleur support possibles, veuillez prendre le temps d'enregistrer votre produit en ligne sur: www.TRENDnet.com/register Nous vous remercions d'avoir choisi Trendnet



3. Impression

<u>Remarque:</u> Un seul utilisateur peut utiliser le serveur à la fois. Une fois qu'un utilisateur a terminer d'utiliser le serveur d'impression, un autre utilisateur peut s'en servir.





4. Faxer

<u>Remarque:</u> Un seul utilisateur peut utiliser le serveur à la fois. Une fois qu'un utilisateur a terminer d'utiliser le serveur d'impression, un autre utilisateur peut s'en servir.



5. Scannage

<u>Remarque:</u> Un seul utilisateur peut utiliser le serveur à la fois. Une fois qu'un utilisateur a terminer d'utiliser le serveur d'impression, un autre utilisateur peut s'en servir.



Q1. I inserted the Utility CD-ROM into my computer's CD-ROM Drive but the installation menu does not appear automatically. What should I do?

A1. For Windows 2000/XP, if the window does not appear automatically, click Start, click Run, and type D:\autorun.exe where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard. For Windows Vista, if the installation menu does not appear automatically, click Start, click the Start Search box, and type D:\autorun.exe where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.

Q2. The setup wizard does not detect the Print Server and/or printer/storage device. What should I do?

A2. First, double check your hardware connections; make sure that the Print Server and printer are powered ON and are properly connected. Make sure the RJ-45 network cable is securely connected to the Print Server and Switch/Router. Second, disable any software firewall programs such as ZoneAlarm or Norton Internet Security. If your computer is running Windows XP or Vista, disable the built-in firewall. Third, click Refresh. Fourth, power cycle the Print Server. Unplug the power to the Print Server, wait 15 seconds, then plug the Print Server back in.

Q3. The setup wizard does not detect my printer device. What should I do?

A3. First, make sure the printer is powered on and properly connected to the Print Server. Second, connect the printer with another USB cable. Third, reset the print server. Take a pin or paperclip and press the reset button on the print server for 15 seconds, then let go.

Q4. I am unable to print to my Print Server. What should I do?

A4. First, make sure you follow the exact steps for installing the Print Server in section 2 Second, make sure to right click on the print server in the utility and click connect. If another user is using the print server, you must wait until the user is finished using it. Third, if you are connected to the print server and are idled for a couple of minutes, a warning message appears. If you do not respond within a minute, you will be automatically disconnected from the print server. You must connect to the print server again.

Q5. I can print a test page, but I cannot print anything from Microsoft Word or other applications.

A5. Make sure to set the newly installed network printer as your default printer. Click Start and then click Printers & Faxes, verify that your printer icon has a check on it.

Q6. I configured my Print Server to automatically receive an IP Address from a DHCP server, and now I cannot go into the Print Server's web utility.

A6. Open the print server setup wizard (See 1. How to install) to locate your Print Server's IP Address.

Q7. Is there a way to force a computer to give up ownership to the print server?

A7. If the user has been idled for 5 minutes, the user will be automatically disconnected. You can also force a computer to give up ownership by unplugging the power to the print server and plug the power back in.

If you still encounter problems or have any questions regarding the **TE100-MP1UN**, please refer to the User's Guide included on the Utility CD-ROM or contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentacón necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energia electrica domiciliaria existente en el país o zona de instalación.



Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com/register

TRENDNET[®] 20675 Manhattan Place Torrance, CA 90501 USA

Copyright ©2008. All Rights Reserved. TRENDnet.