



## Quick Installation Guide



**TEW-P21G**

# Table of Contents


Español .....	1
1. Antes de iniciar .....	1
2. Cómo conectar .....	2
3. Cómo utilizar el servidor de impresora .....	3
Troubleshooting .....	7

# 1. Antes de iniciar



## Requisitos del sistema

1. Procesador Pentium a 100Mhz o superior
2. 8MB de RAM o superior
3. Windows, Linux, Mac X u otro sistema operativo.

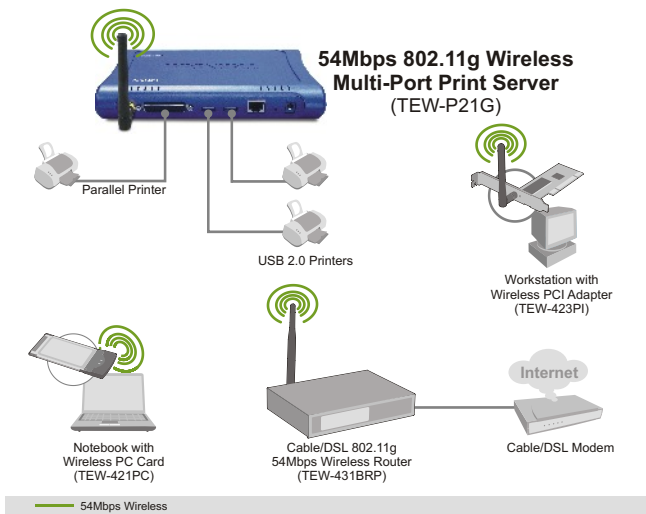

## 2. Cómo conectar


**Nota:** Por favor apague todas las impresoras antes de conectarlas al servidor de impresoras. A continuación, encienda cada impresora después de realizar todas sus conexiones de hardware.

1. Conecte la antena.

2. Conecte una impresora USB o Parallel a los puertos de impresora.

3. Conecte el cable RJ45 al puerto LAN y a su hub de red o conmutador.

4. Conecte el adaptador de corriente AC al servidor de impresora.

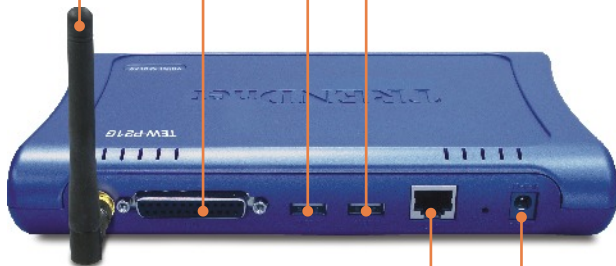

### 3. Cómo utilizar el servidor de impresora


**Nota:** Para usuarios de MAC, se debe cambiar la dirección IP de su PC a 192.168.0.X (en el que X es un número disponible del 1-253), luego introducir **192.168.0.1** en el navegador para acceder a la herramienta Web del servidor de impresora.

#### Para usuarios de Windows

1. Después de introducir el CD de instalación, haga clic en **Install Utility (Herramienta de instalación)**.




2. Siga cada paso de la instalación, y luego haga clic en **Finish (Finalizar)**.

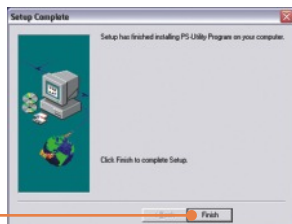

3. Haga doble clic en el icono **PS-Utility (Herramienta-PS)**.




4. Haga clic en **Change IP Address** (Cambiar dirección IP).

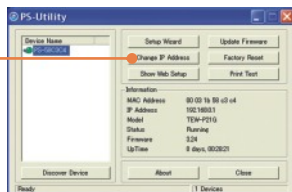

5. Seleccione **Manually Assign** (Asignar manualmente) y escriba una **IP Address** (Dirección IP) que coincida con su segmento de red actual. Haga clic en **OK**. Le aparecerá otra ventana emergente para confirmar el cambio. Haga clic en **OK**.




6. Haga clic en **Show Web Setup** (Mostrar la configuración Web) sobre la Herramienta PS. Por favor tome nota y escriba el **Nombre del servidor** y el **Nombre de la impresora**.

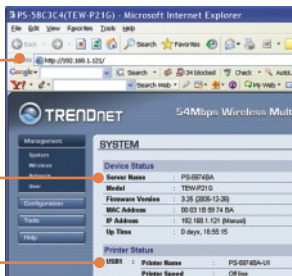


**Nota:** Si está utilizando Windows 95/98(SE)/ME, asegúrese de instalar NETBEUI antes de proseguir con las instrucciones que aparecen a continuación. Si está utilizando Windows 2000/XP, sólo tiene que añadir su impresora utilizando las instrucciones que aparecen a continuación. Para las instrucciones de impresión TCP/IP, consulte la Guía del usuario que se incluye en el CD-ROM.

7. Vaya a **Control Panel** (Panel de control) y haga doble clic en **Printers and Faxes** (Impresoras y faxes). Haga clic en **Add Printer** (Añadir impresora).

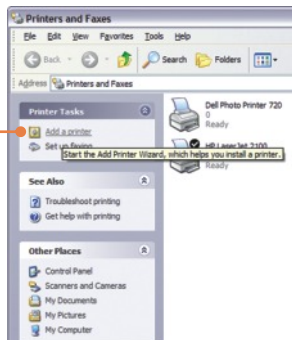


8. Después, haga clic en **Next** (Siguiente) sobre el **Add Printer Wizard** (Asistente para añadir impresora), y luego seleccione la opción de impresora de la red.

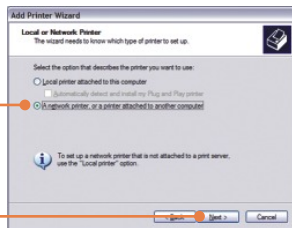


9. Seleccione **Connect to this printer** (Conectar a esta impresora) y escriba el nombre del servidor y el nombre de impresora en el siguiente formato:


`\\server_name\printer_name`  
( `\\nombre_del_servidor/nombre_de_la_impresora`)  
Haga clic en **Next** (Siguiente).

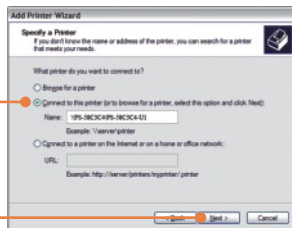

 
10. Haga clic en **OK**.



11. Seleccione el controlador apropiado para su impresora, y de spués haga clic en **Next** (Siguiente).

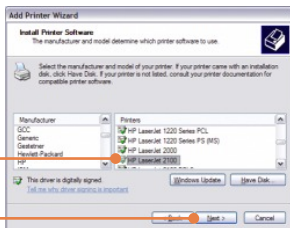

12. Seleccione **Yes** (Sí) y haga clic en **Next** (Siguiente). Luego, haga clic en **Finish** (Finalizar) para completar la instalación.

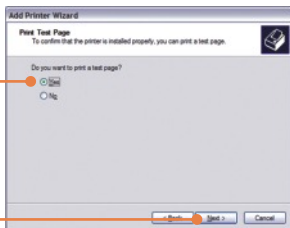

## La instalación ha sido completada

**Nota:** Para más detalles sobre las características avanzadas, por favor consulte la Guía del Usuario.



**Q1. I cannot add a network printer after I typed the server name and printer name.**

**A1.** Please double check your hardware connections. Make sure that your printer is connected properly to the print server and your power adapter is connected properly to a power outlet.

**Q2. I have double checked my hardware connections and have verified that everything is connected properly, but I still cannot connect to my printer after I typed in the server name and printer name.**

**A2.** Make sure that you are typing the correct printer name. If your USB printer is connected to the USB2 slot, then use the Printer Name that is by the USB2 heading in the web configuration utility.

**Q3. I verified that the hardware installation is correct and typed the correct printer name, but I still cannot find the network printer.**

**A3.** Make sure that the server name and printer name is entered correctly. There should be no spaces, and the back slashes that separate the server name and printer name should be this "\\", instead of this "/".

**Q4. I typed in the server name and printer name correctly and successfully installed the network printer. But I can't print a test page.**

**A4.** Make sure that the printer is online by turning the printer on. Make sure the power adapter of your printer is properly connected to a power outlet.

**Q5. I successfully added a network printer to my computer, and my printer is receiving power. I can also print a test page, but I cannot print anything from Microsoft Word or other applications.**

**A5.** Make sure to set the newly installed network printer to your default printer.

**Q6. I configured my print server to automatically receive an IP Address from a DHCP server, and now I cannot go into the print server's web utility.**

**A6.** Open PS-Utility to locate your Print Server's IP address. For MAC users, press the Reset button at the back of the TEW-P21G, hold the button for 15 seconds, release the button, and enter <http://192.168.0.1> in a web browser to access the web utility feature.

**Q7. I pressed the reset button and held it for 15 seconds. I also typed in <http://192.168.0.1> in a web browser, but I still cannot access my print server.**

**A7.** Make sure to change your IP Address to 192.168.0.xxx where xxx is an available number between 2 to 254.

**Q8. I configured my Wireless Print Server to have the same SSID as my Access Point, but I still cannot print from my Wireless Print Server.**

**A8.** Your Access Point or Wireless Router may have enabled its wireless security. You can either disable wireless security or configure the Print Server's wireless security feature. Make sure that the encryption method and password for your Wireless Printer is the SAME as your Access Point or Wireless Router. Also make sure that the format (HEX or ASCII) and the bit encryption (64-bit, 128bit, etc.) is the same.

If you have any questions regarding the TEW-P21G, please contact TRENDnet Technical Support Department.

## Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

## ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



## TRENDnet Technical Support

### US • Canada

**Toll Free Telephone:** 1(866) 845-3673

24/7 Tech Support



### Europe (Germany • France • Italy • Spain • Switzerland • UK)

**Toll Free Telephone:** +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

### Worldwide

**Telephone:** +(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

## Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

**TRENDnet**<sup>®</sup>  
20675 Manhattan Place  
Torrance, CA 90501  
USA