




Anleitung zur Schnellinstallation 

TK-803R
TK-1603R

Table of Contents

Deutsch	1
1. Bevor Sie anfangen	1
2. Installation der Hardware	2
3. Bedienung	4
Technical Specifications	7
Troubleshooting	8



Package Packungsinhalt

- TK-803R/TK-1603R
- Mehrsprachige Installationsanleitung
- Montagesatz für Gestell
- Netzteil (9V DC, 1A)

Systemanforderungen

- PS/2-oder USB-Tastatur
- PS/2- oder USB-Maus
- VGA-kompatibler Monitor
- USB/ VGA KVM-Kabels (z.B. TK-CU06, TK-CU10, TK-CU15)
- Windows 98SE/ME/2000/XP/2003 Server/Vista, Linux und Mac

2. Installation der Hardware

1. Schalten Sie alle Computer und Peripheriegeräte aus und trennen Sie alle Stromversorgungskabel ab.

2. Verbinden Sie die gemeinsam genutzte PS/2- bzw. USB-Tastatur, den Monitor und die PS/2- bzw. USB-Maus mit dem **Konsolen-Port** des KVM-Umschalters. (im Bild: TK-1603R)



3. Verbinden Sie das beiliegende Netzteil mit dem KVM-Umschalter und stecken Sie es in eine Steckdose.



4. Verbinden Sie die Computer über die KVM-Kabel mit dem KVM-Umschalter.



5. Schalten Sie die miteinander verbundenen Computer nacheinander ein und warten Sie, bis die Computer vollständig hochgefahren sind.



PC 1, 2, 3, 4, 5, 6, 7, 8 (TK-803R)
PC 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12,
13, 14, 15, 16 (TK-1603R)

ENGLISH

FRANÇAIS

DEUTSCH

ESPAÑOL

РУССКИЙ

Montage in Gestell

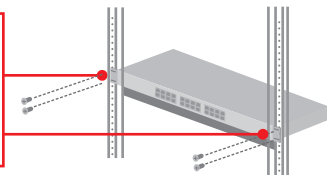 
Der Umschalter lässt sich in ein standardmäßiges 19-Zoll EIA-Gestell einbauen, das seinerseits gemeinsam mit anderen Geräten in einen Kabelschrank montiert werden kann.

Hinweis: Wenn Sie den KVM-Umschalter auf ein EIA-19"-Gestell montieren wollen, befestigen Sie die beiliegenden Montageklammern mit den Schrauben an den Seiten des KVM-Umschalters und bringen Sie den Umschalter dann mit Hilfe der Ausrüstungen des Gestellproduzenten am Gestell an.

1. Bringen Sie die Befestigungsbügel mit den mitgelieferten Schrauben an beiden Seiten des Umschalters an.



2. Setzen Sie den Umschalter sorgfältig in das Gestell ein. Richten Sie den Bügel an den Schraubenlöchern im Gestell aus und befestigen Sie den Umschalter mit den zum Gestell gehörenden Schrauben.



Ihre Installation ist beendet!

Registrieren Sie Ihr Produkt

Nehmen Sie sich bitte einen Moment Zeit und registrieren Sie Ihr Produkt online, so dass Sie unsere umfassenden Support- und Kundendienstleistungen in Anspruch nehmen können: www.trendnet.com/register

Vielen Dank für den Kauf eines TRENDnet-Produkts

Hinweis: Um von einem Computer zum anderen zu wechseln, können Sie Tastenkombinationen.

LED-Anzeigen

Rote LED leuchtet: Das KVM-Kabel ist angeschlossen, der KVM-Umschalter wird vom PC angesteuert.

Grüne LED leuchtet: Der ausgewählte PC-Anschluss ist aktiv, unabhängig davon, ob der Computer ein- oder ausgeschaltet ist.



Drucktasten

Drücken Sie auf eine Taste, um zu einem anderen Computer umzuschalten.

Tastenkombinationen

 

Eine Tastenkombination setzt sich aus drei Tasten zusammen:

Tastenkombination = Scroll Lock (ROLLEN) + Scroll Lock (ROLLEN) + Befehlstaste(n)




Sobald Sie die Scroll Lock-Taste (ROLLEN-Taste) gedrückt haben, müssen Sie die Taste innerhalb von 2 Sekunden nochmals drücken. Innerhalb der nächsten 2 Sekunden müssen Sie dann eine Befehlstaste drücken. Wenn Sie innerhalb von 2 Sekunden keine Taste drücken, wird die Tastenkombination nicht wirksam.

Auswahl eines bestimmten PC-Anschlusses:

 

 
Für TK-803R

nur PC-Kanal auswählen=  +  + 


 


Um am TK-803R z.B. Anschluss 1 auszuwählen, drücken Sie bitte:

nur PC-Kanal auswählen=  +  + 


 


Für TK1603R

nur PC-Kanal auswählen=  +  +  + 

Um am TK-1603R z.B. Anschluss 1 auszuwählen, drücken Sie bitte:

nur PC-Kanal auswählen =  +  +  + 

Um am TK-1603R Anschluss 10 auszuwählen, drücken Sie bitte:

nur PC-Kanal auswählen =  +  +  + 

Mac-Benutzer

Zuordnung der Standard-PC-Tastatur zur Mac-Tastatur:

 +  +  =  CD/DVD drive eject key

 
 
 +  +  = 

 +  +  = 

 +  +  = 

In der folgenden Übersicht finden Sie eine Zusammenfassung aller Tastenkombinationen.

Schnellübersicht für denTK-803R/TK-1603R

Befehl	Tastenkombination	Drucktasten auf der Frontplatte	Beschreibung
Nur PC-Kanal auswählen	TK-803R Scroll Lock + Scroll Lock + Y TK-1603R Scroll Lock + Scroll Lock + Y + Z (YZ)= 2-stellige Kanalnummer	Wenn Sie auf eine Taste drücken, wechseln Sie zum entsprechenden Anschluss	Wählt den aktiven PC-Kanal aus
Unmittelbar darunter liegender Kanal	Scroll Lock + Scroll Lock +  (Pfeil nach oben)	- - -	Wählt den unmittelbar darunter liegenden PC-Kanal aus
Unmittelbar darüber liegender Kanal	Scroll Lock + Scroll Lock +  (Pfeil nach unten)	- - -	Wählt den unmittelbar darüber liegenden PC-Kanal aus
Signalton für Autoscan Ein/Aus	Scroll Lock + Scroll Lock + B	- - -	Schaltet den Signalton während der automatischen Abfrage ein/aus
Maus/Tastatur zurücksetzen	Scroll Lock + Scroll Lock + END	- - -	Richtet Maus/Tastatur neu ein
Einstellungen auf Herstellerstandard zurücksetzen	Scroll Lock + Scroll Lock + R	- - -	Stellt die Einstellungen auf Herstellerstandard zurück
Schnell taste festlegen (Standard = ROLLEN + ROLLEN)	Scroll Lock + Scroll Lock + H + Y Y = ROLLEN, Feststelltaste, Esc, F12 oder NUM	- - -	Wählt die Schnell taste aus 5 möglichen Optionen aus
Autoscan	Scroll Lock + Scroll Lock + S	- - -	Fragt zur schnellen Durchsicht der Bildschirm anzeigen automatisch alle verbundenen Kanäle ab
Autoscan mit programmierbarer Verweilzeit	Scroll Lock + Scroll Lock + S + X (X) = 0-9 1 = 10 Sekunden 2 = 20 Sekunden 3 = 30 Sekunden 4 = 40 Sekunden 5 = 50 Sekunden 6 = 60 Sekunden 7 = 70 Sekunden 8 = 80 Sekunden 9 = 90 Sekunden 0 = 100 Sekunden	- - -	Springt zur schnellen Durchsicht der Bildschirm anzeigen nach jeweils x Sekunden zum nächsten verbundenen Kanal weiter
Autoscan beenden	Press any key on keyboard	Drücken Sie eine beliebige Taste	Beendet die automatische Abfrage

Hinweis: Falls Sie eine andere Schnell taste festgelegt haben (z.B. Feststelltaste, Esc, F12), müssen Sie statt ROLLEN diese Taste drücken. Wenn Sie zum Beispiel den Piepton ausschalten wollen und als Schnell taste F12 definiert haben, drücken Sie also F12 + F12 + B.

Technical Specifications

Management:	TK-803R: 8 computers TK-1603R: 16 computers
Console Port Connectors:	1 x USB keyboard Type A 1 x USB mouse Type A 1 x PS/2 keyboard 6-pin mini din female 1 x PS/2 mouse 6-pin mini din female 1 x VGA HDB 15-pin female
PC Port Connectors:	TK-803R: 8 x VGA HDB 15-pin female TK-1603R: 16 x VGA HDB 15-pin female
Video Resolution:	2048 x 1536
Port Selection:	Push Button and Hot Key Commands
LED:	Per Port : PC Link (Green) ; PC Active (Red)
Keyboard Status:	Save and restore
Auto-Scan Intervals:	10 ~ 100 seconds
Power:	PS/2 Interface Power USB Interface Power External AC Power Adapter : 9V DC, 1A
Size (19" Rack mount):	1U
Dimensions:	405 x 163 x 44 mm (15.94 x 6.42 x 1.74 in.)
Weight:	TK-803R : 1.84 kg (4.05 lbs) TK-1603R : 2.04 kg (4.5 lbs)
Operating Temperature:	0°C ~ 40°C (32°F ~104°F)
Storage Temperature:	-20°C ~ 60°C (-4°F ~ 140°F)
Humidity:	0%~90%, Non-Condensing
Certifications:	FCC and CE

Do I need to use the included external AC adapter?

It is recommended that you use the included external AC adapter with the TK-803R/TK-1603R KVM switch.

I have the KVM switch connected properly, but my USB keyboard and mouse don't work.

1. Make sure your USB port is working properly by testing it with your other USB devices.
2. Once you confirm that the USB port is functional, please reboot your computers, and try to use the KVM switch again.
3. If your computer is running Windows 98SE, you may need to download and install the USB hot fix.

Please go to this link for download and installation instructions:

<http://support.microsoft.com/kb/q240075>. Once the hot fix is installed, follow the installation instructions in Section 2.

Can I connect or disconnect the KVM cables while the computers are turned on?

Yes, you can connect or disconnect the KVM cables while the computers are turned on, because the interface is Hot-Pluggable.

Will the KVM switch restore the keyboard settings when switching between computers?

Yes, the KVM switch will restore the keyboard settings when switching between computers. (i.e.: Caps Lock, Num Lock, etc.)

How do I switch from one computer to another with the KVM switch?

You can switch PCs by pressing the push button on the KVM switch or by using the Hot Key commands. Go to Section 3 Operation for more information.

How to upgrade new firmware to my KVM switch?

Please go to the TRENDnet website (www.trendnet.com) to check if there is a new firmware available for your KVM switch and follow the installation procedure to perform the update.

If you still encounter problems or have any questions regarding the **TK-803R/TK-1603R** please contact TRENDnet's Technical Support Department.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-803R/TK-1603R - 2 Years Limited Warranty AC/DC Power Adapter, Cooling Fan and Power Supply carry a 1 year limited warranty

If a product does not operate as warranted during the applicable warranty period, TRENDnet shall reserve the right, at its expense, to repair or replace the defective product or part and deliver an equivalent product or part to the customer. The repair/replacement unit's warranty continues from the original date of purchase. All products that are replaced become the property of TRENDnet. Replacement products may be new or reconditioned. TRENDnet does not issue refunds or credit. Please contact the point-of-purchase for their return policies.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet within the applicable warranty period and providing a copy of the dated proof of the purchase. Upon proper submission of required documentation a Return Material Authorization (RMA) number will be issued. An RMA number is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA number marked on the outside of return packages and sent to TRENDnet prepaid, insured and packaged appropriately for safe shipment. Customers shipping from outside of the USA and Canada are responsible for return shipping fees. Customers shipping from outside of the USA are responsible for custom charges, including but not limited to, duty, tax, and other fees.

WARRANTIES EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

Some TRENDnet products include software code written by third party developers. These codes are subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL").

Go to <http://www.trendnet.com/gpl> or <http://www.trendnet.com> Download section and look for the desired TRENDnet product to access to the GPL Code or LGPL Code. These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not provide technical support for these codes. Please go to <http://www.gnu.org/licenses/gpl.txt> or <http://www.gnu.org/licenses/lgpl.txt> for specific terms of each license.

PWP05202009v2

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDnet's website at <http://www.trendnet.com/register>