



Guia de Instalação Rápida

TK-200K
TK-400K

Português	1
1. Antes de Iniciar	1
2. Como instalar	2
3. Operação	4
Especificações	21
Troubleshooting	22

1. Antes de Iniciar




Conteúdo da Embalagem

- TK-200/TK-400
- Guia de Instalação Rápida
- Cabos KVM

Requisitos do Sistema

- PS/2 Teclado
- PS/2 Mouse
- Monitor VGA Compatível
- Windows 98SE/ME/2000/XP(SP1/SP2)/2003 server, Unix e Linux

Aplicação

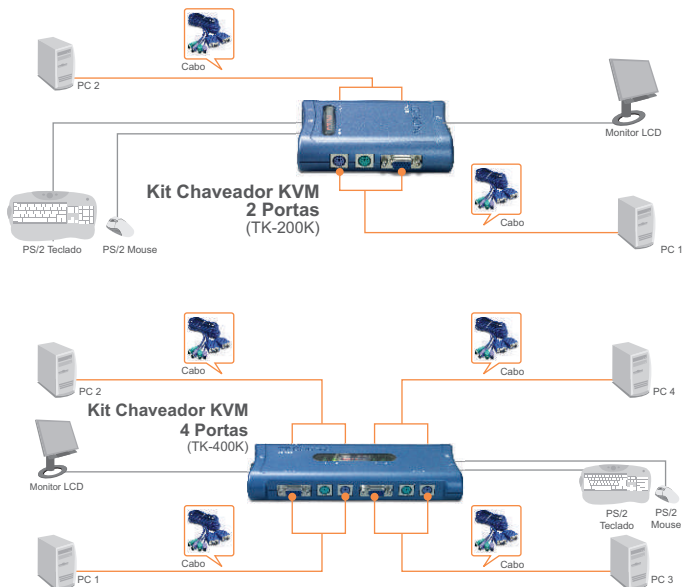

2. Como instalar

Nota: O TK-200K/TK-400K não requer nenhum driver ou software.

1. Desligue todos os computadores e seus periféricos e então desconecte todas as tomadas.



2. Use os cabos KVM para conectar cada computador ao Chaveador KVM.



3. Conecte o teclado, monitor e mouse compartilhados às suas respectivas portas no Chaveador KVM.



8. Ligue os computadores conectados um por um e aguarde até que cada computador apareça.



Sua instalação agora está completa.

Nota: Não pressione nenhum botão do Chaveador KVM ou digite qualquer comando "Hot-Key" enquanto os computadores estão ligando. Vá para Seção 3 Operação.

3. Operação

Nota: Para chavear entre computadores, você pode usar o push button do painel frontal ou comandos hot-key.

3.1 Push Button

Pressione o Push Button para alternar entre computadores

Push Button. (TK-200 exibido)



3.2 Comandos Hot-Key

Um comando hot-key de teclado consiste de três teclas:

Comando Hot-Key = ScrLk + ScrLk + Tecla(s) Comando

Após pressionar a tecla ScrLk, você tem dois segundos para pressionar a tecla ScrLk novamente. A seguir, você tem mais dois segundos para pressionar a tecla de comando. Se você não pressionar uma tecla em dois segundos, o chaveador sairá do modo hot-key.

Abaixo estão os comandos “Hot-Key”:

ScrLk + ScrLk +  = Canal Anterior

ScrLk + ScrLk +  = Próximo Canal

ScrLk + ScrLk +  = Auto Scan

Em modo Hot-Key, pressione a “Seta para Cima” para selecionar a porta anterior, “Seta para Baixo” para selecionar a porta seguinte e tecla “S” para configurar o Chaveador KVM no modo Auto-Scan.

Computadores Conectados:	2 (TK-200) ou 4 (TK-400)
Cabo KVM:	TK-200K: 2 conjuntos de cabos KVM Alta Qualidade 1.2 m (4 ft) TK-400K: 4 conjuntos de cabos KVM Alta Qualidade 1.8 m (6 ft)
Conectores da Porta Console:	1 PS/2 teclado 6 pinos mini din fêmea 1 PS/2 mouse 6 pinos mini din fêmea 1 VGA HDB15 (15 pinos) fêmea
Conectores de Porta PC:	<u>TK-200K:</u> 2 PS/2 teclados 6 pinos mini din fêmea 2 PS/2 mouses 6 pinos mini din fêmea 2 VGA HDB15 (15 pinos) fêmea <u>TK-400K:</u> 4 PS/2 teclados 6 pinos mini din fêmea 4 PS/2 mouses 6 pinos mini din fêmea 4 VGA HDB15 (15 pinos) fêmea
Resolução VGA:	1920 x 1440
Seleção de Porta:	Push-Button e Comandos Hot-Key
Intervalos de Auto-Scan:	4 segundos
Tipo de Alimentação:	Alimentação Interface PS/2. Adaptador Opcional 5 V ~ 9 VDC, 500 mA ~ 1 A
Dimensões:	TK-200: 113 x 84 x 31 mm (4.45 x 3.31 x 1.22 polegadas) TK-400: 192 x 81 x 31 mm (1.56 x 3.19 x 1.22 polegadas)
Peso:	Aprox. 155g. (5.5 Oz.) (TK-200K) Aprox. 240g. (8.5 Oz.) (TK-400K)
Temperatura de Operação:	0°C a 40°C (32°F a 104°F)
Temperatura de Armazenamento:	-20°C a 60°C (-4°F a 140°F)
Umidade:	0% a 80%, Sem Condensação
Certificados:	FCC e CE

Q1: Onde está o adaptador de tensão? Eu não encontrei na embalagem.

A1: O TK-400K não requer adaptador de tensão. O dispositivo se alimenta das conexões PS/2 de seus computadores. Desde que você esteja conectado a porta PS/2, seu chaveador KVM funcionará.

Q2: Meu Chaveador KVM está corretamente conectado, mas meus teclado e mouse não funcionam.

A2: Certifique-se de que suas portas PS/2 estão funcionando adequadamente testando-as com outro mouse ou teclado. Uma vez confirmado o funcionamento das portas PS/2, favor reiniciar seu computador e tentar usar o Chaveador KVM novamente.

Q3: Eu posso conectar e desconectar os cabos PS/2 enquanto os computadores estiverem ligados?

A3: Sim, você pode conectar ou desconectar os cabos KVM enquanto os computadores estiverem ligados porque a interface é Hot-Pluggable.

Q4: O chaveador KVM restaura as configurações de teclado quando se alterna entre computadores?

A4: Sim, o chaveador KVM irá restaurar as configurações de teclado entre computadores, como "Caps Lock", tecla "Num", etc.

Q5: Como eu alterno entre um computador e outro com o Chaveador KVM?

A5: Você pode alternar entre PCs pressionando o botão "Push Button" do chaveador KVM ou usando os comandos Hot-Key. Vá para a Seção 3 – Operação, para mais informações.

Se você ainda encontrar problemas ou tiver alguma pergunta referente ao TK-200K/TK-400K favor entrar em contato com o Departamento de Suporte Técnico da Trendnet.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-200K/TK-400K - 2 Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDnet NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDnet'S PRODUCTS.

TRENDnet SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDnet'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 Year Warranty



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673
24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67
English/Espanol - 24/7
Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35
English/Espanol - 24/7
Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet
3135 Kashiwa Street
Torrance, CA 90505
USA