



Quick Installation Guide



TK-205K

Table of Contents

Español	1
1. Antes de iniciar	1
2. Cómo se instala	2
3. Funcionamiento	3
Specifications	5
Troubleshooting	6

1. Antes de iniciar




Contenidos del paquete

- TK-205
- Guía de instalación rápida
- Cables KVM (dos)

Requisitos del sistema

- Teclado PS/2
- Ratón PS/2
- Monitor compatible VGA
- Windows XP/2000/ME/98SE, Netware, Unix y Linux

Aplicación

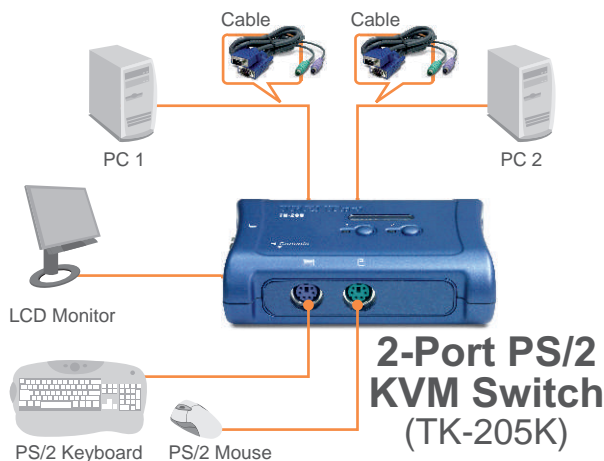

2. Cómo se instala


Nota: El conmutador TK-205 PS/2 KVM no requiere de ningún controlador o software.

1. Apague todos los PCs y sus periféricos, luego desconecte todos los cables de alimentación.

2. Conecte el teclado, monitor y ratón compartidos al Console Port (Puerto de consola) del conmutador KVM.



3. Utilice los cables KVM para conectar cada PC al conmutador KVM.

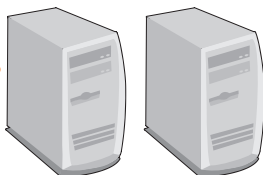

4. Encienda los PCs conectados uno por uno y espere hasta que aparezca el escritorio de cada PC.

La instalación ha sido completada

3. Funcionamiento

Nota: Para la conexión entre PCs, se pulsán los botones del panel frontal o comandos "Hot-Key".

3.1 Pulsar botones

Pulse el botones correspondiente para seleccionar su PC.



3.2 Comandos Hotkey

Un comando hotkey del teclado consiste en pulsar tres teclas:


Comando Hotkey = ScrLk + ScrLk + Tecla(s) de comando

Después de pulsar la tecla ScrLk, dispone de 2 segundos para pulsar la tecla ScrLk otra vez. Ahora dispone de 2 segundos para presionar una tecla de comando. Si usted no pulsa una tecla en el plazo de 2 segundos, el conmutador saldrá del modo hotkey.

Hoja de referencia rápida para el TK-205

Comando	Hotkeys	Descripción
Seleccione PC	ScrLk + ScrLk + X (x es una tecla de número de la primera línea) x = 1 ~ 2 para el número de canal de la PC	Seleccione el canal PC activo.
Próximo canal PC superior	ScrLk + ScrLk + ↑ (flecha arriba)	Seleccione el próximo canal PC superior conectado.
Próximo canal PC inferior	ScrLk + ScrLk + ↓ (flecha abajo)	Seleccione el siguiente canal PC inferior conectado.
Auto-exploración	ScrLk + ScrLk + S	Auto-exploración a través de cada canal para una rápida lectura en pantalla de cada canal.
Detener Auto-exploración	Press any key on keyboard	Finalizar actividad de Auto-exploración.

Convención Hotkey:

La pulsación de la tecla hotkey  indica que debe pulsar la tecla individual consecutivamente una después de otra, no simultáneamente.

Specifications

Computer Connections	2
KVM Cable	2 Sets of 1.2M (4ft) KVM Cables
Cable Interface (all male)	To Console: 1 x VGA/SVGA HDB 15-pin To PC: 1 x PS/2 Mouse 6-pin Mini Din 1 x PS/2 Keyboard 6-pin Mini Din 1 x VGA/SVGA HDB 15-pin
Console Connectors (all female)	Mouse: PS/2 6-pin Mini Din Keyboard: PS/2 6-pin Mini Din Monitor: VGA/SVGA HDB 15-pin
Port Selection	Push Button or Hot-Key Commands
Auto-Scan Interval	10 seconds
Keyboard State	Saved and restored
Power Supply	Bus-Powered
Dimensions	95 x 65 x 30 mm (3.7 x 2.6 x 1.2 in.)
Weight	85g (3oz)
Operating Temperature	0° ~ 40°C (32° ~ 104° F)
Storage Temperature	-20° ~ 60°C (-4° ~ 140° F)
Humidity	0%-80%, Non-Condensing
Certifications	CE, FCC

Q1: Where is the AC adapter? I did not find one in the box.

A1: The TK-205 does not require an AC adapter. It draws power from your computer's keyboard port. As long as your KVM switch is connected to the keyboard port, it will receive the necessary power to function.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your PS/2 ports are working properly by testing it with another mouse or keyboard. Once you confirm that the PS/2 ports are functional, please reboot your computers, and try to use the KVM switch again.

Q3: Can I connect or disconnect the KVM cables while the computers are turned on?

A3: Yes, you can connect or disconnect the KVM cables while the computers are turned on, because the interface is Hot-Pluggable.

Q4: Will the KVM switch remember the keyboard settings between computers?

A4: Yes, the KVM switch will remember the keyboard settings when switching between your computers. (i.e.: Caps lock, Num key, etc.)

Q5: How do I switch from one computer to another with the KVM switch?

A5: Because the TK-205 KVM switch supports Hot-Key commands, you can use Hot-Key commands to switch between 2 computers.

If you still encounter problems or have any questions regarding the TK-205K, please contact Trendnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-205K - 2 Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDnet NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDnet'S PRODUCTS.

TRENDnet SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDnet'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 Year Warranty



TRENDnet

TRENDnet Technical Support

US/Canada Support Center

Contact

Telephone: 1(866) 845-3673

Email: support@trendnet.com

Tech Support Hours

24/7 Toll Free Tech Support



European Support Center

Contact**Telephone:**

Deutsch : +49 (0) 6331 / 268-460

Français : +49 (0) 6331 / 268-461

0800-90-71-61 (numéro vert)

Español : +49 (0) 6331 / 268-462

English : +49 (0) 6331 / 268-463

Italiano : +49 (0) 6331 / 268-464

Dutch : +49 (0) 6331 / 268-465

Fax: +49 (0) 6331 / 268-466

Tech Support Hours

8:00am - 6:00pm

Middle European Time

Monday - Friday

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

3135 Kashiwa Street

Torrance, CA 90505

USA