

PS/2 KVM Switch General Quick Reference Sheet

Command	Hot Keys	Front Panel Button	Description
Select computer	Scroll Lock + Scroll Lock + X (x) = 1~ 2 for PC channel (TK-205K/TK-208K) (x) = 1 ~ 4 for PC channel (TK-400K/TK-408K)	Press any push button.	Select the active computer channel.
Next higher Computer channel	Scroll Lock + Scroll Lock + ↑	Press Push Button for a specific port on the switch	Select the next higher available computer.
Next lower Computer channel	Scroll Lock + Scroll Lock + ↓	Press Push Button for a specific port on the switch	Select the next lower computer.
Autoscan	Scroll Lock + Scroll Lock + S	—	Autoscan through every connected channel for quick screen browsing of each channel (scan delay = 10 seconds).
Stop Autoscan	Press any key on keyboard	Press any push button or key.	Terminate Autoscan activity.
Console Mouse / Keyboard Reset	Scroll Lock + Scroll Lock + END	—	Reset mouse/keyboard on the console side. (works on non-PnP OS only)

Speaker/Microphone Quick Reference Sheet (TK-208K/ TK-408K only)

Command	Hot Keys	Front Panel Button	Description
Select Audio/Microphone	Scroll Lock + Scroll Lock + (Fx) (Fx is a function key) Fx = F1 ~ F4 F1 = Computer 1's audio/microphone channel F2 = Computer 2's audio/microphone channel F3 = Computer 3's audio/microphone channel F4 = Computer 4's audio/microphone channel	—	Select the desired Audio/Microphone channel
Bind Computer & Audio / Microphone Switching	Scroll Lock + Scroll Lock + Q	—	Bind Audio/Microphone to computer port switching. (Default Setting)
UnBind Computer & Audio / Microphone Switching	Scroll Lock + Scroll Lock + W	—	Unbind Audio/Microphone to computer port switching.

Note: The hotkey sequence **Scroll Lock** + **Scroll Lock** + **(Key)** denotes that you should hit the individual key consecutively one at a time, not simultaneously.