



Quick Installation Guide



TK-208K
TK-408K

Table of Contents

Français	1
1. Avant de commencer	1
2. Comment effectuer les connexions	2
3. Fonctionnement	4
Troubleshooting	6

1. Avant de commencer




Contenu de l'emballage

- TK-208/TK-408
- Guide d'installation rapide
- 2 ensembles (TK-208) ou 4 ensembles (TK-408) de câbles KVM
- 2 ensembles (TK-208) ou 4 ensembles (TK-408) de câbles Audio/Microphone

Configuration du système

- Clavier PS/2
- Souris PS/2
- Moniteur compatible VGA ou SVGA
- Microphone et prises pour diffuseurs (en supplément)
- Windows 98SE/ME/2000/XP/2003 Server/Vista, Linux

Application

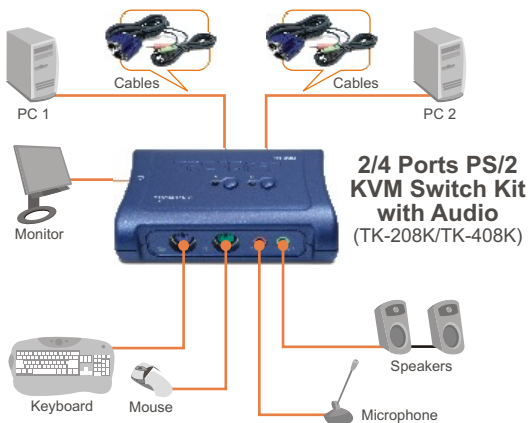

2. Comment effectuer les connexions

Remarque: Le Switch KVM TK-208/TK-408 ne nécessite aucun pilote ni logiciel.

1. Eteignez les deux PC et leurs périphériques et débranchez tous les cordons d'alimentation.

2. Branchez le **Moniteur, le clavier, la souris** (en supplément) **et les diffuseurs** (en supplément) partagés aux ports consoles du Switch KVM.

3. Utilisez les câbles audio et KVM fournis pour brancher votre PC au Switch KVM.

4. **Allumez** le premier ordinateur et attendez qu'il soit entièrement démarré.



Câbles KVM

Câbles Audio



TK-208



TK-408

PC




PC 1

5. Appuyez sur le bouton du panneau frontal du Switch KVM pour sélectionner le deuxième ordinateur. (en supplément)



6. Allumez le deuxième ordinateur et attendez qu'il soit entièrement démarré.

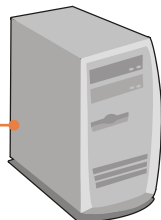

PC 2 (TK-208)
PC2, PC 3, PC4 (TK-408)

L'installation est maintenant complète.

Enregistrez votre produit

Afin d'être sûr de recevoir le meilleur niveau de service clientèle et le meilleur support possibles, veuillez prendre le temps d'enregistrer votre produit en ligne sur:

www.TRENDnet.com/register

Nous vous remercions d'avoir choisi Trendnet

3. Fonctionnement

Remarque: Pour passer d'un PC à l'autre, vous pouvez utiliser les boutons du panneau frontal du Switch KVM, une séquence de touches de raccourci à l'aide du clavier.

Boutons du panneau frontal

Appuyez sur le bouton correspondant du panneau frontal afin de sélectionner votre PC.



Séquences de touches de raccourci

Après avoir appuyé sur la touche ScrLk, vous disposez de 2 secondes pour appuyer à nouveau sur cette dernière. Si vous n'enfoncez aucune touche dans les deux secondes, le mode « accès rapide » est annulé.

Remarque



1. Les commandes de raccourci ne fonctionnent qu'avec les touches numériques de la rangée supérieure.
2. Lorsque la liaison des permutations de ports PC et Audio/Micro est activée par un raccourci clavier, toutes les permutations PC et Audio/Micro sont reliées.
3. Pour les systèmes d'exploitation non PnP (Linux, Windows NT 4.0), veuillez utiliser les commandes suivantes pour réinitialiser les paramètres de la souris.

2-key mouse setting: + + +

 
3-key wheel mouse setting: + + +

5-key wheel mouse setting: + + +

Références rapides pour le TK-208/TK-408

Commande	Combinaison de touches	Description
Sélection du PC	ScrLk + ScrLk + X <small>x = 1 – 2 pour le numéro du canal PC</small>	Sélectionne le canal PC actif.
Sélection du canal Audio/Micro	ScrLk + ScrLk + FX <small>(Fx est une touche de fonction) FX = F1-F4</small>	Sélection du canal Audio/Microphone actif
Lien entre la permutation PC et Audio/Micro	ScrLk + ScrLk + Q	Permet de relier la permutation des ports PC et des ports Audio/Microphone
Suppression du lien entre la permutation PC et Audio/Micro	ScrLk + ScrLk + W	Supprime la connexion de la permutation des ports PC et des ports Audio/Microphone
Réinitialisation des commandes souris/clavier	ScrLk + ScrLk +  <small>(Flèche haut)</small>	Sélectionnez le prochain ordinateur supérieur disponible
Canal PC supérieur suivant	ScrLk + ScrLk +  <small>(Flèche bas)</small>	Sélectionnez le prochain ordinateur inférieur disponible.
Réinitialisation des commandes souris/clavier	ScrLk + ScrLk + End	Réinitialise la souris et le clavier côté PC. (fonctionne exclusivement sur un système d'exploitation non PnP)
Recherche automatique	ScrLk + ScrLk + S	Recherche automatique parmi tous les canaux pour un aperçu rapide à l'écran de chaque canal. (chaque scan = 10 secondes)
Arrêt de la recherche automatique	Press any key on keyboard	Met fin à la recherche automatique.

Convention concernant les touches de raccourci:

La séquence  signifie que vous devez enfoncer chaque touche consécutivement et non simultanément.

Q1: Where is the power supply? I did not find one in the box.

A1: The TK-208/TK-408 does not require a power supply. It draws power from your computer's keyboard connection. As long as your KVM switch is connected to the keyboard port, it will receive the necessary power to function.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your PS/2 ports are working properly by testing it with another mouse or keyboard. Once you confirm that the PS/2 ports are functional, please reboot your computers, and try to use the KVM switch again.

Q3: Can I connect and disconnect the USB cables while the computers are turned on?

A3: Yes, you can connect or disconnect the KVM cables while the computers are turned on, because the KVM switch is Plug-and-Play and Hot-Pluggable.

Q4: Will the KVM switch remember the keyboard settings between computers?

A4: Yes, the KVM switch will remember the keyboard settings when switching between your computers. (i.e.: Caps Lock, Num Lock, etc.)

Q6: How do I switch from one computer to another with the KVM switch?

A6: You can switch computers by pressing the Push Buttons on the KVM switch, or by using the "Hot-Key" commands. Refer to Section 3 Operation for more information.

If you still encounter problems or have any questions regarding the TK-208K/TK-408K, please contact TRENDnet's Technical Support Department.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-208K/TK-408K - 2-Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDnet NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDnet'S PRODUCTS.

TRENDnet SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDnet'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, Cables and Power Supply carry a 1 Year Warranty

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673

24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet[®]

20675 Manhattan Place
Torrance, CA 90501
USA