



Quick Installation Guide



TK-210K

Table of Contents

Español	1
1. Antes de iniciar	1
2. Cómo se instala	2
3. Operación	4
Troubleshooting	7

1. Antes de iniciar



Contenidos del paquete

- TK-210
- 2 juegos de cable KVM
- 2 juegos de cable USB
- 2 juegos de cable audio
- Base

Requisitos del sistema

- Monitor compatible VGA o SVGA
- Enchufes para micrófono y altavoces (opcional)
- Windows 98SE/ME/2000/XP/2003/Vista, Linux y Mac O.S.

Aplicación



2. Cómo se instala

1. Apague ambos PCs y sus periféricos, y desconecte todos los cables de alimentación.

2. Conecte el dispositivo USB (opcional), el micrófono (opcional) y el altavoz (opcional) al conmutador KVM.

3. Conecte el teclado compartido PS/2, monitor y ratón PS/2 al puerto consola del conmutador KVM.

4. Utilice los cables KVM y audio suministrados para conectar su PC al conmutador KVM.

5. Encienda el primer PC y espere hasta que se inicie por completo.




PC 1

6. Presione el botón del panel frontal del conmutador KVM para seleccionar el segundo PC.



7. Encienda el segundo PC y espere hasta que se inicie por completo.

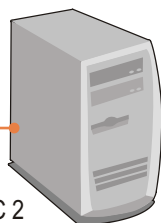

PC 2

La instalación ha sido completada

Registre su producto

Para asegurar los más altos niveles de servicio y apoyo al cliente, registre su producto en línea en: www.trendnet.com/register

Gracias por elegir TRENDnet

3. Operación

Nota: Para la conmutación del PC, puede usar los botones del panel frontal del conmutador KVM, una secuencia de comandos hot-key vía teclado.

Botones del panel frontal

Presione el botón del panel frontal correspondiente para seleccionar su PC o dispositivo USB.



Comandos Hot-key

Un comando hotkey del teclado consiste en pulsar tres teclas:

Comando Hotkey = ScrLk + ScrLk + Tecla(s) de comando

Después de pulsar la tecla ScrLk, dispone de 2 segundos para pulsar la tecla ScrLk otra vez. Ahora dispone de 2 segundos para presionar una tecla de comando. Si usted no pulsa una tecla en el plazo de 2 segundos, el conmutador saldrá del modo hotkey.

Nota:

1. El comando Hotkey sólo funciona con las teclas numéricas de la parte superior del teclado.
2. Se requiere un teclado PS/2 para que la característica hotkey pueda funcionar de manera correcta. Si utiliza un teclado USB, se desactiva la característica hotkey.
3. Cuando la unión de la conmutación de puertos de PC, hub USB y audio/micro se activa con la secuencia hotkey, cualquier conmutación de puertos PC, hub USB y audio/micro estarán unidos.
4. Para sistemas operativos no-PnP (Linux, Windows NT 4.0), utilice por favor los siguientes comandos para reiniciar la configuración del ratón.

Ajuste del ratón de 2 teclas:



Ajuste del ratón con rueda y 3 teclas:



Ajuste del ratón con rueda y 5 teclas:



Hoja de referencia rápida para el TK-210

Comando	Teclas Hotkeys	Botones del panel	Descripción
Seleccionar sólo canal de PC	(x es una tecla de número de la primera fila) x = 1 ~ 2 para el número de canal de la PC.	Pulse el botón de la PC para cambiar el canal de PC.	Selecciona el canal activo x de la PC. (Si "binding" está habilitado, selecciona el puerto tanto de la PC como del hub USB)
Selección del puerto del hub	(Fx es una tecla de función) Fx = F1 ~ F2	Pulse el botón USB para alternar el puerto del hub USB.	Selecciona el puerto activo USB del hub. (Si "binding" está habilitado, selecciona el puerto tanto de la PC como del hub).
Enlazamiento de la conmutación de puerto entre PC y Hub.		- - -	Habilita el enlace de conmutación de puerto de la PC y el hub. (Una vez activada esta característica, se enlaza la conmutación de puerto entre cualquier PC y/o hub)
Desactiva el enlace de conmutación de puerto entre PC & hub.		- - -	Deshabilita el enlace de conmutación de puerto entre PC & hub. (predefinido por el fabricante)
Canal próximo inferior	(flecha arriba)	- - -	Selecciona el canal próximo inferior conectado. (Si "binding" está habilitado, selecciona el puerto tanto de la PC como del hub)
Canal próximo superior	(flecha abajo)	- - -	Selecciona el canal próximo superior conectado. (Si "binding" está habilitado, selecciona el puerto tanto de la PC como del hub)
Sonido de aviso On/Off		- - -	Activa/desactiva el sonido de aviso para la confirmación de Hot-Keys y conmutación de puertos.
Autoscan (Escaneeo automático)		- - -	Escaneeo todos los canales conectados para consultarlos (dura 10 segundos).
Detener Autoscan		Pulse cualquier botón	Finaliza el escaneo automático.

Troubleshooting

Q1: Where is the power supply? I did not find one in the box.

A1: The TK-210K does not require a power supply. It draws power from your computer's USB connection. As long as your KVM switch is connected to the USB or PS/2 port, it will receive the necessary power to function.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your USB port is working properly by testing it with your other USB devices. Once you confirm that the USB port is functional, please reboot your computers, and try to use the KVM switch again.

Q3: I have the KVM switch connected properly, but my microphone and speakers don't work.

A3: First, make sure your sound card is properly installed on your computers. Second, make sure your speakers and microphone work properly when connected directly to your computer. Third, make sure your speakers and microphone are connected in correct jack on the KVM switch. Make sure the audio cables are connected to the correct jack on your computer.

Q4: Can I connect and disconnect the USB cables while the computers are turned on?

A4: Yes, you can connect or disconnect the USB cables while the computers are turned on because the USB interface is Plug-and-Play and Hot-Pluggable.

Q5: Will the KVM switch remember the keyboard settings between computers?

A5: Yes, the KVM switch will remember the keyboard settings when switching between your computers. (i.e.: Cap lock, Num key, etc.)

Q6: How do I switch from one computer to another with the KVM switch?

A6: PC User: Push Buttons, Hot-Key Commands
Mac User: Push Buttons
Linux User: Universal Hot-Key Commands

If you still encounter problems or have any questions regarding the TK-210K, please contact TRENDnet's Technical Support Department.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-210 - 2-Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or deliver to customer an equivalent product to replace the defective item. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product through any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

Note: AC/DC Power Adapter, Cooling Fan, Power Supply, and Cables carry a 1-Year Warranty

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673
24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67
English/Espanol - 24/7
Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35
English/Espanol - 24/7
Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDnet's website at <http://www.trendnet.com/register>

TRENDnet[®]
20675 Manhattan Place
Torrance, CA 90501
USA