



Quick Installation Guide



TK-408K

Table of Contents

Français	1
1. Avant de commencer	1
2. Comment effectuer les connexions	2
3. Utilisation du Switch KVM	3
Specifications	5
Troubleshooting	6

1. Avant de commencer




Contenu de l'emballage

- TK-408
- Guide d'installation rapide
- 4 câbles KVM combo 3 en 1
- 4 câbles Audio/Micro

Configuration du système

- Moniteur compatible VGA ou r SVGA
- Clavier PS/2 avec fiche Mini-Din à 6 broches
- Souris PS/2 avec fiche Mini-Din à 6 broches
- Diffuseurs (en option)
- Micro (en option)

Application

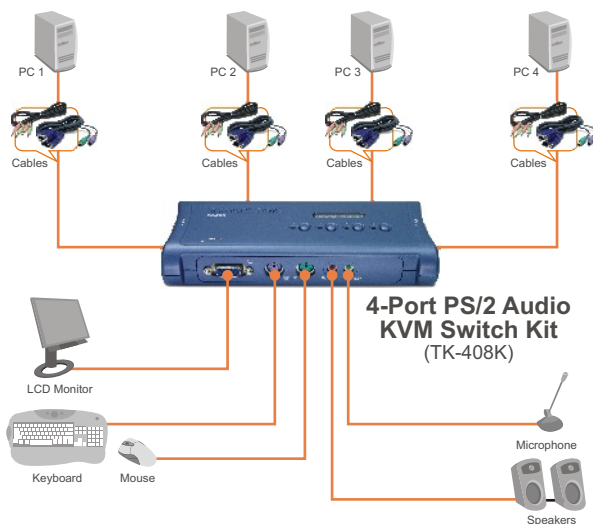

2. Comment effectuer les connexions

Important : Mettez tous les ordinateurs hors tension avant d'effectuer les connexions vers le Switch KVM. Veuillez noter que les câbles fournis et les prises du Switch KVM comportent des couleurs afin de les brancher plus aisément.

1. Branchez le **Moniteur, le clavier, la souris et les diffuseurs** partagés aux ports consoles du Switch KVM.



2. Branchez les extrémités du **câble KVM combo 3 en 1** fourni et du **câble Audio/Micro** à votre ordinateur.



3. Branchez l'autre extrémité du **câble KVM combo 3 en 1** à un canal PC disponible.

4. Branchez l'autre extrémité du **câble Audio/Micro** sur le même canal PC disponible.



5. Mettez les ordinateurs connectés sous tension et attendez que le bureau apparaisse.

L'installation est maintenant complète.

3. Utilisation du switch KVM

Pour passer d'un ordinateur à l'autre, vous pouvez utiliser les boutons du Switch KVM ou les touches de raccourci du clavier.

Touches d'accès rapide

Un raccourci clavier consiste en une combinaison de trois touches :

Accès rapide = ScrLk + ScrLk + Touche(s)

Après avoir appuyé sur la touche ScrLk, vous disposez de 2 secondes pour appuyer à nouveau sur cette dernière. Vous disposez alors de 2 secondes supplémentaires pour appuyer sur une touche de commande. Si vous n'enfonchez aucune touche dans les deux secondes, le mode « accès rapide » est annulé.

Remarque



1. Les commandes de raccourci ne fonctionnent qu'avec les touches numériques de la rangée supérieure
2. Lorsque la liaison des permutations de ports PC et Audio/Micro est activée par un raccourci clavier, toutes les permutations PC et Audio/Micro sont reliées.
3. Pour les systèmes d'exploitation non PnP (Linux, Windows NT 4.0), veuillez utiliser les commandes suivantes pour réinitialiser les paramètres de la souris.

2-key mouse setting:	ScrLk + ScrLk + M + 1
3-key wheel mouse setting:	ScrLk + ScrLk + M + 2
5-key wheel mouse setting:	ScrLk + ScrLk + M + 3

Convention concernant les touches de raccourci :

La séquence signifie que vous devez enfoncer chaque touche consécutivement et non simultanément.

Références rapides pour le TK-408K

Commande	Combinaison de touches	Description
Sélection du PC	ScrLk + ScrLk + X x = 1 – 2 pour le numéro du canal PC	Sélectionne le canal PC actif.
Sélection du canal Audio/Micro	ScrLk + ScrLk + FX (Fx est une touche de fonction) FX=F1–F4	Sélection du canal Audio/Micro actif
Lien entre la permutation PC et Audio/Micro	ScrLk + ScrLk + Q	Permet de relier la permutation des ports PC et des ports Audio/Micro
Suppression du lien entre la permutation PC et Audio/Micro	ScrLk + ScrLk + W	Supprime la connexion de la permutation des ports PC et des ports Audio/Micro
Réinitialisation des commandes souris/clavier	ScrLk + ScrLk +  (Flèche haut)	Sélectionnez le prochain ordinateur supérieur disponible
Canal PC supérieur suivant	ScrLk + ScrLk +  (Flèche bas)	Sélectionnez le prochain ordinateur inférieur disponible.
Réinitialisation des commandes souris/clavier	ScrLk + ScrLk + End	Réinitialise la souris et le clavier côté PC. (fonctionne exclusivement sur un système d'exploitation non PnP)
Recherche automatique	ScrLk + ScrLk + S	Recherche automatique parmi tous les canaux pour un aperçu rapide à l'écran de chaque canal. (chaque scan = 10 secondes)
Arrêt de la recherche automatique	Press any key on keyboard	Met fin à la recherche automatique.

Specifications

Computer Connections:	4
KVM Cable:	4 sets of 1.8 M (6ft) KVM Cables
KVM Cable Connectors (all male):	<u>KVM</u>
	To KVM: 1 x VGA/SVGA HDB 15-pin
	To PC: <ul style="list-style-type: none"> • 1 x PS/2 Keyboard 6-pin Mini Din • 1 x PS/2 Mouse 6-pin Mini Din • 1 X VGA HDB 15-pin
	<u>Audio</u>
	To KVM: <ul style="list-style-type: none"> • 1 x 3.5mm audio in/out jack • 1 x 3.5mm microphone in/out jack
To PC: <ul style="list-style-type: none"> • 1 x 3.5mm audio in/out jack • 1 x 3.5mm microphone in/out jack 	
Console Port Connectors (all female):	Keyboard: PS/2 Keyboard 6-pin Mini Din Mouse: PS/2 Keyboard 6-pin Mini Din Monitor: VGA HDB 15-pin Speaker: 3.5mm audio in/out jack Microphone: 3.5mm microphone in/out jack
Port Selection:	Push Button and Hot-Key Commands
Auto-Scan Intervals:	5 seconds
Keyboard State:	Saved and Restored
Power Type:	PS/2 Interface Power
Dimensions:	167 x 80 x 28mm (6.6 x 3.2 x 1.1in.)
Weight:	178g (6.3oz.)
Operating Temperature:	0° ~ 40°C (32° ~104° F)
Storage Temperature:	-20° ~ 60°C (-4° ~ 140° F)
Humidity:	0%~90%, Non-Condensing
Certifications:	FCC and CE

Q1: Where is the power supply? I did not find one in the box.

A1: The TK-408K does not require a power adapter. It draws power from your computer's PS/2 connections. As long as your KVM Switch is connected to the PS/2 port, it will receive the necessary power to function.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your PS/2 port is working properly by testing it with your other PS/2 devices. Once you confirm that the PS/2 port is functional, please reboot your computers, and try to use the KVM switch again.

Q3: Can I connect and disconnect the PS/2 cables while the computers are turned on?

A3: Do not try to connect the KVM Switch to the computers while the computers are in powered-on state, because the computers may have difficulty recognizing your shared PS/2 keyboard and PS/2 mouse.

Q4: Will the KVM switch remember the keyboard settings between computers?

A4: Yes, the KVM switch will remember the keyboard settings when switching between your computers. (i.e.: Cap lock, Num key, etc.)

Q5: How do I switch from one computer to another with the KVM switch?

A5: You may switch between computers by pressing the Push Buttons on the KVM switch or by using the Hot-Key commands via keyboard. For a list of Hot-Key commands, refer to the "Quick Reference Sheet for TK-408K".

If you still encounter problems or have any questions regarding the TK-408K, please contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-408K - 2 Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDnet NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDnet'S PRODUCTS.

TRENDnet SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDnet'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 Year Warranty



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673
24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67
English/Espanol - 24/7
Francais/Deutsch - 11 am-8pm, Monday - Friday MET

Worldwide

Telephone: +{(31) (0) 20 504 05 35
English/Espanol - 24/7
Francais/Deutsch - 11 am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet
3135 Kashiwa Street
Torrance, CA 90505
USA