

Table of Contents

1. Introduction	1
Features	1
Package Contents	1
System Requirements	1
2. Installation	2
On Windows Vista	2
On Windows 98SE/ME/2000/XP	4
Verify the Driver Installation on Windows	5
On Mac OS X	6
Connecting Serial Device	
3. Specifications	9
4. Regulatory Compliance	10
FCC Conditions	
CE	
CE	

1. Introduction

How to find a lightest way to contact your PDA to the USB port on your PC? USB Serial Converter operates as a bridge between one USB port and standard RS-232 Serial port. You just easily hook the cable into PC or Hub's port, and it can connect any RS-232 devices, such as PDA, scanner, printer...etc.

Features

- Compliant with the USB 1.1 version specification
- Supports RS-232 serial Interface
- Supports 500kbps data transfer rate
- Supports USB suspend condition
- Plug & Play
- USB host device drivers available
- Draws its power from USB connection no extra power adapter required
- Supports Windows 98SE, ME, 2000, XP, Vista 32/64-bit and Mac10.x

Package Contents

Before installation, please check the items of the package.

- TU-S9 x1
- Driver CD-ROM x1
- Quick Installation Guide x1

System Requirements

- IBM compatible computer or Mac
- Windows[®] 98SE, ME, 2000, XP, Vista, Mac OS X 10.1~10.4
- Available USB port
- 64 MB RAM or more.
- Pentium 233 MHz or higher

2. Installation

On Windows Vista

- 1. Connect the USB Serial Converter to the USB port on your computer.
- 2. When the Found New Hardware appears, select Locate and install driver software (recommended).

🕞 Found New Hardware	
Windows needs to install driver software for your USB-Serial Controller D	
Locate and install driver software (recommended) Windows will guide you through the process of installing driver software for your device.	
Ask me again later Windows will ask again the next time you plug in your device or log on.	
Don't show this message again for this device Your device will not function until you install driver software.	
Cancel	

3. Insert the provided CD-ROM into your CD-ROM drive and click **Next**. (Sometimes the installer will automatically proceed to next step.)



4. When the installation is done, click **Close**.



5. A pop-up message will appear in the notification area indicating the installation is complete. Restart your computer if prompted to do so.



On Windows 98SE/ME/2000/XP

Note: DO **NOT** connect the USB Serial Converter to your computer before completing the driver installation.

 Insert the provided CD into your CD-ROM drive. Run the Setup file under x:\Driver\Win98_XP where x: is your CD-ROM drive letter. When the welcome screen appears, click Next.

InstallShield Wizard	
	Welcome to the InstallShield Wizard for PL-2303 USB-to-Serial
	The InstallShield® Wizard will install PL-2303 USB-to-Serial on your computer. To continue, click Next.
	< Back Next > Cancel

2. When the following screen appears, click Finish.



Once the installation is done, connect the converter to a free USB port on your computer.

Verify the Driver Installation on Windows

To verify your converter installation, please launch **Device Manager** by the steps below:

- On Windows 98SE/ME/2000/XP: Right-click the My Computer icon on the desktop and select Properties > System > (Hardware) > Device Manager.
- On Windows Vista: Right-click the Computer icon on the desktop and select Properties > Device Manager.

In the **Ports (COM & LPT)** group, a string similar to **USB to Serial Port** or **Prolific USB to Serial Comm Port** should be displayed.

If there is a question or exclamation mark next to that item, then the driver is not properly installed. Please delete the item and repeat the installation steps.

Windows 98SE/ME



Windows 2000/XP/Vista



On Mac OS X

The provided Mac X driver supports:

- Mac OS 10.1 and above for PowerPC based Mac
- Mac OS 10.4 and above for Intel based Mac

To install the drivers:

- Insert the provided driver CD into your CD-ROM drive. Double-click the CD icon on the desktop and navigate to the directory of \Driver\MacX. Copy and then paste the PL2303_1.2.1r2.dmg file to the desktop.
- 2. Double-click the dmg file on the desktop to extract the file. Then double-click the **PL2303_1.2.1** file that is extracted.



3. When the welcome screen appears, click Continue.



4. Select a destination disk to install the driver and click **Continue**.



5. Click Install.



6. When the **Authenticate** screen appears, enter your password in the provided field and click **OK**.

Authenticate		
Ins	taller requires that you type your password.	
Name:	test	
Password:	·····	
Details		
?	Cancel OK	

7. Click Continue Installation.



8. Click **Restart** to finish installing the driver and reboot your Mac.

\varTheta 🔿 🔿 Insta	II Prolific USB to Serial Cable driver v1.2.1 for Mac OS X
Install Software	
Introduction Read Me License Select Destination Installation Type Installing	The software was successfully installed
• Finish Up	Click Restart to finish installing the software.
	Go Back Restart

- 9. Connect the converter to a free USB port on your Mac.
- To verify the installation: Go to Apple System Profiler > Extensions and you should find ProlificUsbSerial among the list. This means the installation is successfully done.

Connecting Serial Device

Now you can connect your RS-232 device to the converter. If prompted to install the driver for your serial device, follow the manual that comes with your serial device to complete the installation.



3. Specifications

Data Transfer Rate	500 kbps
Function	USB1.1 Serial Converter operates as a bridge between one USB port and standard RS-232 serial port
Ports	USB 1.1, USB Type A male
Power	Bus-powered
Operating System Support	Windows 98SE, ME, 2000, XP, Vista Mac OS X 10.1 ~ 10.4
Accessories	Driver CD, Quick Installation Guide

* Specification is subject to change without further notice.

4. Regulatory Compliance

FCC Conditions

This equipment has been tested and found to comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference

(2) This device must accept any interference received. Including interference that may cause undesired operation.

CE

This equipment is in compliance with the requirements of the following regulations: EN 55 022: CLASS B





TRENDnet Technical Support

US · Canada

Toll Free Telephone: 1(866) 845-3673 24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com

TRENDNET 20675 Manhattan Place Torrance, CA 90501 USA

Copyright ©2007. All Rights Reserved. TRENDnet.