



Quick Installation Guide



TU2-ETG

### Table of Contents

English	1
1. Before You Start	1
2. How to Install	2
Troubleshooting	4



### **Package Contents**

- TU2-ETG
- CD-ROM (Driver)
- Multi-Language Quick Installation Guide

### **System Requirements**

- CD-ROM drive
- USB port: 2.0 or 1.1


Supported Operating Systems	CPU	Memory
Windows 7 (32/64-bit)	1GHz or above	1GB RAM or above
Windows Vista (32/64-bit)	800MHz or above	512MB RAM or above
Windows XP (32/64-bit) / 2000	300MHz or above	256MB RAM or above

#### Note:

Do not connect the TU2-ETG to your computer until instructed to do so.

**1.** Insert the Driver CD-ROM into your CD-ROM Drive.

2. Click Run Autorun.exe (Windows 7/Vista Only)

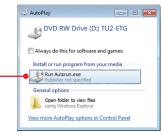

**3.** Click **Install Driver**. Then select your operating system.



4. Follow the InstallShield Wizard and then click Finish.





5. Click Exit.

- 6. Remove the driver CD-ROM from your computer's CD-ROM drive.
- 7. Connect the Adapter to an available USB port of your computer.





9. Connect a RJ-45 cable from the Adapter to a Switch, Router or Cable/DSL Modem.



Your Installation is complete.

# 1. I inserted the Driver CD-ROM into my computer's CD-ROM Drive and the installation menu does not appear automatically. What should I do?

- 1. For Windows 7, if the installation menu does not appear automatically, click on the Windows Icon on the bottom left hand corner of the screen, click the "Search programs and files" box, and type D:\autorun.exe, where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.
- 2. For Windows Vista, if the installation menu does not appear automatically, click Start, click the Start Search box, and type D:\autorun.exe where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.
- 3. For Windows XP/2000, if the installation menu does not appear automatically, click Start, click Run, and type D:\autorun.exe where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.

#### 2. Can I connect or disconnect the TU2-ETG while the computer is on?

Yes, you can connect or disconnect TU2-ETG while the computer is on because the USB interface is Plug-and-Play compliant and hot-pluggable.

#### 3. Windows is unable to recognize my hardware. What should I do?

- Make sure your computer meets the minimum requirements as specified in Section 1 of this Quick Installation Guide.
- 2. Try plugging the adapter into a different USB port.

## 4. Windows recognizes my new hardware, but I'm unable to connect to my network. What should I do?

- Verify that the RJ-45 Ethernet cable is securely connected from your switch or router to your adapter.
- 2. Verify that the LEDs on your adapter are lit.
- 3. Verify that the TCP/IP settings are set to Obtain an IP address automatically.

## 5. When I connect my adapter to a Gigabit switch, I am not getting Gigabit speeds. What should I do?

Make sure you are using CAT-5e or CAT-6 Ethernet Cables. Some CAT-5 cables are not rated to run in Gigabit.

If you still encounter problems or have any questions regarding the **TU2-ETG**, please contact TRENDnet's Technical Support Department.

#### Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.





Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

#### **ADVERTENCIA**

En todos nuestros equipos se mencionan claramente las caracteristicas del adaptador de alimentacón necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños fisicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energia electrica domiciliaria existente en el pais o zona de instalación.



## **Product Warranty Registration**

Please take a moment to register your product online.
Go to TRENDnet's website at http://www.trendnet.com/register