TV-IP300

Advanced Day/Night Internet Camera Server
Quick Installation Guide

Guide d'installation rapide pour le Internet Caméra Serveur Avancée Jour et Nuit

Anleitung zur Schnellinstallation des Infrarot Nachtsicht Farb IP Kamera Server

Guía de Instalación Rápida para Servidor Avanzado De la Cámara fotográfica Del Internet De Dia/Noche

Version 08.18.04





Table of Contents

English	
Prepare for Installation	
2. Install Hardware	2
3. Configure the Internet Camera	4
Troubleshooting	5

English QIG

1. Prepare for Installation

Thank you for purchasing the TV-IP300. This Internet Camera will allow you to view live images from internal and external networks.

This guide will help you set up and configure your Internet Camera. Following the installation instructions should be quick and easy. If you run into problems, please refer to the Troubleshooting section or the more detailed installation procedures on the CD User's Guide. If you need further technical support, please visit www.TRENDnet.com or call our technical support department by phone.

Verify Package Contents

Please make sure you have everything in the box:











System Requirement

- 1. 10/100Mbps Ethernet
- 2. CD-ROM Drive
- 3. CPU: Intel Pentium III 350MHz or above
- 4. Memory: 128MB or above
- 5. Web Browser: Microsoft Internet Explorer 5.0 or above
- 6. VGA Resolution: 800 x 600 or above

2. Install Hardware

- 1. Position the metal stand, and mount the Internet Camera to the stand.
- Connect the RJ-45 network cable to the Internet Camera then connect the other end of the network cable to a switch or hub.
- **3.** Connect the power adapter to the Internet Camera. Make sure to use the power adapter supplied with the Internet Camera.

Note: Using a different power adapter may damage the unit.



2 English

Special I/O Ports Features



1. I/O Connector

The Internet Camera provides the I/O connectors on the rear panel, which provide the physical interface to send and receive digital signals to variety of external alarm devices.

2. DIP Switch

AES/AI Switch: When using the Auto Iris Lens, please switch to AI position Flicker less/Off: If the power frequency used (in NTSC area) is 50Hz, please switch to Flicker less position.

3. Iris Level

This is used only when the DC-Iris lens is connected to the camera.

4. Reset Button

This resets all the settings in the camera to default factory settings.

3. Configure the Internet Camera

Open Internet Browser Window and enter http://192.168.0.30 (camera's default IP address)



<u>Note:</u> The PC's IP (Example 192.168.0.50) address must correspond with the Internet Camera's IP address (Default IP: 192.168.0.30) in the same segment for the two devices to communicate.

2. Click on **System Administration** to access the configuration page.



3. Enter an IP address, Subnet mask, and Default gateway correspond with your existing network for the camera then click on Save button to keep the changes. Now your camera is ready to use.

Note: If you need to access the configuration remotely, it is recommended to enter a static IP address and the Internet DNS IP address.

For detail information about each feature, please refer to the User's Guide on the CD-ROM or contact our support.

Troubleshooting

Q1. The image is blurry, how do I fix this?

A1. You can adjust the Internet Camera's focus by rotating the lens.

Q2. Can I replace the camera lens?

A2. The Internet Camera's Lens is replaceable with a standard CS-Mount type lens.


Q3. How do I view the Internet Camera's live images within my Local Network?

A3. Open a web browser (Internet Explorer or Netscape), type your Wireless Internet Camera's IP address (i.e.: 192.168.0.30) in the Address bar, and then hit the **Enter** key. The Welcome page of the Internet Camera will appear.


Q4. When I enter the IP address of the camera, the image does not load, why?

A4. Please make sure all the Active X features are enabled for your Internet Explorer.

1. Go to Tool (on the Tool bar) > Internet options > Security

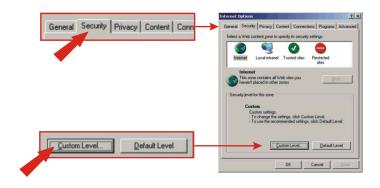

Click on Custom Level and make sure all ActiveX controls are set to "Enable" and click OK.

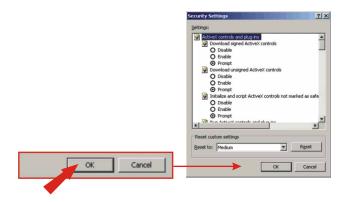


3. Once you save the settings, the browser will load again and the image should appear.

Q5. How do I configure my computer's IP address?


A5. For Windows 2000/XP users:

- On the Desktop, right click on My Network Places à select Properties à right click on the Wireless Network Connection à select Properties, the Wireless Network Connection Properties Window will appear
- Under General tab, select Internet Protocol (TCP/IP) à click on Properties button, Internet Protocol (TCP/IP) Properties Window will appear
 - **1.** Select Use the following IP address option and enter the IP, Subnet Mask and Default gateway addresses.
 - 2. Click OK to complete

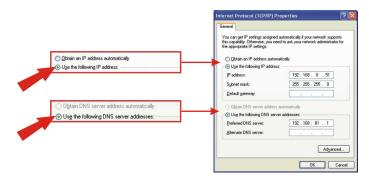

For Windows 98/ME users:

- On the Desktop, right click on Network Neighborhood > select Properties > right click on the Wireless Network Connection > select Properties, the Wireless Network Connection Properties Window will appear
- Under Configuration tab, select your Network Adapter (TCP/IP protocol) > click on Properties button, TCP/IP Protocol Properties Window will appear
- Select Specify an IP address option and enter the IP, Subnet Mask addresses.

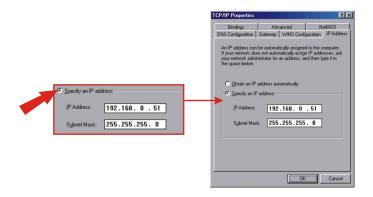

For detailed information about the TV-IP300's configuration and advanced settings, please refer to the User's Guide on the included CD-ROM or to www.TRFNDnet.com.

Contact Technical Support

Telephone: +1-310-626-6252
Fax: +1-310-626-6267
Website: www.TRENDNET.com
E-mail: support@trendware.com

Technical Support Hours

7:00AM ~ 6:00PM, Monday through Friday Pacific Standard Time (except holidays)



Product Warranty Registration

Please take a moment to register your product online. Go to TRENDware's website at http://www.TRENDNET.com

> TRENDware International, Inc. 3135 Kashiwa Street Torrance, CA 90505

http://www.TRENDNET.com