TEW-229UB

11Mbps 802.11b Wireless USB 2.0 Adapter Quick Installation Guide

Guide d'installation rapide du Un adaptateur USB 2.0 LAN sans fil 802.11

Anleitung zur Schnellinstallation des 802.11b Wireless LAN USB 2.0 -Adapter

Guía de Instalación Rápida Adaptador USB 2.0 LAN inalámbrico 802.11b

Version 07.06.04





Copyright ©2004. All Rights Reserved. TRENDware International, Inc.

Table of Contents

English	1
1. Prepare for Installation	1
2. Install Wireless Configuration Utility	2
3. Install Hardware & Driver	3
4. Wireless Configuration	7
5. Configure TCP/IP Network Settings	

Troubleshooting		14
-----------------	--	----

English QIG 1. Prepare for Installation

Thank you for purchasing the TEW-229UB. Your new 802.11b Wireless USB 2.0 Adapter will allow you to connect to 802.11b-compliant wireless networks and begin wirelessly sharing the Internet, files, and other resources.

This guide will help you set up and configure your Wireless USB Adapter. Following this installation should be quick and easy. If you run into problems, please refer to the Troubleshooting section or the more detailed installation procedures on the User's Guide CD-ROM. If you need further technical support, please visit www.TRENDNET.com or call by phone.

Verify Package Contents

Please make sure you have everything in the box:



Verify Equipment

Before installing this 802.11b Wireless USB 2.0 Adapter, you should have a:

- 1. USB-enabled computer
- 2. 300 MHz processor and 32 MB of memory (Recommended)
- 3. CD-ROM drive
- **4.** 802.11b or 802.11g Access Point (for Infrastructure Mode) or another 802.11b wireless adapter (for Ad-Hoc/Peer-to-Peer networking mode).

2. Install Wireless Configuration Utility

NOTE: Do not connect the Wireless USB Adapter to your computer until you've installed this Utility.

Windows 98SE/ME/2000/XP

 Insert the TEW-229UB CD-ROM into your computer's CD-ROM drive; the installation menu window will appear automatically. If the window does not appear automatically, click Start, click Run, and type E:\Autorun.exe in the text-field. Click OK.

<u>NOTE:</u> Replace "E" in "E:\Autorun.exe" with whichever letter is assigned to your CD-ROM drive.

2. On the Installation Menu, click Install Utility.



 Follow the Install Shield Wizard's instructions to install the wireless configuration utility.



4. Click Finish to complete the utility instlalation.



English

3. Install Hardware & Driver

NOTE: For Windows 98 users, please restart your computer first before the hardware installation.

The TEW-229UB is hot-pluggable, so you can connect or disconnect the TEW-229UB while the computer is on.

1. Connect the TEW-229UB Wireless USB Adapter to your computer's USB port.



Windows 98SE/ME/2000/XP

 Once you've connected the Wireless USB Adapter to your computer's USB port, Windows will automatically detect the new hardware and load the appropriate driver.



2. After the driver is installed, the following prompt will appear. Select the appropriate country domain using the drop-down menu, and then click **OK**.



3. Driver installation is now complete.

Windows 2000

 Once you've connected the Wireless USB Adpater to your computer's USB port, Windows will automatically detect the new hardware and load the appropriate driver.



2. When the Digital Signature Not Found window appears, click Yes to continue.

NOTE: TRENDnet's Wireless Adapters have been fully tested under all supported Windows Operating Systems and provide assured compatibility.



3. After the driver is installed, the following prompt will appear. Select your country domain using the drop-down menu, and then click **OK**.

Please select the country domain.	FCC Standard
Regulatory Domain:	FCC
Available Channels:	1 - 11
WARNING: Selecting the inc may be in violating of applica	

4. Driver installation is now complete.

Windows XP

 After installing the utility software and connecting the Wireless USB Adpater to your computer's USB port, the "Found New Hardware Wizard" will appear. Click Next to start.



2. Select the correct driver path and click Next to install the driver.



3. A warning message will tell you that the device you're installing has not yet been certified for Windows XP compatibility. Click **Continue Anyway**.



NOTE: TRENDnet's Wireless Adapters have been fully tested under all supported Windows Operating Systems and provide assured compatibility.

4. Click Finish.



5. After the driver is installed, the following prompt will appear. Select the appropriate country domain using the drop-down menu, and then click **OK**.

Please select the country domain.	FCC Standard
Regulatory Domain:	FCC
Available Channels:	1 - 11
WARNING: Selecting the inc may be in violating of applica	

6. Driver installation is now complete.

4. Wireless Configuration

Infrastructure Mode (PC-to-Access Point connection)

1. Double-click the wireless computer icon in your system tray (next to the clock in the bottom right corner of your screen).



- 2. Click the Configuration Tab. Select Infrastructure (Access Point) as the Network Mode.
- 3. Enter a network SSID that matches the SSID of your Access Point. (If you are unsure of your Access Point's SSID, refer to your Access Point settings) Click **Apply**.

<u>OPTIONAL</u>: Select the Enable Encryption option, and enter a WEP manual key of your choice.



7

4. Go to Status tab to check your wireless connection.

	💵 Wireless Configu	ration Utility HW.31 🛛 👔
Status Configuration Advanced Profile Network	Status Configuration	Advanced Profile Network Statistics About
1	Connected To:	TNET: 00-90-48-A0-41-F3
· ·	Network Mode:	Infrastructure
	Channel:	1
	Transmit Bate:	11 Mbps
	Encryption:	64-bit WEP
	Data Transmitted:	3618 Data Received: 12000
	Signal Strength:	73 %
	Link Quality:	91 %
		OK Cancel Apply

5. To save the current settings as a profile, click the profile tab and type in the Profile Name, click **Save**, and then click **Activate**.

Advanced Profile Network Statistics About	Status Profile		lity HW.31 Profile Network Statistics About	
Save Delete Activate		Configuration Settings Network Mode SSID Transmit Rate Channel Enception (VLEP) Method Default WLEP Key Default WLEP Key Default VLEP Key Powert Saving Powert Saving Powe	" to acopy profile reling. Valent THET Full Automation Full Automation Full Automation Full Automation Auto 2422 2422 X. Cancel Apple	

6. The installation and configuration of your Wireless USB Adapter are now complete.

Ad-Hoc Mode (Computer-to-Computer connection)

1. Double-click the wireless computer icon in your system tray (next to the clock in the bottom right corner of your screen).



- Click the Configuration Tab. Select 802.11 Ad-Hoc (Computer to Computer) as the Network Mode.
- 3. Create a network SSID and select a channel for your wireless network. Click Apply.



4. Go to Status tab to check your wireless connection.

	Wireless Configuration Utility HW.31			
Status Configuration Advanced Profile Network		Status Configuration Advanced Profile Network Statistics About		
1		Connected To: Home : 02:E0:36:54:61:30		
1		Network Mode: 802.11 Ad-Hoc		
		Channel: 6		
		Transmit Bate: 11 Mbps		
		Encryption: Disable		
		Data Transmitted: 105 Data Received: 1384		
		Signal Strength: Ad-Hoc		
		Link Quality: Ad-Hoc		
	-	OK Cancel Apply		

 To save the current settings as a profile, click the profile tab and type in the Profile Name, click Save first, and then click Activate.

Advanced Profile Network Statistics About	Wireless Configuration Utility HW.31 Status Configuration Advanced Pictife Network Statistics About Poole Poole Status Press "Activate" to apply profile setting
	Endinguation Selfing Values Noish Allowing Noish Allowing Normal Res Durand Normal Durand Normal Datable Buildie Datable Datable Datable Allow Presented Type Auto Passible Type Auto OK Cented Appr

6. The installation and configuration of your Wireless USB Adapter are now complete.

5. Configure TCP/IP Network Settings

Windows 2000/XP

- On the Desktop, right-click My Network Places and click Properties. Then, rightclick Wireless Network Connection and click Properties; the Wireless Network Connection Properties Window will appear
- 2. Under the General tab, select Internet Protocol (TCP/IP) and click the Properties button; the Internet Protocol (TCP/IP) Properties Window will appear.

i.For DHCP IP address Setup

- 1. Select the Obtain an IP address automatically option.
- 2. Select the Obtain DNS server address automatically option.



3. Click OK to save the settings.

ii.For Static IP address Setup

- 1. Select the Use the following IP address option and enter the IP, Subnet Mask, and Default gateway addresses.
- 2. Select the Use the following DNS server address option and enter DNS addresses.



3. Click OK to save the settings.

For Windows 98/ME users

- On the Desktop, right-click Network Neighborhood and click Properties. Then, right-click Wireless Network Connection and click Properties; the Wireless Network Connection Properties Window will appear.
- 2. Under Configuration tab, select 802.11b Pen Size Wireless USB Adapter (TCP/IP protocol) and click on the Properties button; the TCP/IP Protocol Properties Window will appear

i.For DHCP IP address Setup

1. Select the Obtain an IP address automatically option.

	TCP/IP Properties		<u>?×</u>
	Bindings Advanced		NetBIOS
	DNS Configuration	Gateway WINS Cor	figuration IP Address
	If your network doe	be automatically assign es not automatically assi nistrator for an address,	gn IP addresses, ask
Detain an IP address automatically	Obtain an IP	address automatically	
-C Specify an IP address:	C Specify an IF	address:	
		R:	
		C	IK Cancel

ii.For Static IP address Setup

 Select the Specify an IP address option, and enter the IP and Subnet Mask addresses.



Note: If your network's Wireless Access Point or Wireless Router has a DHCP Server feature, please enable it and configure the wireless adapter to use DHCP IP addresses. After the wireless adapter connects to the Access Point or Router, it will receive addresses automatically.

Q1. I completed all the steps in the quick installation guide, but my wireless USB Adapter isn't connecting to my access point. What should I do?

A1. You should first verify that the Network SSID matches your wireless router or access point's SSID. If they already match, you should check your TCP/IP properties to ensure that Obtain an IP address automatically is selected.

Q2. Windows is unable to recognize my hardware. What should I do?

A2. Make sure your computer meets the minimum requirements as specified in Section 1 of this quick installation guide. Also, you must install the wireless configuration utility (as described in Section 3) before connecting the wireless USB Adapter.

Q3. I cannot open the wireless configuration utility. What should I do?

A3. Go to your Device Manager (Control Panel à System) to make sure the adapter is installed properly. If you see a networking device with a yellow question mark or exclamation point, you will need to reinstall the device and/or the drivers.

If you still encounter problems, please refer to the User's Guide CD-ROM or contact technical support.

Contact Technical Support

Telephone: +1-310-891-1100 Fax: +1-310-891-1111 Website: www.TRENDNET.com E-mail: support@trendware.com

Technical Support Hours

7:00AM ~ 6:00PM, Monday through Friday Pacific Standard Time (except holidays)



Product Warranty Registration

Please take a moment to register your product online. Go to TRENDware's website at http://www.TRENDNET.com

> **TRENDware International, Inc.** 3135 Kashiwa Street Torrance, CA 90505

http://www.TRENDNET.com

Copyright ©2004. All Rights Reserved. TRENDware International, Inc.