

TEW-IA06D

**6dBi Directional Indoor Antenna
Quick Installation Guide**

**Antenne intérieure directionnelle 6dBi
Guide d'installation rapide**

**Direktionale 6dBi-Zimmerantenne
Kurzanleitung zur Installation**

**Guía de instalación rápida de
la antena interior direccional 6dBi**

Version 01.14.05



TRENDnet[®]
TRENDware, USA
What's Next in Networking

Table of Contents


Français	1
1. Préparation de l'installation	1
2. Détails du produit	2
3. Installation du matériel	3
Troubleshooting	5

Français QIG

1. Préparation de l'installation

Vérification du contenu de l'emballage

Veillez vérifier la présence des éléments suivants dans la boîte :

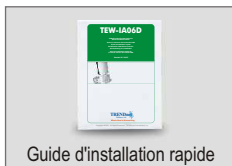

2. Détails du produit


L'antenne intérieure directionnelle est équipée d'une prise SMA femelle inversée qui peut être branchée soit à votre Point d'accès, soit à votre adaptateur réseau sans fil.




3. Installation du matériel

Pour les Points d'accès, les routeurs ou les cartes sans fil

1. Dévissez l'antenne de votre Point d'accès, votre routeur ou votre carte sans fil.

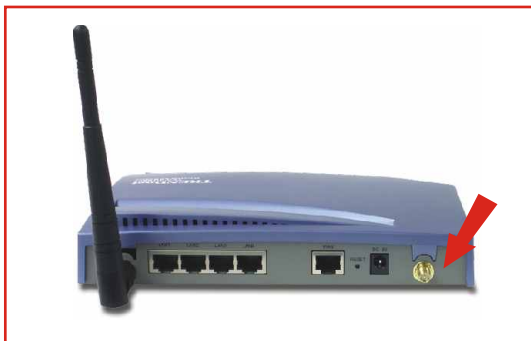

2. Utilisez la prise du TEW-IA06D pour le raccorder à votre Point d'accès, votre routeur ou votre carte sans fil.

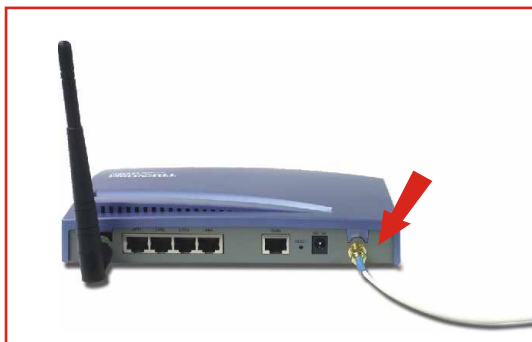

3. Ajustez la TEW-IA06D en la dirigeant vers l'endroit où vous désirez que le signal sans fil soit transmis. En cas de besoin, utilisez la charnière pour pointer la TEW-IA06D vers un angle supérieur.



L'installation du matériel est à présent terminée.

Troubleshooting

Q1: How come I cannot transmit or receive Wi-Fi signals with my TEW-IA06D?

A1: The TEW-IA06D is a directional antenna and can only send and receive signals from the front panel. Make sure to adjust the position of the antenna by directing the front panel to laptops, PCs or other wireless devices.

Q2: My access point indicates that it is receiving power, and my laptop is within range of the TEW-IA06D. However, my laptop does not receive any signals from my access point.

A2: Make sure that you properly connect the antenna to the Wi-Fi Access Point. (See. 3. Hardware Installation)

Q3: Why won't the TEW-IA06D work with my IEEE 802.11a Wireless Router or Wireless Card?

A3: The TEW-IA06D is designed only for IEEE 802.11b or 802.11g Wireless Access Points or Wireless Cards. Please use the TEW-IA06D with compatible wireless devices.

Q4: Is it necessary to use the tapping screws or the wall anchors that come with the TEW-IA06D?

A4: It is only necessary if you decide to mount the TEW-IA06D at a permanent location. Use discretion when attaching mounting brackets to the TEW-IA06D.

If you have any questions regarding the **TEW-IA06D 6dBi Directional Indoor Antenna**, please contact Trendware Technical Support Department.

Contact Technical Support

Telephone: +1-310-626-6252
Fax: +1-310-626-6267
Website: www.TRENDNET.com
E-mail: support@trendware.com

Technical Support Hours

7:00AM ~ 6:00PM, Monday through Friday
Pacific Standard Time (except holidays)

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received including interference that may cause undesired operation.





TRENDware, USA

What's Next in Networking

Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDware's website at <http://www.TRENDNET.com>

TRENDware International, Inc.
3135 Kashiwa Street
Torrance, CA 90505

<http://www.TRENDNET.com>