

TEW-IA06D

**6dBi Directional Indoor Antenna
Quick Installation Guide**

**Antenne intérieure directionnelle 6dBi
Guide d'installation rapide**

**Direktionale 6dBi-Zimmerantenne
Kurzanleitung zur Installation**

**Guía de instalación rápida de
la antena interior direccional 6dBi**

Version 01.14.05



TRENDnet[®]
TRENDware, USA
What's Next in Networking

Table of Contents

Español	1
1. Preparación para la instalación	1
2. Detalles del producto	2
3. Instalación del hardware	3
Troubleshooting	5

Español QIG

1. Preparación para la instalación

Contenidos del paquete

Verifique que su caja contiene todo lo que incluimos en ella:



2. Detalles del producto


La antena interior direccional cuenta con un conector hembra SMA que puede ser conectado a su punto de acceso o adaptador de red inalámbrico.




3. Instalación del hardware

Para punto de acceso, enrutador inalámbrico o tarjeta inalámbrica

1. Desenrosque la antena de su punto de acceso inalámbrico, enrutador o tarjeta inalámbrica.

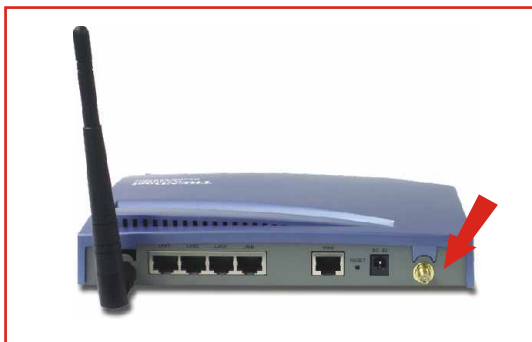

2. Agarre el conector TEW-IA06D y conéctelo a su punto de acceso, enrutador o tarjeta inalámbrica.

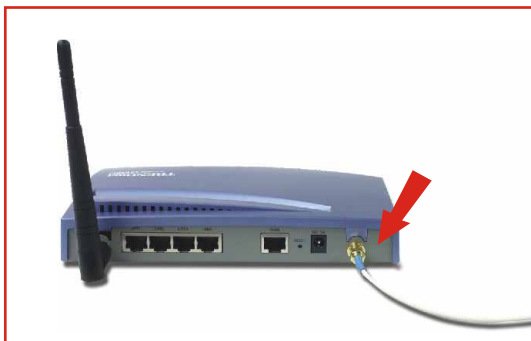

3. Fije el TEW-IA06D girándolo hacia la dirección que desea transmitir la señal inalámbrica. Si es necesario, utilice el eje para colocar el TEW-IA06D a un ángulo mayor.



En este momento, la instalación del hardware ya ha finalizado.

Troubleshooting

Q1: How come I cannot transmit or receive Wi-Fi signals with my TEW-IA06D?

A1: The TEW-IA06D is a directional antenna and can only send and receive signals from the front panel. Make sure to adjust the position of the antenna by directing the front panel to laptops, PCs or other wireless devices.

Q2: My access point indicates that it is receiving power, and my laptop is within range of the TEW-IA06D. However, my laptop does not receive any signals from my access point.

A2: Make sure that you properly connect the antenna to the Wi-Fi Access Point. (See. 3. Hardware Installation)

Q3: Why won't the TEW-IA06D work with my IEEE 802.11a Wireless Router or Wireless Card?

A3: The TEW-IA06D is designed only for IEEE 802.11b or 802.11g Wireless Access Points or Wireless Cards. Please use the TEW-IA06D with compatible wireless devices.

Q4: Is it necessary to use the tapping screws or the wall anchors that come with the TEW-IA06D?

A4: It is only necessary if you decide to mount the TEW-IA06D at a permanent location. Use discretion when attaching mounting brackets to the TEW-IA06D.

If you have any questions regarding the **TEW-IA06D 6dBi Directional Indoor Antenna**, please contact Trendware Technical Support Department.

Contact Technical Support

Telephone: +1-310-626-6252

Fax: +1-310-626-6267

Website: www.TRENDNET.com

E-mail: support@trendware.com

Technical Support Hours

7:00AM ~ 6:00PM, Monday through Friday

Pacific Standard Time (except holidays)

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received including interference that may cause undesired operation.





TRENDware, USA

What's Next in Networking

Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDware's website at <http://www.TRENDNET.com>

TRENDware International, Inc.

3135 Kashiwa Street

Torrance, CA 90505

<http://www.TRENDNET.com>