

TRENDnet®



Quick Installation Guide

TPE-TG50ES/TPE-TG82ES (V1)

Table of Contents

1 Português

1. Antes de Iniciar
2. Referência Rápida
3. Instalação de Hardware e Configuração

1. Antes de Iniciar

Conteúdo da Embalagem

 
- TPE-TG50ES/TPE-TG82ES
- Guia de Instalação Rápida
- Fonte de Alimentação TPE-TG50ES (48V DC, 0.8A) / TPE-TG82ES (54V DC, 1.67A)
- Cabo de alimentação

Requisitos de Sistema


- Um computador com uma porta Ethernet e navegador da Web
- Rede cabeada

2. Referência Rápida


Nota: O modelo de switch pode ser diferente do exemplo mostrado abaixo.

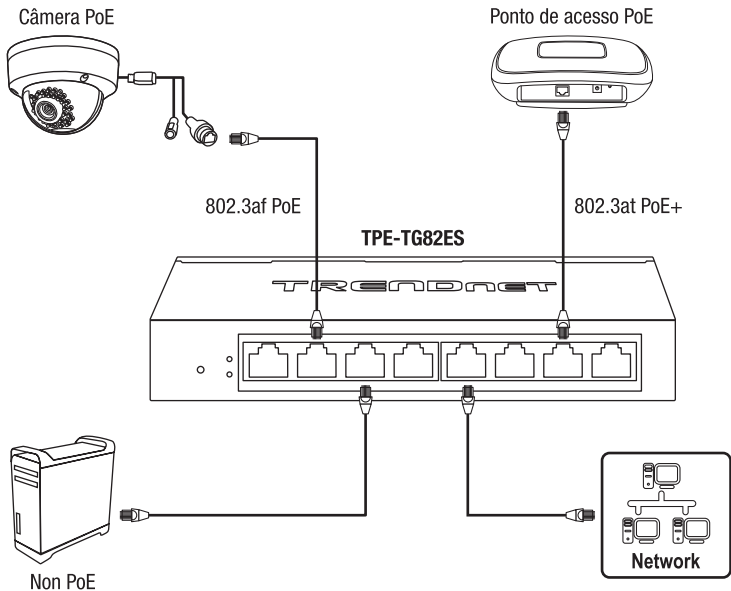

 3. Instalação de Hardware e Configuração

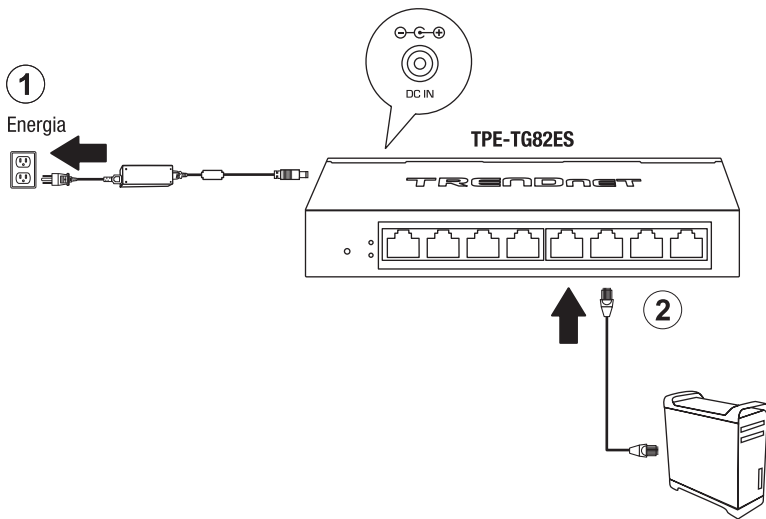

 3. Colocar um endereço IP estático, na placa de rede do seu computador, na gama de Ips 192.168.10.x (por exemplo: 192.168.10.25) e colocar no campo da subnet mask 255.255.255.0.
4. Abra seu web browser, digite endereço IP do switch na barra de endereços e então pressione **Enter**. O endereço IP padrão é 192.168.10.200.



5. Entre com o **User Name** (Nome de Usuário) e **Password** (Senha) e então clique **LOGIN**.

Por padrão:

User Name(Nome de Usuário): **admin**

 
Password (Senha): **admin**

Nota: User Name (Nome do usuário) e Password (senha) são sensíveis a maiúsculas e minúsculas.




6. Clique em **System** (Sistema) e depois clique em **IPv4 Setup** (Configuração IPv4).

7. Configure o switch para atender aos requisitos da sua rede. Em seguida, clique em **Apply** (Aplicar) para salvar as alterações.

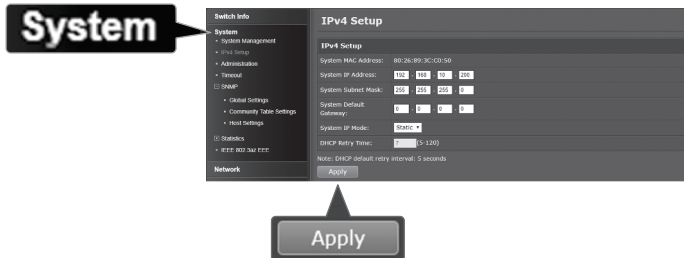


 8. Clicar em **OK**.

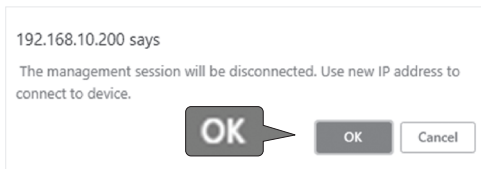


9. No painel do lado esquerdo, clique em **Ferramentas**, clique em **Configuração** e clique em **Salvar**.

 10. Clicar em **Save Settings to Flash** (salvar Configurações para memória flash) (botão).

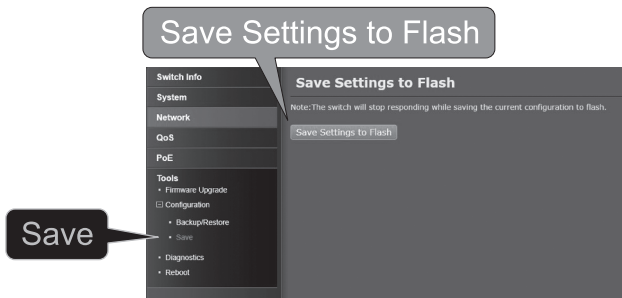

 11. Clicar em **OK**.

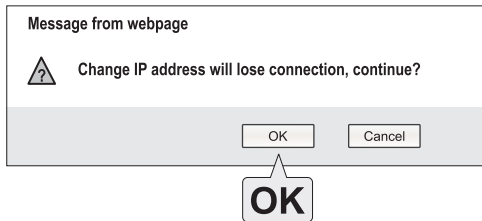

Para informações detalhadas sobre esta e outras configurações avançadas do **TPE-TG50ES/TPE-TG82ES**, por favor, consulte o Guia do Usuário na página de suporte da TRENDnet, www.trendnet.com/support.

TRENDNET[®]

Certifications

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.

Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.

Warning note:

A. Earthing Warning

"The equipment power supply cord shall be connected to a socket-outlet with earthing connection."

B. Wall-mounted instructions

The Unit has two wall-mount slots on its bottom panel.

Before you begin, make sure you have two screws that indicate a diameter measurement of 0.1377 inches (4.0mm).

1. Determine where you want to mount the modem.
2. Drill two holes into the wall. Make sure adjacent holes are 4.51 inches (114mm) apart.
3. Maneuver the modem so the wall-mount slots line up with the two screws.
4. Place the wall-mount slots over the screws and slide the modem down until the screws fit snugly into the wall-mount slots.
5. Screw type T3 x 15 mm X 2

Technical Support

If you have any questions regarding the product installation, please contact our Technical Support.

Toll free US/Canada: **1-866-845-3673**

Regional phone numbers available at www.trendnet.com/support

TRENDnet

20675 Manhattan Place
Torrance, CA 90501
USA

Applies to PoE Products Only: This product is to be connected only to PoE networks without routing to the outside plant.

The equipment power cord must be connected to a socket-outlet with earthing connection.

Note

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Advertencia

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at: www.trendnet.com/register