

# User's Guide

# TRENDnet<sup>®</sup>



## Managed Rackmount Power Distribution Unit

TPI-L14 / TPI-06

Thank you for purchasing your new TRENDnet Power Distribution Unit!

|                               |          |
|-------------------------------|----------|
| <b>Product Overview .....</b> | <b>i</b> |
| <b>TPI-06 .....</b>           | <b>i</b> |
| Package Contents .....        | i        |

|                                                     |            |
|-----------------------------------------------------|------------|
| TPI-06 Hardware Features .....                      | i          |
| <b>TPI-L14 .....</b>                                | <b>iii</b> |
| Package Contents .....                              | iii        |
| TPI-L14 Hardware Features .....                     | iii        |
| <b>PDU Installation .....</b>                       | <b>1</b>   |
| <b>Setup Wizard .....</b>                           | <b>2</b>   |
| Basic IP Configuration .....                        | 5          |
| <b>Connect additional devices to your PDU .....</b> | <b>7</b>   |
| Access your PDU management page .....               | 8          |
| <b>LCD Display .....</b>                            | <b>8</b>   |
| View your PDU status information .....              | 8          |
| <b>Dashboard .....</b>                              | <b>9</b>   |
| View your PDU status information .....              | 9          |
| <b>Switch View .....</b>                            | <b>11</b>  |
| View your switch status information .....           | 11         |
| <b>Outlet .....</b>                                 | <b>12</b>  |
| <b>Settings .....</b>                               | <b>12</b>  |
| Set your outlet information .....                   | 12         |
| <b>Power On Delay .....</b>                         | <b>12</b>  |
| Set your outlet information .....                   | 12         |
| <b>Remote Reboot Delay .....</b>                    | <b>13</b>  |
| Delay outlet power-on remote reboot .....           | 13         |
| <b>Safe Range Settings .....</b>                    | <b>13</b>  |
| Set your outlets to perform in a safe range .....   | 13         |
| <b>Scheduling .....</b>                             | <b>13</b>  |
| Pre-defined schedule .....                          | 13         |
| Set a new schedule .....                            | 14         |

|                                          |           |
|------------------------------------------|-----------|
| Auto Reboot .....                        | 14        |
| Cloud Settings .....                     | 16        |
| Network Settings.....                    | 16        |
| IPv4 Interface.....                      | 16        |
| Spanning Tree.....                       | 17        |
| Device Setting.....                      | 18        |
| Time and Date Settings.....              | 19        |
| <b>Firmware Upgrade .....</b>            | <b>20</b> |
| Firmware Update .....                    | 20        |
| Firmware Upgrade via HTTP Settings ..... | 20        |
| Config Backup/Restore .....              | 20        |
| Reboot/Reset .....                       | 21        |
| <b>Logging .....</b>                     | <b>22</b> |
| Remote Logging.....                      | 22        |
| Log Table .....                          | 22        |
| Email Alert .....                        | 22        |

|                                                      |           |
|------------------------------------------------------|-----------|
| <b>Technical Specifications .....</b>                | <b>24</b> |
| TPI-06 .....                                         | 24        |
| TPI-L14 .....                                        | 25        |
| <b>Quick Installation Guide Troubleshooting.....</b> | <b>26</b> |
| <b>Appendix .....</b>                                | <b>27</b> |

## Product Overview

### TPI-06



### TPI-06

#### Package Contents


In addition to your switch, the package includes:

- TPI-06
- Quick Installation Guide
- Power Cord (1.8m / 6 ft.)
- Rack mount kit

If any package contents are missing or damaged, please contact the retail store, online retailer, or reseller/distributor from which the product was purchased.


#### TPI-06 Hardware Features

##### Front View

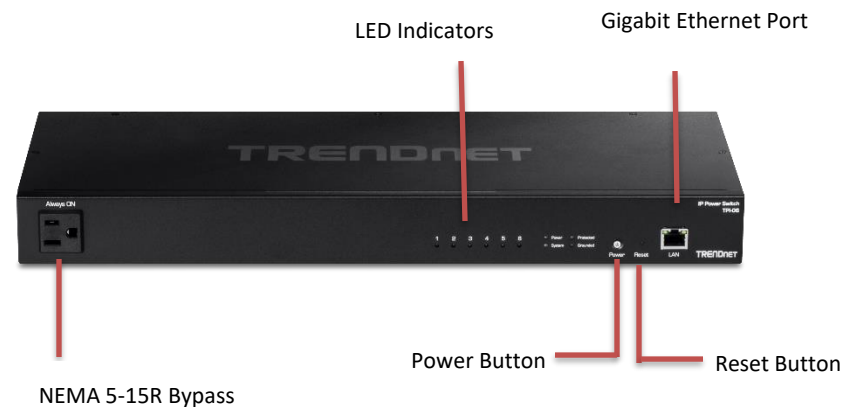

- **Reset Button** – Press and hold the button 1~5 seconds and release to reboot the device. Pressing the button more than 6 seconds will reset the switch to factory defaults. The ports LEDs will turn off to indicate that the reset was initiated.
- **Power Button** – Press the power button to power on and off the power outlets (port 1-6). The NEMA 5-15 Bypass outlet will still receive power.
- **Gigabit Ethernet Port** – Gigabit Ethernet port used to connect your device to your network
- **LED Indicators** – Used to display information
- **NEMA 5-15R Bypass** – Extra power outlet and is always on

Back View

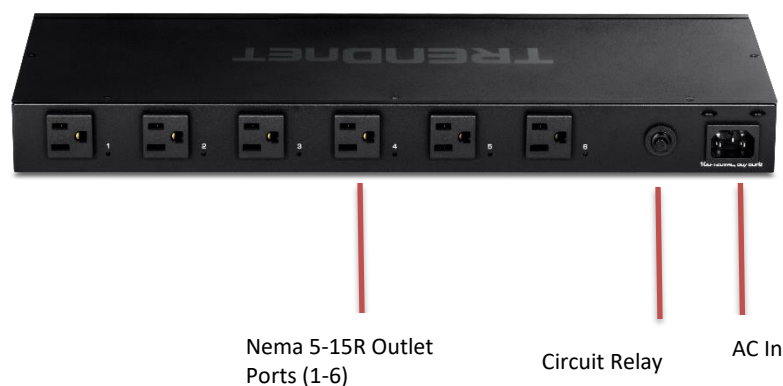**Diagnostic LEDs**

- Power LED**

|       |          |                       |
|-------|----------|-----------------------|
| Green | Solid    | Power is On           |
|       | Blinking | Firmware is upgrading |
|       | Off      | Power is off          |

- System**

|       |       |                         |
|-------|-------|-------------------------|
| Green | Solid | System is booting       |
|       | Solid | System is ready         |
| Red   | Solid | Error with an outlet(s) |
|       | Off   | Power is off            |

- Ground**

|       |       |                           |
|-------|-------|---------------------------|
| Green | Solid | AC outlet is grounded     |
|       | Off   | AC outlet is not grounded |

- Protected**

|       |       |                                                 |
|-------|-------|-------------------------------------------------|
| Green | Solid | MOV (Metal Oxide Varistor) is active            |
| Red   | Solid | MOV is not active                               |
|       | Off   | MOVs have opened removing power from the outlet |

- Outlets (Port 1-6)**

|       |       |                   |
|-------|-------|-------------------|
| Green | Solid | The outlet is on  |
|       | Off   | The outlet is off |

- LAN LED**

Link/Activity

|       |       |          |                          |
|-------|-------|----------|--------------------------|
| Right | Green | Blinking | Link/Act                 |
|       |       | Solid    | Network is connected     |
|       |       | Off      | No connection            |
| Left  | Green | Solid    | Connection at 1000Mbps   |
|       |       | Off      | Connection at 10/100Mbps |

## TPI-L14



**TPI-L14**

### Package Contents


In addition to your switch, the package includes:

- TPI-L14
- Quick Installation Guide
- Power Cord (1.8m / 6 ft.)
- Rack mount kit

If any package contents are missing or damaged, please contact the retail store, online retailer, or reseller/distributor from which the product was purchased.


### TPI-L14 Hardware Features

#### Front View

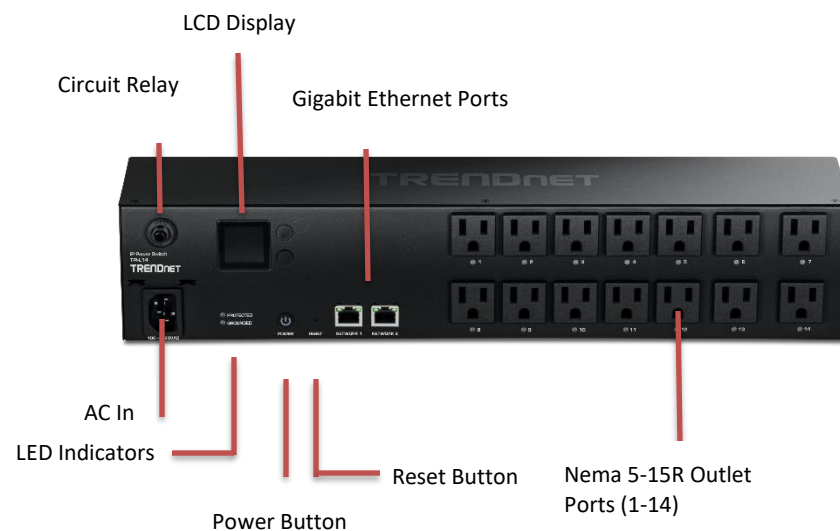

- **LCD Display and Buttons** – Displays the system information and power usage. Use the buttons besides the screen to change displays and adjust select settings
- **Reset Button** – Press and hold the button 1~5 seconds and release to reboot the device. Pressing the button more than 6 seconds will reset the switch to factory defaults. The ports LEDs will turn off to indicate that the reset was initiated.
- **Power Button** – Press the power button to power on and off the power outlets (port 1-14).
- **Gigabit Ethernet Ports** – Gigabit Ethernet ports used to connect your device to your network
- **LED Indicators** – Used to display information

Back View

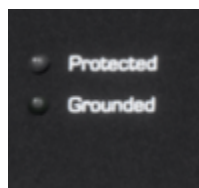**Diagnostic LEDs**

- **Power LED (on power button)**

|       |          |                       |
|-------|----------|-----------------------|
| White | Solid    | Power is On           |
|       | Blinking | Firmware is upgrading |
|       | Off      | Power is off          |

- **Ground**

|       |       |                           |
|-------|-------|---------------------------|
| Green | Solid | AC outlet is grounded     |
|       | Off   | AC outlet is not grounded |

- **Protected**

|       |       |                                                 |
|-------|-------|-------------------------------------------------|
| Green | Solid | MOV (Metal Oxide Varistor) is active            |
| Red   | Solid | MOV is not active                               |
|       | Off   | MOVs have opened removing power from the outlet |

- **Outlets (Port 1-14)**

|       |       |                   |
|-------|-------|-------------------|
| Green | Solid | The outlet is on  |
|       | Off   | The outlet is off |

- **LAN LEDs**

Link/Activity

|       |       |          |                          |
|-------|-------|----------|--------------------------|
| Right | Green | Blinking | Link/Act                 |
|       |       | Solid    | Network is connected     |
|       |       | Off      | No connection            |
| Left  | Green | Solid    | Connection at 1000Mbps   |
|       |       | Off      | Connection at 10/100Mbps |


## PDU Installation

### Desktop Hardware Installation

The site where you install the hub stack may greatly affect its performance. When installing, consider the following pointers:

**Note:** Your PDU model may be different than the one shown in the example illustrations.


- Install the PDU in a fairly cool and dry place.
- Install the PDU in a site free from strong electromagnetic field generators (such as motors), vibration, dust, and direct exposure to sunlight.
- Leave at least 10cm of space at the front and rear of the hub for ventilation.
- Install the PDU on a sturdy, level surface that can support its weight, or in an EIA standard-size equipment rack. For information on rack installation, see the next section, Rack Mounting.
- When installing the PDU on a level surface, attach the rubber feet to the bottom of each device. The rubber feet cushion the hub and protect the hub case from scratching.

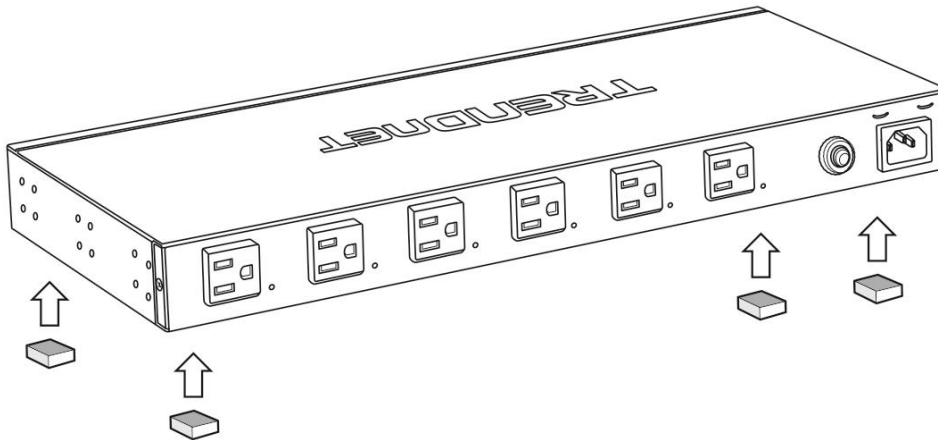


### Rack Mount Hardware Installation

The switch can be mounted in an EIA standard-size, 19-inch rack, which can be placed in a wiring closet with other equipment. Attach the mounting brackets at the switch's front panel (one on each side), and secure them with the provided screws.

**Note:** The switch model may be different than the one shown in the example illustrations.

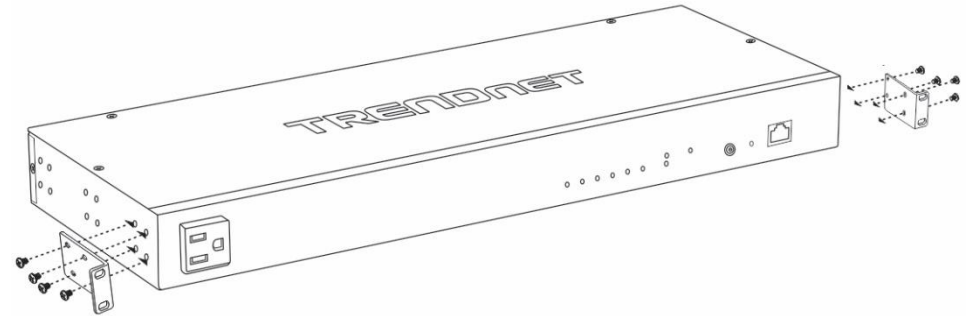

Then, use screws provided with the equipment rack to mount each switch in the rack.

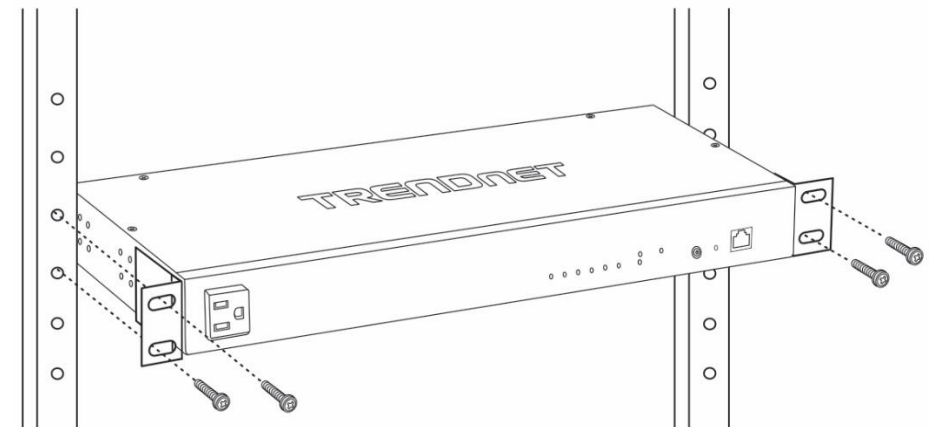



## Setup Wizard

### Section A: Configuring the switch with TRENDnet Hive Cloud Management


**Note:** Configuration with TRENDnet Hive Cloud Management requires an existing network with Internet access and DHCP server for automatic IP addressing. The PDU must be configured to reach the Internet in order to connect to your TRENDnet Hive Cloud Management account.

1. Assign a static IP address to your computer's network adapter in the subnet of 192.168.10.x (e.g. 192.168.10.25) and a subnet mask of 255.255.255.0.
2. Open your web browser, and type the IP address of the PDU in the address bar, and then press Enter. The default IP address is 192.168.10.80.
3. Enter the User Name and Password, and then click **Login**. By default:

User Name: **admin**

Password: **admin**

**Note:** User name and password are case sensitive.

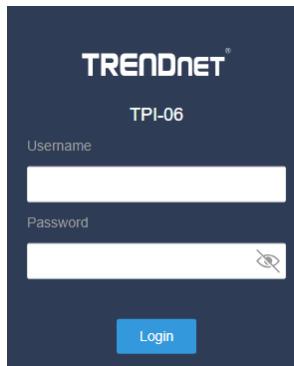

4. Select **Next** to move onto the next screen

**Note:** If the switch setup wizard does not appear, you can click the setup wizard button in the top right section of the switch management page to access the switch setup wizard.



### PDU Setup Wizard

This wizard will guide you through a step-by-step process to configure your PDU and connect to the Internet.

[Next](#)[cancel](#)

5. Change your login password and click **Next**. The default password is **admin**.

**Note:** If entering a new password, please note that you will need to use the new password when logging into the switch management page for local management access moving forward.

#### Step 1: Change your login credentials

User Name

admin

Password

\*\*\*\*\*

Password Retype

\*\*\*\*\*

[previous](#)[Next](#)[cancel](#)

6. For the method of management, select **TRENDnet Hive**.

**Note:** Configuration with TRENDnet Hive Cloud Management requires an existing network with Internet access and DHCP server for automatic IP addressing. The PDU must be configured to reach the Internet in order to connect to your TRENDnet Hive Cloud Management account.

## Step 2: Select the method of management for this PDU

|                                  |                                                                                                                                                                                                                                                                                                                                                                                                                   |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="radio"/>            | <b>TRENDnet Hive:</b> Choose this option if you would like to manage your PDU through TRENDnet's Cloud Management. This option will automatically apply a DHCP connection (Dynamic IP Address) to your PDU.<br><b>Note:</b> You will need a TRENDnet Hive account with a valid license to complete setup with this process. Choosing this option will prompt an immediate re-login to the device management page. |
| <input checked="" type="radio"/> | <b>Default Management:</b> Choose this option if you would like to manage your PDU through the GUI. You may opt in to use TRENDnet Hive at a later date. Please note, this will set the IP of the PDU to 192.168.10.80/255.255.255.0.                                                                                                                                                                             |

7. After selecting **TRENDnet Hive**, click **Next** and change your computer's network adapter settings to obtain an IP address automatically to continue the rest of the setup wizard.

**Note:** After selecting the TRENDnet Hive option and clicking Next, the switch will immediately change the PDU default IP address settings to DHCP and obtain IP address settings from your existing network.

8. Select your **Time Zone**, then click **Next**.

## Step 3: Date/Time Settings

|              |                                                  |
|--------------|--------------------------------------------------|
| Current Time | 31 Jan 2022 18:01:34                             |
| Time Zone    | (GMT-08:00) Pacific Time (US & Canada),Tijuana ▼ |

9. Enter the user account credentials for your TRENDnet Hive Cloud Management account to register the PDU with your account, then click **Next**.

## Step 4: Input your Hive credentials to sync the switch to your Hive account.

|          |               |
|----------|---------------|
| Username | TRENDnet Hive |
| Password | .....         |

10. The summary page will display all of the configuration settings that were applied through the setup wizard. Click **Apply** to complete the setup wizard.

**Note:** You may want to note the new password and IP address settings for local management access to the PDU.

Switch Setup Wizard

| System Information                                                                                                                                                                                   |                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| Write down the below information and store it in a safe place. The below information are the current settings that will be applied to the switch. Click <b>Apply</b> below to finalize the settings. |                      |
| System Time                                                                                                                                                                                          | 08 Dec 2021 13:24:14 |
| Username                                                                                                                                                                                             | admin                |
| Password                                                                                                                                                                                             | *****                |
| Switch IP Address                                                                                                                                                                                    | 192.168.10.111       |
| Subnet Mask                                                                                                                                                                                          | 255.255.255.0        |
| Gateway IP Address                                                                                                                                                                                   | 192.168.10.254       |
| DNS                                                                                                                                                                                                  | 192.168.1.249        |


10. To verify the PDU is now successfully registered with your TRENDnet Hive Cloud Management account, the Hive button in the top right will be green to indicate successful registration.



## Section B: Configuring the PDU for local network management

1. Assign a static IP address to your computer's network adapter in the subnet of 192.168.10.x (e.g. 192.168.10.25) and a subnet mask of 255.255.255.0.
2. Open your web browser, and type the IP address of the PDU in the address bar, and then press Enter. The default IP address is 192.168.10.80.
3. Enter the User Name and Password, and then click **Login**. By default:  
 User Name: **admin**  
 Password: **admin**

**Note:** User name and password are case sensitive.

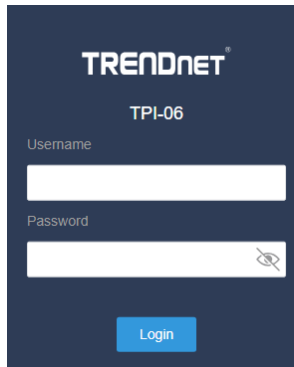

TRENDnet  
TPI-06  
Username  
Password  
Login

4. Select **Next** to move onto the next screen

**Note:** If the PDU setup wizard does not appear, you can click the setup wizard button in the top right section of the switch management page to access the switch setup wizard.



## PDU Setup Wizard

This wizard will guide you through a step-by-step process to configure your PDU and connect to the Internet.

Next

cancel

5. Change your login password and click **Next**. The default password is **admin**.

**Note:** If entering a new password, please note that you will need to use the new password when logging into the PDU management page for local management access moving forward.

### Step 1: Change your login credentials

|                 |       |
|-----------------|-------|
| User Name       | admin |
| Password        | ..... |
| Password Retype | ..... |

previous Next cancel

6. For the method of management, select Default Management.

### Step 2: Select the method of management for this PDU

- ☐ **TRENDnet Hive:** Choose this option if you would like to manage your PDU through TRENDnet's Cloud Management. This option will automatically apply a DHCP connection (Dynamic IP Address) to your PDU.  
**Note:** You will need a TRENDnet Hive account with a valid license to complete setup with this process. Choosing this option will prompt an immediate re-login to the device management page.
- ☒ **Default Management:** Choose this option if you would like to manage your PDU through the GUI. You may opt in to use TRENDnet Hive at a later date. Please note, this will set the IP of the PDU to 192.168.10.80/255.255.255.0.

previous

Next

cancel

7. Configure the PDU date and time settings, then click Next.

### Step 3: Date/Time Settings

|               |                                |
|---------------|--------------------------------|
| Current Time  | 31 Dec 2017 08:01:39           |
| Date Settings | 2023 / 07 / 03<br>(YYYY:MM:DD) |
| Time Settings | 03 : 04 : 39 (HH:MM:SS)        |

previous Next cancel

8. Configure the PDU IP address, subnet mask, gateway IP address, and DNS settings to match the requirements of your existing network using the fields provided, then click Next.

**Note:** If the PDU IP address settings are changed to a different IP network subnet such as 192.168.1.x, 192.168.2.x, etc. your computer's network adapter settings will need to

be changed match the new IP address settings configured on the PDU in order to access the PDU management page.

**Step 4: Input your IP settings in the fields below**

|                    |                |
|--------------------|----------------|
| IP Address         | 192.168.10.80  |
| Subnet Mask        | 255.255.255.0  |
| Gateway IP Address | 192.168.10.254 |
| DNS1               | 8.8.8.8        |
| DNS2               | 8.8.4.4        |

previous Next cancel

9. The summary page will display all of the configuration settings that were applied through the setup wizard. Click Apply to complete the setup wizard.

**Note:** You may want to note the new password and IP address settings for local management access to the PDU.


**System Information**

Write down the above information and store it in a safe place.  
The below information are the current settings that will be applied to the PDU. Click **Apply** below to finalize the settings.

|                    |                      |
|--------------------|----------------------|
| System Time        | 03 Jul 2023 03:04:39 |
| Username           | admin                |
| Password           | *****                |
| IP Address         | 192.168.10.80        |
| Subnet Mask        | 255.255.255.0        |
| Gateway IP Address | 192.168.10.254       |
| DNS1               | 8.8.8.8              |
| DNS2               | 8.8.4.4              |


previous Apply cancel

## Basic IP Configuration

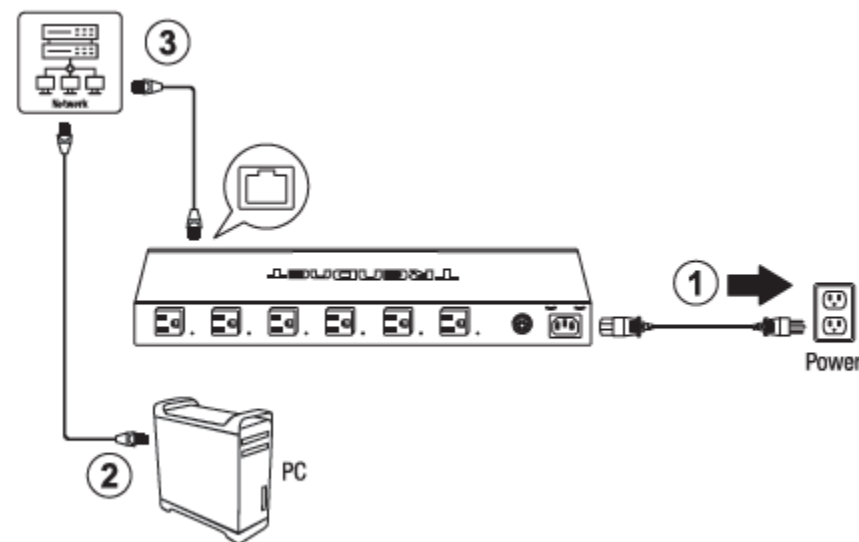

3. Assign a static IP address to your computer's network adapter in the subnet of 192.168.10.x (e.g. 192.168.10.25) and a subnet mask of 255.255.255.0.

4. Open your web browser, and type the IP address of the PDU in the address bar, and then press **Enter**. The default IP address is **192.168.10.80**.




5. Enter the User Name and Password, and then click **Login**. By default:


User Name: **admin**

Password: **admin**

**Note:** User name and password are case sensitive.

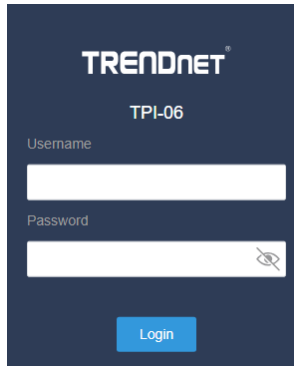The image shows the login page for a TRENDnet TPI-06 device. It has a dark blue background with the TRENDnet logo at the top. Below the logo, it says 'TPI-06'. There are two input fields: 'Username' and 'Password'. The 'Password' field has a toggle icon to show or hide the password. At the bottom, there is a blue 'Login' button.

6. Click **Cancel** on the setup wizard if necessary, then click **System**, and then click **Network Settings**.

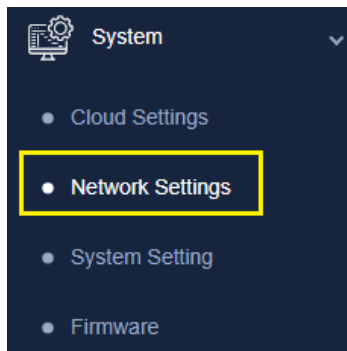

7. Configure the PDU IP address settings to be within your network subnet, then click **Apply** under the **Ethernet Settings**.

### Ethernet Settings

IP Network Setting

Static

Gateway

192.168.10.254

IP Address

192.168.10.80

Primary DNS

8.8.8.8

Subnet Mask

255.255.255.0

Secondary DNS

8.8.4.4


9. After clicking **Apply** you will need to log in using the new updated IP Address.

**Be sure to re-log back into the switch using the new IP address and save the configuration to your flash.**

## Connect additional devices to your PDU

You can connect computers or other electronic devices to your PDU to power them on. The PDU can be connected to your network with an ethernet cable to manage the PDU. Check the status of the LED indicators on the front panel of your PDU to ensure the physical cable connection from your computer or device.

**Note:** If you encounter issues connecting to your network, there may be a problem with your computer or device network settings. Please ensure that your computer or device network settings (also called TCP/IP settings) are configured properly within the network subnet your PDU is connected.

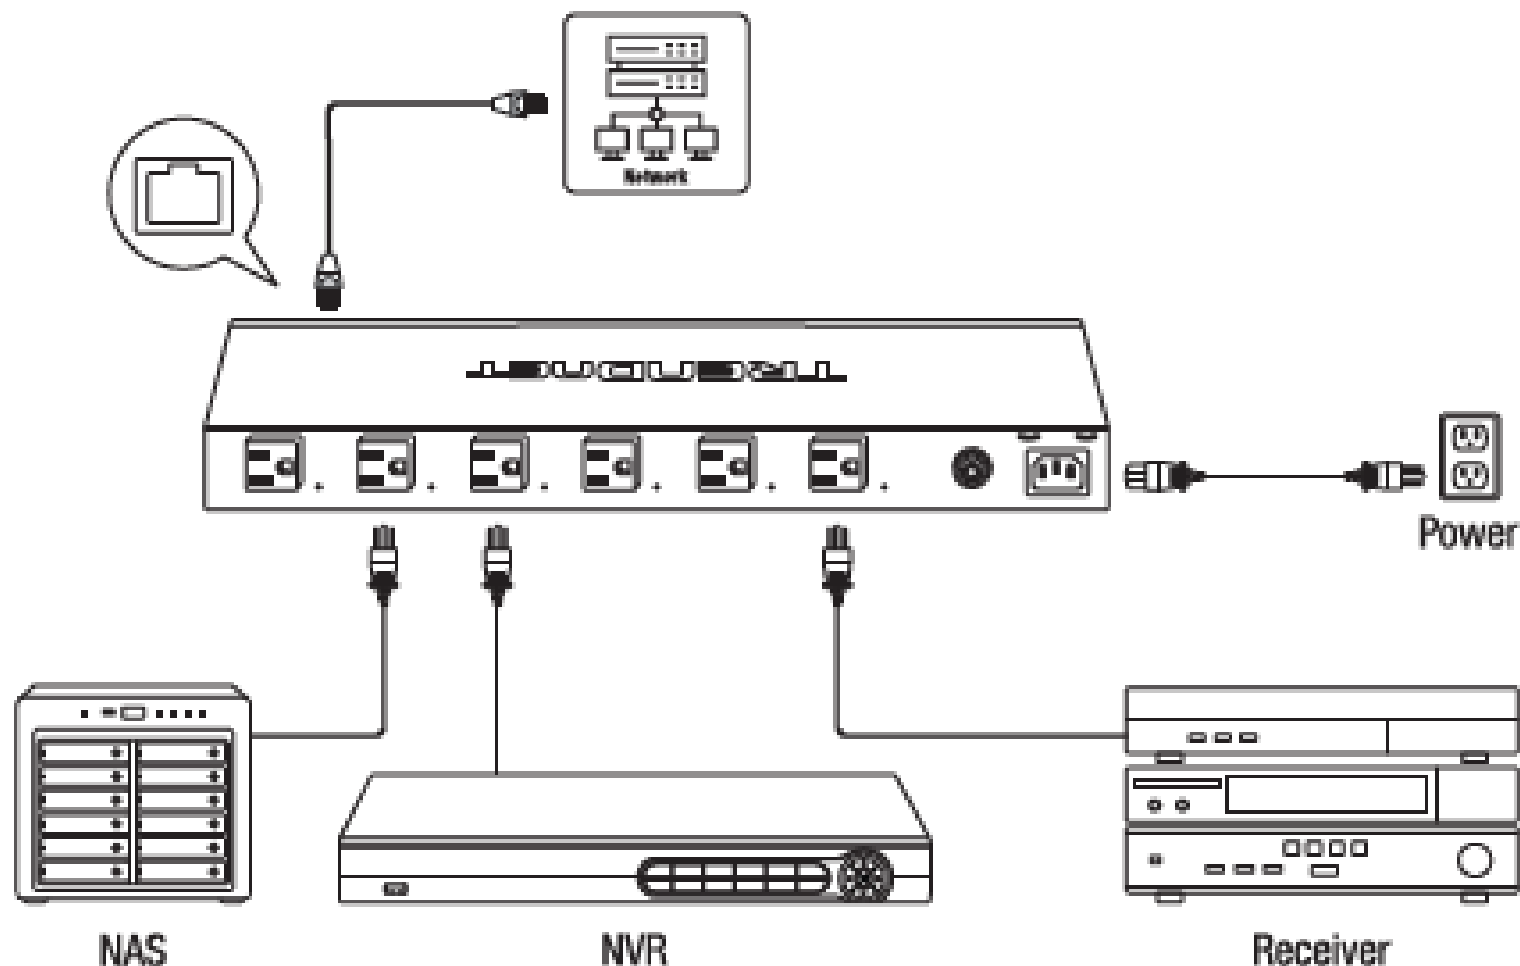


## Access your PDU management page

**Note:** Your PDU default management IP address `http://192.168.10.80` is accessed through the use of your Internet web browser (e.g. Internet Explorer®, Firefox®, Chrome™, Safari®, Opera™) and will be referenced frequently in this User's Guide. Throughout this user's guide, the term *Web Configuration* will be used to reference access from web management page.

(probably don't need this anymore due to setup wizard)

1. Open your web browser and go to its IP address (default: `http://192.168.10.80`). Your PDU will prompt you for a user name and password.



2. Enter the user name and password. By default:

User Name: **admin**

Password: **admin**

**Note:** User Name and Password are case sensitive.

## LCD Display


(TPI-L14 only)

### View your PDU status information

Your PDU contains an LCD display that can display information directly on the unit. Use the buttons to navigate through the screens and select various options.




Displays the IP and MAC Address of the PDU

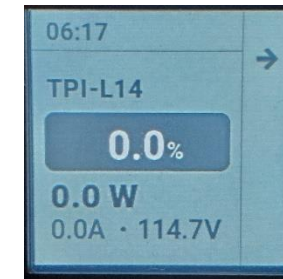


Displays the total power consumption, current draw, and voltage



Displays the power consumption of the outlet. Use the menu button to turn on/off or power cycle the outlet

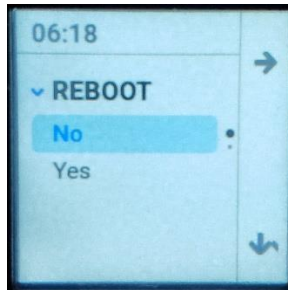

Select **Yes** to reboot the unit.

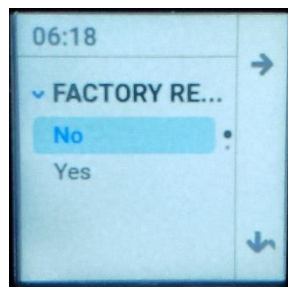

Select **Yes** to erase all configured settings and reset to factory defaults. Before resetting, make sure to log into the management page to back up your settings (**System > Firmware**).

## Dashboard

### View your PDU status information

#### Dashboard

You may want to check the general system information of your PDU such as firmware version, boot loader information and system uptime. Other information includes H/W version, RAM/Flash size, administration information, IPv4 and IPv6 information.

1. Log into your PDU management page (see "Access your PDU management page" on page 5).
2. Click on **Dashboard**.

#### Switch Information

- **System Uptime** – The duration your PDU has been running continuously without a restart/power cycle (hard or soft reboot) or reset.
- **Firmware Version**: The current software or firmware version your switch is running.

| Switch Information |                                       |
|--------------------|---------------------------------------|
| System Uptime:     | 0 day(s),02 hr(s),05 min(s),01 sec(s) |
| Firmware Version:  | 1.1.0.13                              |

#### System Status

- **Voltage / Current**: Displays the current voltage and current being used
- **Frequency**: Displays the current frequency used
- **Temperature**: Displays the current internal temperature of the unit

| System Status      |                    |
|--------------------|--------------------|
| Voltage / Current: | 115.4 Volt / 0.0 A |
| Frequency:         | 59.9               |
| Temperature:       | 96.8 °F            |



## Administration Information

- **System Name** – Displays the identifying system name of your PDU. This information can be modified under the **System** section.
- **System Location** - Displays the identifying system location of your PDU. This information can be modified under the **System** section.
- **System Contact** – Displays the identifying system contact or system administrator of your PDU. This information can be modified under the **System** section.

| Administration Information |            |
|----------------------------|------------|
| System Name :              | TPI-06     |
| System Location:           | MyLocation |
| System Contact:            | MyContact  |

## System MAC Address, IPv4 Information

- **Serial Number:** Displays the serial number of the PDU
- **MAC Address:** Displays the switch system MAC address.
- **IP Address** – Displays the current IPv4 address assigned to your PDU.
- **Subnet Mask** – Displays the current IPv4 subnet mask assigned to your PDU.
- **Default Gateway** – Displays the current gateway address assigned to your PDU.

| System Information |                   |
|--------------------|-------------------|
| Serial Number:     | EP3D0A1000001     |
| MAC Address:       | 3C:8C:F8:FD:74:8C |
| IP Address:        | 192.168.10.80     |
| Subnet Mask:       | 255.255.255.0     |
| Default Gateway:   | 192.168.10.1      |

## IPv6 Information

- **IPv6 Unicast Address / Prefix Length:** Displays the current IPv6 address and prefix assigned to your PDU.
- **IPv6 Default Gateway:** Displays the current IPv6 default gateway address assigned to your PDU.
- **Link Local Address / Prefix Length:** Displays the current Link Local address and prefix length assigned to your PDU

| IPv6 Information                       |                             |
|----------------------------------------|-----------------------------|
| IPv6 Unicast Address / Prefix Length : | 2001:db80::80/64            |
| IPv6 Default Gateway:                  | 2001:db80::1                |
| Link Local Address / Prefix Length:    | fe80::3e8c:f8ff:fed:748c/64 |

## Automatic Network Features


- **IPv4 DHCP Client Mode:** Displays if your PDU IPv4 address setting is set to DHCP client.
- **IPv6 DHCP Client Mode:** Displays if your PDU IPv6 address setting is set to DHCP client.

| Automatic Network Features |        |          |
|----------------------------|--------|----------|
| IPv4 DHCP Mode:            | Client | Disabled |
| IPv6 DHCP Mode:            | Client | Disabled |


### Power Consumption Graphs

- **Total:** Displays the max number of watts available for use
- **Used:** Displays the number of watts currently already being used
- **Available:** Displays the amount of wattage left available for power

Below graph shows the max number of wattage currently being used

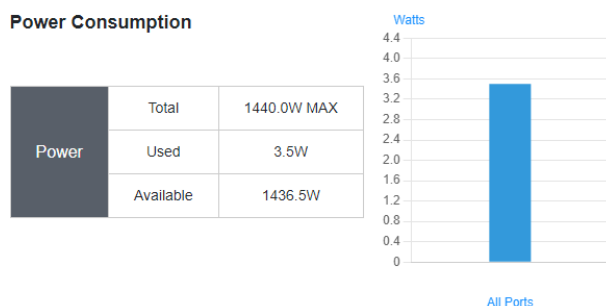

Below graph shows the max number of wattage being consumed by each port

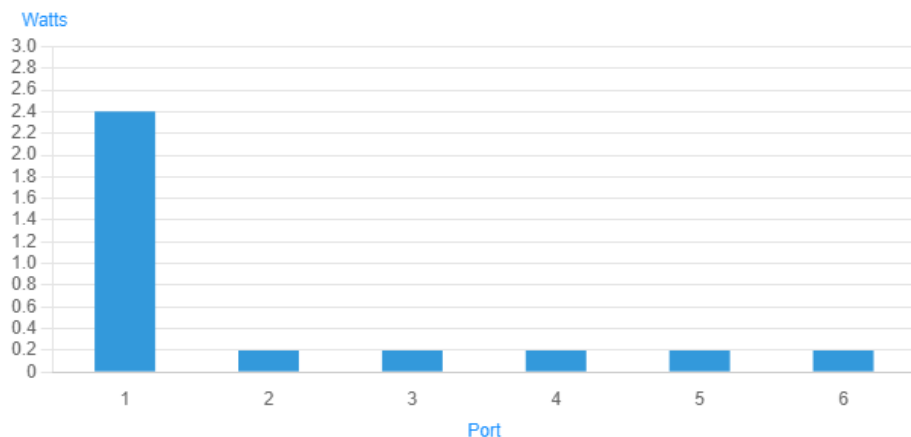

## Switch View

### View your switch status information

*Dashboard > Switch View*

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Dashboard**, then click on **Switch View**. The switch view shows the ports that are connected.



3. Review the settings below.

- **Outlet:** Designates the port number that is displayed.
- **Outlet Name:** Displays the current name of the outlet
- **Outlet On/Off:** Enable and disable PoE power on the specified port with the toggle switch
- **Outlet Status:** Displays if the outlet is on or off
- **Power Consumption:** Displays the current power consumption of the PD device in Watts.
- **Voltage:** Displays the current voltage output for the outlet
- **Current:** Displays the current output for the outlet
- **Reboot:** Reboot the selected power outlet
- **Power Cycle:** Reboot all of the outlets

| Outlet | Outlet Name | Outlet On/Off                           | Outlet Status | Power Consumption | Voltage | Current | Reboot | Power Cycle |
|--------|-------------|-----------------------------------------|---------------|-------------------|---------|---------|--------|-------------|
| 1      | outlet1     | OFF <input checked="" type="checkbox"/> | Power On      | 6.7W              | 115V    | 0.1 A   | Reboot | Power Cycle |
| 2      | outlet2     | OFF <input checked="" type="checkbox"/> | Power On      | 0.2W              | 115V    | 0.0 A   | Reboot |             |
| 3      | outlet3     | OFF <input checked="" type="checkbox"/> | Power On      | 0.2W              | 115V    | 0.0 A   | Reboot |             |
| 4      | outlet4     | OFF <input checked="" type="checkbox"/> | Power On      | 0.2W              | 115V    | 0.0 A   | Reboot |             |
| 5      | outlet5     | OFF <input checked="" type="checkbox"/> | Power On      | 0.2W              | 115V    | 0.0 A   | Reboot |             |
| 6      | outlet6     | OFF <input checked="" type="checkbox"/> | Power On      | 0.2W              | 115V    | 0.0 A   | Reboot |             |

## Outlet

### Settings


#### Set your outlet information

*Outlet > Settings*

This section explains how to assign a name. This information helps in identifying each specific outlet among other outlets in the same local area network. Entering this information is optional.

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Settings**.
3. Review the settings. When you have completed making changes, click **Apply** to save the settings.

- **Outlet Name** - Specifies the name defined for each specific outlet
- **Power On Delay/Power Off Delay**: set the delay time for powering on and powering off the device connected to this outlet.

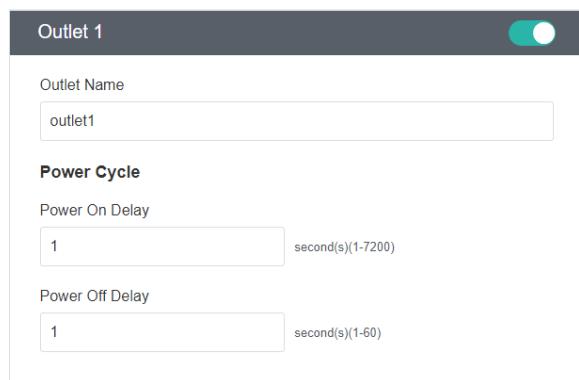

Outlet 1

Outlet Name

outlet1

**Power Cycle**

Power On Delay

1 second(s)(1-7200)

Power Off Delay

1 second(s)(1-60)

4. Click **Apply**.

Apply

### Power On Delay


#### Set your outlet information

*Outlet > Settings*

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Settings**.
3. Enable **Power On Delay** for the PDU to follow the rules set under **Settings**.

Power On Delay 

4. Select the specified port to enable the **Power On Delay** port.

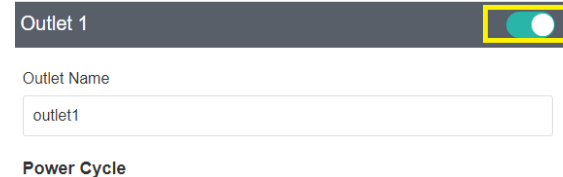

Outlet 1

Outlet Name

outlet1

**Power Cycle**

5. Click **Apply**.


Apply

## Remote Reboot Delay

### Delay outlet power-on remote reboot

*Outlet > Settings*

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Settings**.
3. In **Outlet Remote Reboot Delay**, enter the time to delay powering on the port when the port is rebooted.

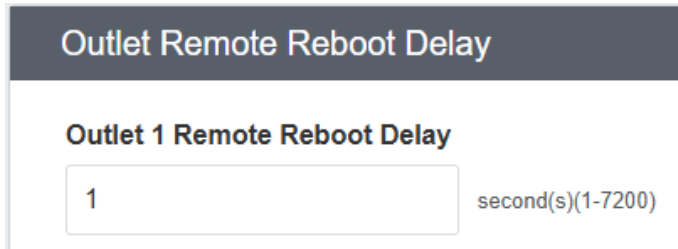

4. Click **Apply**.

## Safe Range Settings

### Set your outlets to perform in a safe range

*Outlet > Settings*

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Settings**.

3. Enable **Range** to enable this feature



4. Set the safe Voltage range for your device in your region. By default, the range is set between 95 – 130V.



5. Click **Apply**.



## Scheduling

### Pre-defined schedule


*Outlet > Schedule*

Scheduling enables the settings of when the connected devices could be powered on or off. Schedules could be set by day and time.

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Schedule**.
3. Edit from the pre-defined schedule by clicking the **Edit** button



4. Review the settings and click **Apply** to save the settings

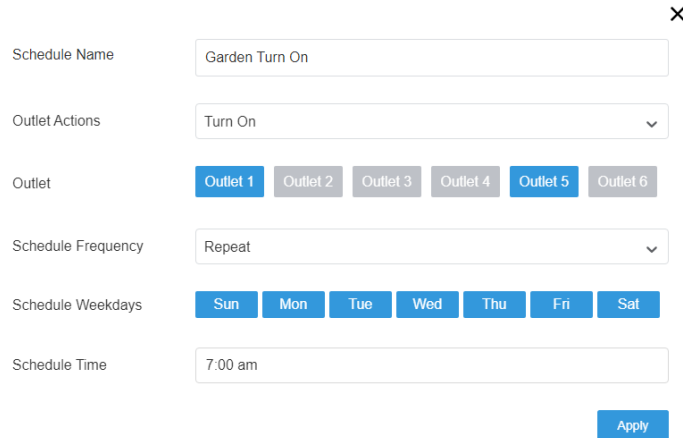

Schedule Name: Garden Turn On

Outlet Actions: Turn On

Outlet: Outlet 1, Outlet 2, Outlet 3, Outlet 4, Outlet 5, Outlet 6

Schedule Frequency: Repeat

Schedule Weekdays: Sun, Mon, Tue, Wed, Thu, Fri, Sat

Schedule Time: 7:00 am

Apply


- **Schedule Name:** Input a name for this schedule
- **Outlet Actions:** Select **Turn On**, **Turn Off**, or **Reset** for the type of action the selected outlets will take
- **Outlet:** Select the outlets that this schedule will apply to
- **Schedule Frequency:** Select **Repeat** for the schedule to happen week after week, or **Once** for the schedule to only happen one time
- **Schedule Weekday:** Select the days this schedule will apply to  
**Note:** This selection will appear when **Repeat** is set for the **Frequency**.
- **Schedule Date:** Set the date when this rule will apply  
**Note:** This selection will appear when **Once** is set for the **Frequency**.
- **Schedule Time:** Select the time when the schedule will apply to

5. Toggle the switch to the right to enable the schedule




#### Set a new schedule

1. Log into your PDU management page (see "Access your PDU management page" on page 5).
2. Click on **Outlet**, and click on **Schedule**.
3. Select **New Schedule** to create a new schedule



4. Review the settings and click **Apply** to save the settings

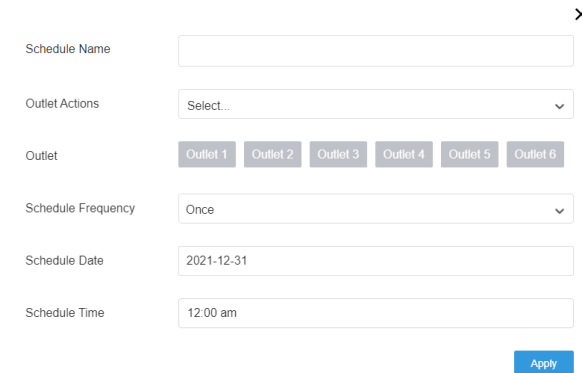

Schedule Name:

Outlet Actions: Select...

Outlet: Outlet 1, Outlet 2, Outlet 3, Outlet 4, Outlet 5, Outlet 6

Schedule Frequency: Once

Schedule Date: 2021-12-31

Schedule Time: 12:00 am

Apply

- **Schedule Name:** Input a name for this schedule
- **Outlet Actions:** Select **Turn On**, **Turn Off**, or **Reset** for the type of action the selected outlets will take
- **Outlet:** Select the outlets that this schedule will apply to
- **Schedule Frequency:** Select **Repeat** for the schedule to happen week after week, or **Once** for the schedule to only happen one time
- **Schedule Weekday:** Select the days this schedule will apply to  
**Note:** This selection will appear when **Repeat** is set for the **Frequency**.
- **Schedule Date:** Set the date when this rule will apply  
**Note:** This selection will appear when **Once** is set for the **Frequency**.
- **Schedule Time:** Select the time when the schedule will apply to

5. Toggle the switch to the right to enable the schedule



### Auto Reboot

#### Ping Test

*Outlet > Auto Reboot*

Auto Reboot is used to check the connection between the PDU and the device connected to it. The PDU send a ping, and if the device does not respond, the PDU will try to revive the device by doing a power cycle of the connected device.

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Auto Reboot**.
3. Click **Ping Test** to run a ping test to the pre-selected address. Click **Delete** to remove this selection.

| Hosts to Check Alive |            |
|----------------------|------------|
| Host Name            | google.com |
| Website/IP Address   | google.com |

**Set a new IP to ping**

1. Log into your PDU management page (see “Access your switch management page” on page 5).
2. Click on **Outlet**, and click on **Auto Reboot**.
3. Input the **Host Name** and the **Website/IP Address** for the PDU to ping.

| Hosts to Check Alive |                      |
|----------------------|----------------------|
| Host Name            | <input type="text"/> |
| Website/IP Address   | <input type="text"/> |

4. Click **Ping Test** to run a test to see if the connection is active.
5. Click **Add** to save this to one of the destinations for a ping test.

**Timeout Settings**

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Auto Reboot**.
3. Review the settings and click **Save** to save your settings.

| Timeout Settings                |                                                                   |
|---------------------------------|-------------------------------------------------------------------|
| Ping interval                   | <input type="text" value="60"/> <small>second(x)(50-1200)</small> |
| Number of Ping loss to time-out | <input type="text" value="5"/> <small>time-out(x)(1-100)</small>  |

- **Ping interval:** Set the interval (in seconds) between each ping
- **Number of Ping loss to time out:** Set the number of miss pings before it times out

**Auto Outlet Reboot**

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Outlet**, and click on **Auto Reboot**.
3. Review the settings and click **Save** to save the settings.

**Outlet 1** 

Rule  
All selected hosts time-out

Host  
Google google.com

Off-Delay(Sec)  
1

Ping Delay(Sec)  
60

Reboot Attempts  
3

Stop Reboot Time(min)  
60

- **Rule:** Select the rule to apply for the selected outlet
  - **All selected hosts time-out:** The rule only applies when all the selected hosts have timed out after a ping test
  - **Any selected hosts time-out:** The rule only applies when any of the selected hosts have timed out after a ping test
- **Host:** Displays a list of available hosts to ping.
- **Off-Delay (Sec):** Input the duration that the PDU will wait before turning off the power to the outlet
- **Ping Delay (Sec):** Set the time interval between each ping
- **Reboot Attempts:** Set the max number of reboots before the PDU stops rebooting
- **Stop Reboot Time (min):** Input the time it takes for the connected device to boot up

4. Toggle the PDU to the right to enable **Auto Reboot** for the selected outlet



## Cloud Settings

System > Cloud Settings

This section allows you to setup your device for TRENDnet's Cloud Management (Hive). With TRENDnet Hive, you will be able to manage and monitor your device through the TRENDnet Cloud portal remotely.

1. Log into your PDU management page (see "Access your PDU management page" on page 5).
2. Click on **System**, and then **Cloud Settings**.
3. Review the settings. When you have completed making changes, click **Apply** to save the settings.

### Cloud Settings

|                                            |                                        |
|--------------------------------------------|----------------------------------------|
| Cloud Mode<br>Disabled                     | Register Status<br>0: unregistered     |
| Cloud User Name<br><input type="text"/>    | Cloud Online Status<br>0: connect fail |
| Cloud Password<br><input type="password"/> | Cloud Offline Reason<br>-              |

- **Cloud Mode:** Select **Enabled** to connect the device to TRENDnet Hive, and **Disabled** to disable connection.
- **Register Status:** Displays the current connection status between the device and TRENDnet Hive
- **Cloud User Name:** Enter your TRENDnet Hive account username
- **Cloud Password:** Enter your TRENDnet Hive account password

**Note:** Connecting your device to the cloud will lock all configurations to be managed by the cloud. To configure your device locally, please **Disable** your connection to the cloud.

## Network Settings

### IPv4 Interface

System > Network Settings

This section allows you to change your PDU IPv4 address settings. Typically, the IP address settings should be changed to match your existing network subnet in order to access the PDU management page on your network.

Default PDU IPv4 Address: 192.168.10.80

Default PDU IPv4 Subnet Mask: 255.255.255.0

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **Network Settings**.
4. To change the IPv4 IP address, input the new IPv4 address.

| Ethernet Settings  |               |
|--------------------|---------------|
| IP Network Setting | Gateway       |
| Static             | 192.168.10.1  |
| IP Address         | Primary DNS   |
| 192.168.10.80      | 8.8.8.8       |
| Subnet Mask        | Secondary DNS |
| 255.255.255.0      | 8.8.4.4       |

5. Review the settings. When you have completed making changes, click **Apply** to save the settings.

- **IP Network Setting:** Set the PDU with Static IP or DHCP mode
- **IP Address:** Enter the new PDU IP address you would like to statically assign. (e.g. 192.168.200.200)
- **Subnet Mask:** Enter the new PDU subnet mask. (e.g. 255.255.255.0)
- **Gateway:** Enter the IP address of the gateway connected to this PDU
- **Primary DNS / Secondary DNS:** Enter the DNS IP address for both the primary and secondary DNS

6. Click **Apply**.

Apply

## Spanning Tree

System > Spanning Tree

(TPI-L14 only)

Spanning Tree Protocol (STP) provides network topology for any arrangement of bridges/switches. STP also provides a single path between end stations on a network, eliminating loops. Loops occur when alternate routes exist between hosts. Loops in an extended network can cause bridges to forward traffic indefinitely, resulting in increased traffic and reducing network efficiency.

1. Log into your PDU management page (see “Access your PDU management page” on page 5).

2. Click on **System**, and then **Spanning Tree**.

3. Review the settings. Click **Apply** to save changes.

- **STP State:** Select **Enabled** to Enable Spanning Tree Protocol, or **Disabled** to disable STP.
- **Protocol Version:** Select **STP** or **RSTP** from the drop-down menu
- **Forward Delay:** The Forward Delay defines the time that the bridge spends in the listening and learning states. Its range is 4 - 30 seconds.
- **Hello Time:** The Hello Time is frequency with which the root bridge sends out a BPDU.
- **Maximum Age:** The Maximum Age defines the amount of time a port will wait for STP/RSTP information. MSTP uses this parameter when interacting with STP/RSTP domains on the boundary ports. Its range is 6 - 40 seconds
- **Transmit Hold Count:** The Transmit Hold Count specifies the maximum number of BPDUs that the bridge can send per second. Its range is 1 - 10.



| Spanning Tree Protocol Settings |                                                                         |
|---------------------------------|-------------------------------------------------------------------------|
| STP Status                      | <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled |
| Protocol Version                | RSTP                                                                    |
| Maximum Age                     | 20 6-40 sec                                                             |
| Hello Time                      | 2 1-10 sec                                                              |
| Forward Delay                   | 15 4-30 sec                                                             |
| Transmit Hold Count             | 6 1-10                                                                  |

4. Click **Apply**.

Apply

## Device Setting

System > System Setting

This section allows you modify the device settings such as password, device name, device location etc.

### Account Setting

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **System Settings**.
3. Review the settings.

| Account Setting        |       |
|------------------------|-------|
| Administrator Username | admin |
| Current Password       |       |
| New Password           |       |

- **Administrator Username:** Enter the new username
- **Current Password:** Enter the current password
- **New Password:** Enter the new password to change the current password.

4. Click **Apply**.

Apply

### General Setting

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **System Settings**.
3. Review the settings below:

| General     |                                                              |
|-------------|--------------------------------------------------------------|
| Device Name | TPI-06                                                       |
| Location    | MyLocation                                                   |
| Contact     | MyContact                                                    |
| Temperature | <input checked="" type="radio"/> °F <input type="radio"/> °C |

- **Device Name:** Enter the name of your PDU

- **Location:** Enter the location of where the PDU will be placed
- **Contact:** Enter the contact person's name
- **Temperature:** Select if the temperature should be displayed in Fahrenheit or Celsius.

4. Click **Apply**.



## Time Zone

This section allows you to set the time zone your device is located in to sink with the time.

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **System Settings**.
3. Select from the drop down menu to select your current time zone.

Time Zone

(GMT-08:00) Pacific Time (US/Canada), Tijuana

4. Click **Apply**.



## Time and Date Settings

*System > Time and Date Settings*

### NTP Server

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **Time and Date Settings**.
3. Review the settings.

| NTP Server    |                                                                                                                                                                                         |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NTP           | <input checked="" type="checkbox"/>                                                                                                                                                     |
| Target Server | <input type="text" value="pool.ntp.org"/><br><input type="text" value="time-a.nist.gov"/><br><input type="text" value="time-b.nist.gov"/><br><input type="text" value="time.nist.gov"/> |

- **NTP:** Enables the NTP time service.
- **Target Server:** Enter up to 4 network time servers that the PDU will use to pull time and date information automatically.

4. Click **Apply**.




### Manual settings

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **Time and Date Settings**.
3. Enter your date and time settings. To set the time zone, refer to the **Device Settings** section of this manual (**System > System Settings**).

| Date/Time Settings |                                                                                                                    |
|--------------------|--------------------------------------------------------------------------------------------------------------------|
| Date Settings      | <input type="text" value="2024"/> / <input type="text" value="12"/> / <input type="text" value="30"/> (YYYY.MM.DD) |
| Time Settings      | <input type="text" value="16"/> : <input type="text" value="01"/> : <input type="text" value="39"/> (HH:MM:SS)     |

4. Click **Apply**.

Apply

## Firmware Upgrade

### Firmware Update

*System > Firmware*

TRENDnet may periodically release firmware upgrades that may add features or fix problems associated with your TRENDnet PDU model and version. To check if there is a firmware upgrade available for your device, please check your TRENDnet model and version using the link. <http://www.trendnet.com/downloads/>

In addition, it is also important to verify if the latest firmware version is newer than the one your PDU is currently running. To identify the firmware that is currently loaded on your PDU, log in to the PDU, click on the System Info section or click on Tools and click on Firmware Upgrade. The firmware used by the PDU is listed as Runtime Image or Image Version. If there is a newer version available, also review the release notes to check if there were any new features you may want or if any problems were fixed that you may have been experiencing.

1. If a firmware upgrade is available, download the firmware to your computer.
2. Unzip the file to a folder on your computer.

**Please note the following:**

- Do not interrupt the firmware upgrade process. Do not turn off the device or press the Reset button during the upgrade.
- If you are upgrade the firmware using a laptop computer, ensure that the laptop is connected to a power source or ensure that the battery is fully charged.
- Disable sleep mode on your computer as this may interrupt the firmware upgrade process.
- Do not upgrade the firmware using a wireless connection, only using a wired network connection.
- Any interruptions during the firmware upgrade process may permanently damage your PDU.

### Firmware Upgrade via HTTP Settings

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **Firmware**.
3. Click on **Choose File** and select the correct firmware. Click **Upload** to upload PDU to the latest firmware.

**Note:** Firmware files will have a file extension of .bin

Firmware Upgrade

Choose File TPI06\_sign\_v1.1.0.13.bin

Upload

4. Click **Ok** when prompted to start the firmware update process.

### Config Backup/Restore

*System > Firmware*

You may have added many customized settings to your PDU and in the case that you need to reset your PDU to default, all your customized settings would be lost and would require you to manually reconfigure all of your PDU settings instead of simply restoring from a backed up PDU configuration file. The configuration will be backed up or restored only to the currently used image.

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **Firmware**.
3. To backup your configuration settings, click **Save** under **Backup Configuration**.

Configuration

Backup Configuration


Save

Restore Configuration File

Choose File No file chosen

Import

4. To upload a previously saved configuration file, click the **Choose File** to select the correct file to upload.

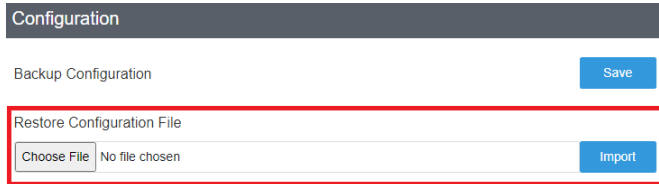

The screenshot shows a web interface for configuration management. At the top, there's a 'Configuration' header. Below it, there's a 'Backup Configuration' section with a 'Save' button. The 'Restore Configuration File' section is highlighted with a red box. It contains a 'Choose File' button, a text field showing 'No file chosen', and an 'Import' button.

5. Click **Import** to upload the selected configuration file.

## Reboot/Reset

System > Firmware

This section provides the procedures for rebooting or resetting the PDU to factory default settings.

### To reboot your PDU:

You may want to reboot your PDU if you are encountering difficulties with your PDU and have attempted all other troubleshooting.

**Note:** You may want to save the settings to flash before reboot the PDU. If you have not saved your current configuration settings to flash first, the configuration changes will be lost after a reboot.

There are two methods that can be used to reboot your PDU.

- **Hardware Method:** Using a paper clip, on the front panel of the PDU, push and hold the **Reset** button between 1~4 seconds and release.
- **Software Method (PDU Management Page):**

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **Firmware**.
3. Click on **Reboot** to reboot your PDU.

Reboot Device

Reboot

### To reset your PDU to factory defaults:

You may want to reset your PDU to factory defaults if you are encountering difficulties with your PDU and have attempted all other troubleshooting. Before you reset your PDU to defaults, if possible, you should backup your PDU configuration first, see “Backup/Restore”.

There are two methods that can be used to reset your PDU to factory defaults.

- **Hardware Method:** Using a paper clip, on the front panel of the PDU, push and hold the **Reset** button more than 7 seconds and release. Located on the front panel of your PDU, see “Product Hardware Features” on page 2. Use this method if you are encountering difficulties with accessing your PDU management page.
- **Software Method (PDU Management Page):**

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **System**, and then **Firmware**.
3. Click **Reset** to reset your PDU back to factory default settings.

Factory Reset


Reset

## Logging

### Remote Logging

*Log > System Log*

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Log**, and then **System Log**.
3. Review the settings.

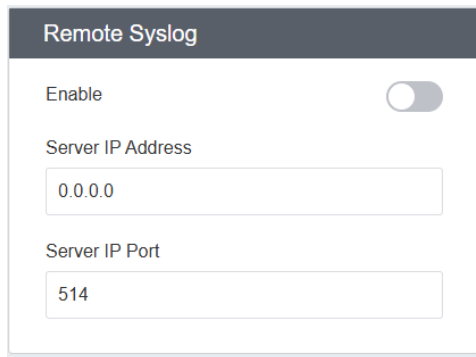

- **Enable:** Enable the remote logging service.
- **Server IP Address:** Enter the IP address of the location you want the log files to go to.
- **Server IP Port:** Enter the port number of the remote logging location.

4. Click **Apply**.

Apply

### Log Table

*Log > System Log*

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Log**, and then **System Log**.
3. Review the logs below.

| Outlet Activities                    |        |
|--------------------------------------|--------|
| System Logs <a href="#">Download</a> |        |
| Timestamp                            | Detail |

### Email Alert

*Log > Email Alert*

You can have the PDU send an email alert when certain events occur.

The following events can be monitored:

- **System Reboot:** The system has been rebooted.
- **Port Link Change:** A port has been connected/disconnected.
- **Configuration Change:** The PDU configuration has been changed.

1. Log into your PDU management page (see “Access your PDU management page” on page 5).
2. Click on **Log**, and then **Email Alert**.
3. Review the settings. Obtain the relevant settings from your mail provider.

### Email Server Setting

|                                                                                                                          |                                                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Mail to                                                                                                                  | SMTP Server Address                                                                                                 |
| <input type="text" value="user@oursite.example"/>                                                                        | <input type="text" value="smtp.gmail.com"/>                                                                         |
| SMTP User                                                                                                                | SMTP Server Port                                                                                                    |
| <input type="text" value="user@domainmail.com"/>                                                                         | <input type="text" value="587"/>                                                                                    |
| SMTP Password                                                                                                            | Security Mode                                                                                                       |
| <input type="password" value="*****"/>  | <input type="text" value="None"/>  |

Send Test Mail

4. Toggle the switches to the right to enable email monitoring for that event.

### Email Notification Setting

|                        |                          |
|------------------------|--------------------------|
| Safe Voltage Event     | <input type="checkbox"/> |
| Overload Breaker Event | <input type="checkbox"/> |
| Host Timeout Event     | <input type="checkbox"/> |

5. Click **Apply**.

Apply

## Technical Specifications

### TPI-06

#### Device Interface

- 6 x NEMA 5-15R (15A max. @ 120V AC)
- 1 x NEMA 5-15R-Bypass (15A max. @ 120V AC)
- 1 x Gigabit port
- LED indicators

#### Power Output

- 100 – 120V , 50/60Hz
- Max. 15A per outlet

#### Power Input

- 100 – 120V, 50/60Hz, internal power supply
- Max. consumption: 6.87W (no PD load)

#### Special Features

- Fanless
- Rack mountable
- Detachable power cord

#### Operating Temperature

- 0° - 40° C (23° - 104° F)

#### Operating Humidity

- Max. 90% non-condensing

#### Dimensions

- 440 x 170 x 44mm (17.32 x 6.69 x 1.73 in.)

#### Weight

- 2.389kg (5.27 lbs.)

#### Certifications

- FCC
- UL

#### Warranty

- 3-Year Limited

#### Package Contents

- TPI-06
- Quick Installation Guide
- Power cord (1.8m / 6 ft.)
- Rack mount kit

\*Disclaimer: Max rated total output current is 15A. This device is meant to add additional outlets. It does not change the amount of power being received from the main outlet.

## **TPI-L14**

### **Device Interface**

- 14 x NEMA 5-15R (15A max. @ 120V AC)
- 2 x Gigabit port
- LED indicators
- LCD display with button controls
- Reset button

### **Power Output**

- 100 – 120V, 50/60Hz
- Max. 15A per outlet
- 15A breaker overload protection

### **Power Input**

- 100 – 120V, 50/60Hz, internal power supply
- Max. consumption: 14.11W (no PD load)

### **Hive Cloud Management**

- Configure, monitor, and manage through the TRENDnet Hive Cloud Management Portal remotely via PC, Mac web browser or through an Android or iOS mobile device
- Multi-device management
- Provisioning through scheduled batch firmware or configuration updates for multiple PDUs
- Event/hardware network monitoring (CPU/memory utilization)
- Enable & disable power, set auto reboot check, configure power scheduling, and monitor power usage

### **Spanning Tree**

- IEEE 802.1D STP (Spanning Tree protocol)
- IEEE 802.1w RSTP (Rapid Spanning Tree protocol)

### **Special Features**

- Fanless
- Wall mountable
- Adjustable depth rack mount
- Cable retention clip

### **Operating Temperature**

- 0° - 40° C (23° - 104° F)

### **Operating Humidity**

- Max. 95% non-condensing

### **Dimensions**

- 440 x 88 x 88mm (17.32 x 3.46 x 3.46 in.)

### **Weight**

- 2.43kg (5.35 lbs.)

### **Warranty**

- 3-Year limited

### **Certifications**

- FCC
- UL
- Surge protection (IEC 61000-4-5 Class 3)
- ESD Protection (IEC 61000-4-2 Level 2)

### **Package Contents**

- TPI-L14
- Power cord (1.8m / 6 ft.)
- Rackmount kit
- Wall-mount kit



## Quick Installation Guide Troubleshooting

**Q: I typed <http://192.168.10.80> in my Internet Browser Address Bar, but an error message says “The page cannot be displayed.” How can I access the PDU management page?**

**Answer:**

1. Check your hardware settings again. See “PDU Installation” on page 8.
2. Make sure the Power and port Link/Activity and WLAN lights are lit.
3. Make sure your network adapter TCP/IP settings are set to Use the following IP address or Static IP (see the steps below).
4. Make sure your computer is connected to one of the Ethernet ports.
5. Since the PDU default IP address is 192.168.10.80, make sure there are no other network devices assigned an IP address of 192.168.10.80

### **Windows 8.1/10/11**

- a. Go into the **Control Panel**, click **Network and Sharing Center**.
- b. Click **Change Adapter Settings**, right-click the **Local Area Connection** icon.
- c. Then click **Properties** and click **Internet Protocol Version 4 (TCP/IPv4)**.
- d. Then click **Use the following IP address**, and make sure to assign your network adapter an IP address in the subnet of 192.168.10.x. Click **OK**

**Note:** *If you are experiencing difficulties, please contact your computer or operating system manufacturer for assistance.*

**Q: If my PDU IP address is different than my network's subnet, what should I do?**

**Answer:**

You should still configure the PDU first. After all the settings are applied, go to the PDU configuration page, click on System, click IPv4 Setup and change the IP address of the PDU to be within your network's IP subnet. Click Apply, then click OK. Then click Save Settings to Flash (menu) and click Save Settings to Flash to save the IP settings to the NV-RAM.

**Q: I changed the IP address of the PDU, but I forgot it. How do I reset my PDU?**

**Answer:**

Using a paper clip, push and hold the reset button on the rear of the PDU and release after 6~10 seconds.

The default IP address of the PDU is 192.168.10.80. The default user name and password is “admin”.

## Appendix

### How to find your IP address?

**Note:** Please note that although the following procedures provided to follow for your operating system on configuring your network settings can be used as general guidelines, however, it is strongly recommended that you consult your computer or operating system manufacturer directly for assistance on the proper procedure for configuring network settings.

#### Command Prompt Method

##### **Windows 8.1/10/11**

1. On your keyboard, press **Windows Logo+R** keys simultaneously to bring up the Run dialog box.
2. In the dialog box, type **cmd** to bring up the command prompt.
3. In the command prompt, type **ipconfig /all** to display your IP address settings.

##### **macOS**

1. Navigate to your **Applications** folder and open **Utilities**.
2. Double-click on **Terminal** to launch the command prompt.
3. In the command prompt, type **ipconfig getifaddr <en0 or en1>** to display the wired or wireless IP address settings.

**Note:** **en0** is typically the wired Ethernet and **en1** is typically the wireless Airport interface.

#### Graphical Method

##### **macOS**

1. From the Apple menu, select **System Preferences**.
2. In System Preferences, from the **View** menu, select **Network**.
3. In the Network preference window, click a network port (e.g., Ethernet, AirPort, modem). If you are connected, you'll see your IP address settings under "Status:"

**Note:** If you are experiencing difficulties, please contact your computer or operating system manufacturer for assistance.

### How to configure your network settings to use a static IP address?

**Note:** Please note that although the following procedures provided to follow for your operating system on configuring your network settings can be used as general guidelines, however, it is strongly recommended that you consult your computer or operating system manufacturer directly for assistance on the proper procedure for configuring network settings.

#### **Windows 8.1/10/11**

- a. Go into the **Control Panel**, click **Network and Sharing Center**.
- b. Click **Change Adapter Settings**, right-click the **Local Area Connection** icon.
- c. Then click **Properties** and click **Internet Protocol Version 4 (TCP/IPv4)**.
- d. Then click **Use the following IP address**, and assign your network adapter a static IP address. Click **OK**

#### **macOS**

- a. From the **Apple**, drop-down list, select **System Preferences**.
- b. Click the **Network** icon.
- c. From the **Location** drop-down list, select **Automatic**.
- d. Select and view your Ethernet connection.  
In MAC OS 10.4, from the **Show** drop-down list, select **Built-in Ethernet** and select the **TCP/IP** tab.  
In MAC OS 10.5/10.6, in the left column, select **Ethernet**.
- e. Configure TCP/IP to use a static IP.  
In MAC 10.4, from the **Configure IPv4**, drop-down list, select **Manually** and assign your network adapter a static IP address. Then click the **Apply Now** button.  
In MAC 10.5/10.6, from the **Configure** drop-down list, select **Manually** and assign your network adapter a static IP address . Then click the **Apply** button.
- f. Restart your computer.

**Note:** If you are experiencing difficulties, please contact your computer or operating system manufacturer for assistance.

### How to find your MAC address?

In Windows 8.1/10/11,

Your computer MAC addresses are also displayed in this window, however, you can type **getmac -v** to display the MAC addresses only.

In macOS,

1. **Apple Menu > System Preferences > Network**
2. Select **Ethernet** from the list on the left.
3. Click the **Advanced** button.
3. On the **Ethernet** tab, the **Ethernet ID** is your MAC Address.

### How do I use the ping tool to check for network device connectivity?

#### Windows 8.1/10/11

1. On your keyboard, press **Windows Logo+R** keys simultaneously to bring up the Run dialog box.
2. In the dialog box, type **cmd** to bring up the command prompt.
3. In the command prompt, type **ping <ip\_address>** with the **<ip\_address>** being the IP address you want ping and check for connectivity.

**Example:** Usage of ping command and successful replies from device.

```
C:\Users>ping 192.168.10.80
```

Pinging 192.168.10.80 with 32 bytes of data:

```
Reply from 192.168.10.80: bytes=32 time<1ms TTL=64
```

```
Reply from 192.168.10.80: bytes=32 time<1ms TTL=64
```

```
Reply from 192.168.10.80: bytes=32 time<1ms TTL=64
```

```
Reply from 192.168.10.80: bytes=32 time<1ms TTL=64
```

Ping statistics for 192.168.10.80:

Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),

Approximate round trip times in milli-seconds:

Minimum = 0ms, Maximum = 0ms, Average = 0ms

#### macOS

1. Navigate to your **Applications** folder and open **Utilities**.
2. Double-click on **Terminal** to launch the command prompt.
3. In the command prompt, type **ping -c <#> <ip\_address>** with the **<#>** *ping being the number of time you want to ping and the <ip\_address> being the IP address you want ping and check for connectivity.*

**Example:** `ping -c 4 192.168.10.80`

**Federal Communication Commission Interference Statement**

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

**WARNING:** Any changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IMPORTANT NOTE:****Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Country Code selection feature to be disabled for products marketed to the US/CANADA

**RoHS**

This product is RoHS compliant.



## Limited Warranty

TRENDnet warrants only to the original purchaser of this product from a TRENDnet authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service. This limited warranty is non-transferable and does not apply to any purchaser who bought the product from a reseller or distributor not authorized by TRENDnet, including but not limited to purchases from Internet auction sites.

### Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service. Specific warranty periods are listed on each of the respective product pages on the TRENDnet website.

- AC/DC Power Adapter, Cooling Fan, and Power Supply carry a one-year warranty.

### Limited Lifetime Warranty

TRENDnet offers a limited lifetime warranty for all of its metal-enclosed network switches that have been purchased in the United States/Canada on or after 1/1/2015.

- Cooling fan and internal power supply carry a one-year warranty

To obtain an RMA, the ORIGINAL PURCHASER must show Proof of Purchase and return the unit to the address provided. The customer is responsible for any shipping-related costs that may occur. Replacement goods will be shipped back to the customer at TRENDnet's expense.

Upon receiving the RMA unit, TRENDnet may repair the unit using refurbished parts. In the event that the RMA unit needs to be replaced, TRENDnet may replace it with a refurbished product of the same or comparable model.

In the event that, after evaluation, TRENDnet cannot replace the defective product or there is no comparable model available, we will refund the depreciated value of the product.

If a product does not operate as warranted during the applicable warranty period, TRENDnet shall reserve the right, at its expense, to repair or replace the defective product or part and deliver an equivalent product or part to the customer. The repair/replacement unit's warranty continues from the original date of purchase. All products that are replaced become the property of TRENDnet. Replacement products may be new or reconditioned. TRENDnet does not issue refunds or credit. Please contact the point-of-purchase for their return policies.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use, or (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet within the applicable warranty period and providing a copy of the dated proof of the purchase. Upon proper submission of required documentation, a Return Material Authorization (RMA) number will be issued. An RMA number is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA number marked on the outside of return packages and sent to TRENDnet

prepaid, insured and packaged appropriately for safe shipment. International customers shipping from outside of the USA and Canada are responsible for any return shipping and/or customs charges, including but not limited to, duty, tax, and other fees.

**Refurbished product:** Refurbished products carry a 90-day warranty after date of purchase. Please retain the dated sales receipt with purchase price clearly visible as evidence of the original purchaser's date of purchase. Replacement products may be refurbished or contain refurbished materials. If TRENDnet, by its sole determination, is unable to replace the defective product, we will offer a refund for the depreciated value of the product.

**WARRANTIES EXCLUSIVE:** IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

**LIMITATION OF LIABILITY:** TO THE FULL EXTENT ALLOWED BY LAW, TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

**Governing Law:** This Limited Warranty shall be governed by the laws of the state of California.

Some TRENDnet products include software code written by third party developers. These codes are subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL").

Visit <http://www.trendnet.com/gpl> or the support section on <http://www.trendnet.com> and search for the desired TRENDnet product to access to the GPL Code or LGPL Code. These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not provide technical support for these codes. Please visit <http://www.gnu.org/licenses/gpl.txt> or <http://www.gnu.org/licenses/lgpl.txt> for specific terms of each license.

PWP07172015v3

2019/08/08



## Product Warranty Registration

Please take a moment to register your product online.  
Go to TRENDnet's website at <http://www.trendnet.com/register>

TRENDnet  
20675 Manhattan Place  
Torrance, CA 90501. USA