



Quick Installation Guide



TEW-630APB

Table of Contents

Русский	1
1. Что нужно сделать в самом начале	1
2. Установка оборудования	2
3. Конфигурация точки доступа	3
Troubleshooting	6

1. Что нужно сделать в самом начале




Содержимое упаковки

- TEW-630APB
- Руководство по быстрой установке
- 1 отделяемая антенна, 4dBi
- Адаптер источника питания
- Руководство пользователя на диске CD-ROM
- 1 кабель RJ-45 Ethernet

Требования к установке

- Веб-браузер типа Internet Explorer (5.5 или выше)
- Компьютер с соответствующим образом установленным сетевым адаптером
- Сетевой коммутатор или концентратор с имеющимся сетевым портом LAN
- Сетевой кабель RJ-45

Применение

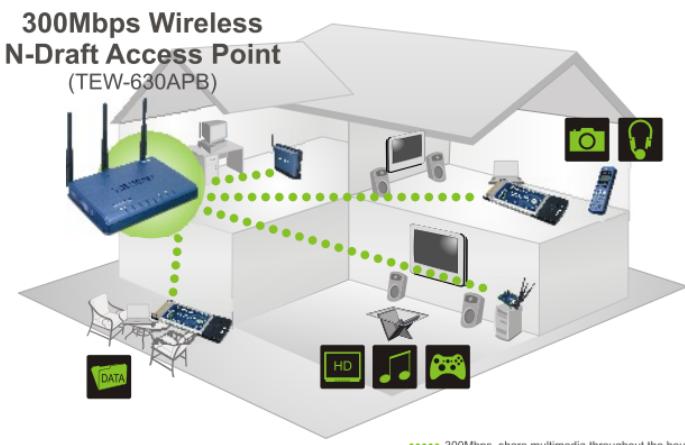

2. Установка оборудования

Примечание: Выберите удобное место для точки доступа. Лучше всего точку доступа расположить в центре своей сети беспроводной связи. Присоедините компьютер, настроив конфигурацию устройства TEW-630APB на тот же коммутатор/концентратор.

1. Присоедините кабель RJ-45 от коммутатора/концентратора к порту **LAN** точки доступа и затем присоедините съемную антенну (4dBi).



2. Подключите силовой адаптер к точке доступа и сетевой розетке.



3. Убедитесь в загорании следующих индикаторов на панели: **Power**, **LAN** и **WLAN**.

3. Конфигурация точки доступа

Примечание: Рекомендуется настроить конфигурацию точки доступа от компьютера, имеющего проводное соединение. Перед настройкой конфигурации точки доступа в сетевом адаптере вашего компьютера необходимо присвоить статический IP-адрес – в подсети 192.168.1.x. Поскольку у точки доступа IP-адресом по умолчанию является 192.168.1.100, нужно убедиться в том, что IP-адрес 192.168.1.100 не присвоен никакому другому сетевому устройству. (См. раздел «Устранение неисправностей» - там описан порядок настройки параметров TCP/IP компьютера.)


1. Откройте свой веб-браузер, введите в адресной строке **http://192.168.1.100** и нажмите на клавишу ввода.




2. Введите имя пользователя и пароль, затем щелкните по кнопке **Log In**.
Имя пользователя: **admin**
По умолчанию пароль отсутствует.



3. Выберите запустить **Мастер настройки безопасности беспроводного соединения**.

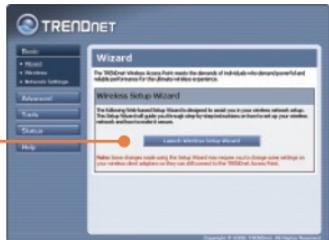

4. Щелкните по кнопке **Далее**.

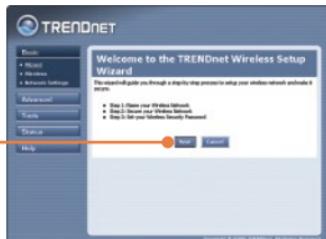


5. Щелкните по кнопке **Далее**.



Примечание: Нижеприведенный пример относится только к шифрованию WPA. При выборе опции Наибольшая (WPA2) или Повышенная (WPA) проверьте, поддерживают ли беспроводные адAPTERЫ WPA2 или WPA. Если беспроводные адAPTERЫ не поддерживают шифрование WPA2 или WPA, выберите опцию Нормальный (WEP).


6. Выберите нужный уровень безопасности и щелкните по кнопке **Далее**.

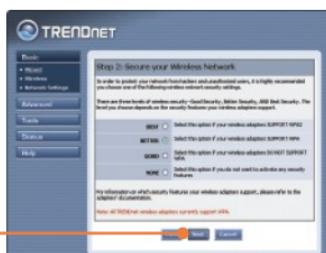

7. Если режим безопасности включен, введите любой пароль и нажмите на кнопку **Далее**.



8. Автоматически сгенерируется **общий ключ**. Запомните такой ключ и нажмите на кнопку **Сохранить**.

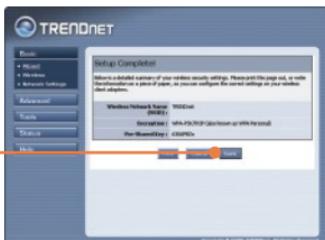

9. Щелкните по кнопке **Reboot the Device**.



10. Щелкните по кнопке **OK**.

Примечание: При установке любого уровня безопасности (Наибольший, Повышенный, Нормальный) нужно обязательно указать общий ключ в конфигурации беспроводного адаптера..

Установка завершена.

Подробнее о конфигурировании устройства TEW-630APB и дополнительных настройках можно узнать в разделе «Поиск и устранение неисправностей» руководства пользователя на CD-ROM-диске или на веб-сайте Trendnet по адресу <http://www.trendnet.com>.

Troubleshooting

Q1: How do I configure TCP/IP settings on my computer?

1. Go into the **Control Panel** and double-click the **Network Connections** icon, right-click the **Local Area Connection** icon and then click **Properties**.

2. Click **Internet Protocol (TCP/IP)** and then click **Properties**. Then click on **Use the following IP address**, and make sure you assign your network adapter an IP address in the subnet of 192.168.1.x.

Properties window for Internet Protocol (TCP/IP) settings:

- Obtain an IP address automatically
- Use the following IP address:
IP address: 192.168.1.50
Subnet mask: 255.255.255.0
Default gateway: . . .

Q2: I typed <http://192.168.1.100> in my Internet Browser's Address Bar, but an error message says "The page cannot be displayed". How can I get into the TEW-630APB's web configuration page?

A2: First, check your hardware settings again by following the instructions in section 2. Second, make sure the LAN and WLAN lights are lit. Third, make sure the TCP/IP settings are configured properly (see Q1). Fourth, since the Access Point's default IP address is 192.168.1.100, make sure that no other network devices are assigned an IP address of 192.168.1.100.

Q3: If my network's IP is different than the Access Point's range, what should I do?

A3: You should still configure the Access Point first. After all the settings are applied, go to the Access Point's configuration page, click **Basic -> Network Settings**, change the IP address of the Access Point to match your network's IP and save the settings.

Q4: After I successfully configured the Access Point to meet my network settings, I can not connect to my network using wireless computers.

A4: If you have a DHCP server in your network, you need to go into TCP/IP settings again and re-select "Obtain an IP address automatically" to allow the PC to regain an IP address from your DHCP server.

Q5: All the settings are correct, but I can not make a wireless connection to the Access Point.

A5: First, double check that the WLAN light on the Access Point is lit. Second, power cycle the Access Point by unplugging the power to the Access Point. Wait 15 seconds, then plug the power back in. Third, contact the manufacturer of your wireless network adapter. Make sure the wireless network adapter is configured with the proper SSID. The default SSID of the Access Point is **TRENDnet**.

If you still encounter problems or have any questions regarding the **TEW-630APB**, please contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.

Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673

24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) [0] 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

3135 Kashiwa Street
Torrance, CA 90505
USA