



## Quick Installation Guide



**TEW-624UB**  
**TEW-644UB**

# Table of Contents

Русский .....	1
1. Что нужно сделать в самом начале .....	1
2. Порядок установки .....	2
3. Использование беспроводного адаптера .....	5
Troubleshooting .....	6

# 1. Что нужно сделать в самом начале



## Содержимое упаковки

- TEW-624UB/TEW-644UB
- CD-ROM-диск с драйвером и утилитой
- Руководство по быстрой установке

## Системные требования


- Компьютер с портом USB 2.0 или 1.1
- Дискковод CD-ROM
- ЦП: 300 МГц или выше / 800МГц или выше (Windows Vista)
- Память: 256 МБ или более / 512MB RAM или более (Windows Vista)
- Windows 2000/XP/Vista

## Применение

### Workstation with Wireless N USB Adapter (TEW-644UB)



Wireless N  
Home Router  
(TEW-652BRP)



### 300Mbps Wireless N USB Adapter (TEW-624UB)



Wireless N Speed

## 2. Порядок установки

**Это важно!** НЕ ПОДКЛЮЧАЙТЕ адаптер USB для беспроводной связи, пока об этом не будет дано указание.



### Пользователям Windows

1. Установите **CD-ROM-диск со служебной программой и драйвером** в дисковод CD-ROM компьютера.


2. Нажмите **Run autorun.exe** (только для Windows Vista).

3. Нажмите **Install Drivers & Utility**. (служебной программой и драйвером).


4. Щелкните по кнопке **Далее (Next)**. Следуйте указаниям Мастера InstallShield.

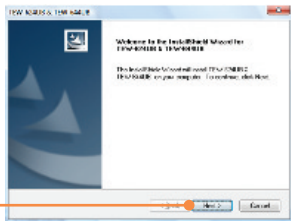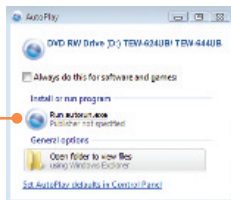

5. Щелкните по кнопке **Да (Yes)**.  
(только для Windows 2000).

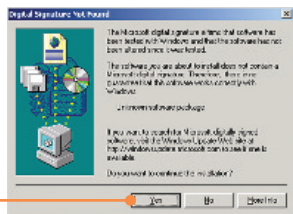

6. Щелкните по кнопке **Завершить (Finish)**.

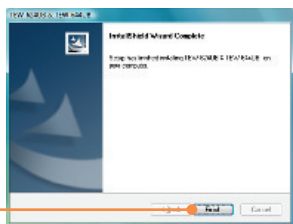


7. Присоедините беспроводной адаптер к имеющемуся USB-порту компьютера.



8. Драйверы установятся автоматически.

9. Щелкните по кнопке Да (Yes).  
(только для Windows 2000).

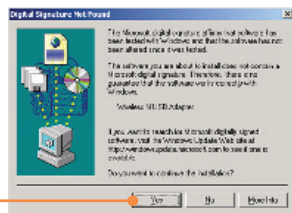

## Установка завершена.


Подробнее о конфигурировании устройства **TEW-624UB/TEW-644UB** и дополнительных настройках можно узнать в разделе «Поиск и устранение неисправностей» руководства пользователя на CD-ROM-диске или на веб-сайте Trendnet по адресу <http://www.trendnet.com>.

### 3. Использование беспроводного адаптера


1. В нижнем правом углу экрана дважды щелкните значок **TEW-624UB & TEW-644UB manager**.



2. Нажмите **Site Survey**, выберите SSID, а затем нажмите **Connect**.

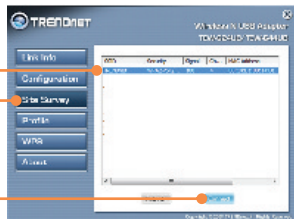

3. Если на точке доступа используется шифрование, выберите тип аутентификации в поле **Authentication**, укажите режим шифрования в поле **Encryption**, введите ключ шифрования, а затем нажмите **Apply**.

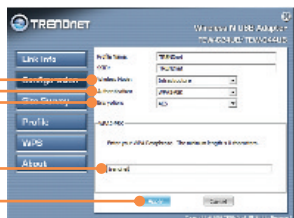

#### Настройка беспроводной конфигурации выполнена

Подробнее о конфигурировании устройства **TEW-624UB/TEW-644UB** и дополнительных настройках можно узнать в разделе «Поиск и устранение неисправностей» руководства пользователя на CD-ROM-диске или на веб-сайте Trendnet по адресу <http://www.trendnet.com>.

#### Зарегистрируйте свой продукт

Для того, чтобы воспользоваться сервисным обслуживанием и поддержкой на высшем уровне, предлагаем вам зарегистрировать свой продукт в режиме онлайн здесь: [www.trendnet.com/register](http://www.trendnet.com/register)  
Благодарим Вас за то, что Вы выбрали TRENDnet

**Q1: I inserted the Utility & Driver CD-ROM into my computer's CD-ROM Drive and the installation menu does not appear automatically. What should I do?**

**A1:** For Windows 2000/XP, if the installation menu does not appear automatically, click **Start**, click **Run**, and type **D:\autorun** where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard. For Windows Vista, if the installation menu does not appear automatically, click **Start**, click the **Start Search** box, and type **D:\autorun.exe** where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.

**Q2: I completed all the steps in the quick installation guide, but my Wireless USB Adapter is not connecting to my access point. What should I do?**

**A2:** First, verify that the **SSID** matches your wireless router or access point's **SSID**. Second, please check with your network administrator for security key in order to access a secured wireless access point or router. Please refer to the User's Guide for more information regarding wireless network security. Third, check your TCP/IP properties to ensure that Obtain an IP address automatically is selected. Fourth, double-click the TEW-624UB & TEW-644UB Manager icon, click **Site Survey** and then click **Refresh** to check and see if there are any available wireless networks listed.

**Q3: Windows is unable to recognize my hardware. What should I do?**

**A3:** First, make sure your computer meets the minimum requirements as specified in Section 1 of this quick installation guide. Second, you must complete the installation of the TEW-624UB & TEW-644UB Manager (as described in Section 2) before connecting the Wireless USB Adapter to your computer. Third, connect the Wireless USB Adapter to a different USB port on your computer.

**Q4: I cannot open the TEW-624UB & TEW-644UB Manager. What should I do?**

**A4:** Access your device manager to make sure the adapter is installed properly. If you see a networking device with a yellow question mark or exclamation point, you will need to reinstall the device and/or the drivers. To access the device manager on Windows 2000/XP, right-click **My Computer**, click **Properties**, click the **Hardware** tab, and then click **Device Manager**. To access the device manager on Windows Vista, right-click **Computer**, click **Properties** and then click **Device Manager**.

If you still encounter problems or have any questions regarding the TEW-624UB\_644UB, please refer to the User's Guide included on the Utility & Driver CD-ROM or contact TRENDnet's Technical Support Department.



## Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

### ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



**TRENDnet**<sup>®</sup>

## Product Warranty Registration

Please take a moment to register your product online.  
Go to TRENDnet's website at <http://www.trendnet.com/register>

**TRENDnet**<sup>®</sup>

20675 Manhattan Place  
Torrance, CA 90501  
USA