

# TRENDnet<sup>®</sup>



## Quick Installation Guide

### TPE-TG50ES/TPE-TG82ES (V1)

# Table of Contents

---

## **1 Русский**

1. Перед началом работы
2. Краткий справочник
3. Установка и настройка оборудования

# 1. Перед началом работы

## Содержимое упаковки


- TPE-TG50ES/TPE-TG82ES
- Руководство по быстрой установке
- Сетевой адаптер TPE-TG50ES (48V DC, 0.8A) / TPE-TG82ES (54V DC, 1.67A)
- Шнур питания

## Требования к установке


- Компьютер с портом Ethernet и веб-браузер
- Сетевой кабель

# 2. Краткий справочник


**Примечание:** Модель переключателя может отличаться от той, которая показана в приведенном ниже примере.

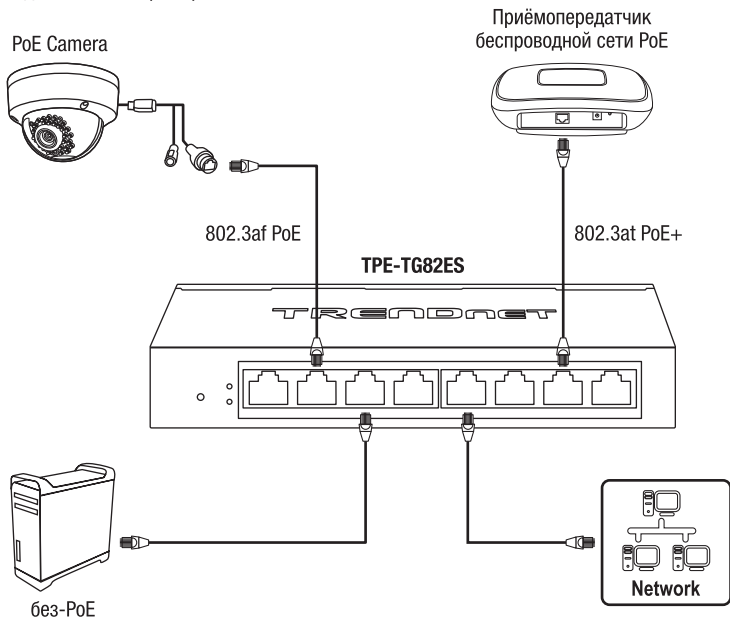

### 3. Установка и настройка оборудования

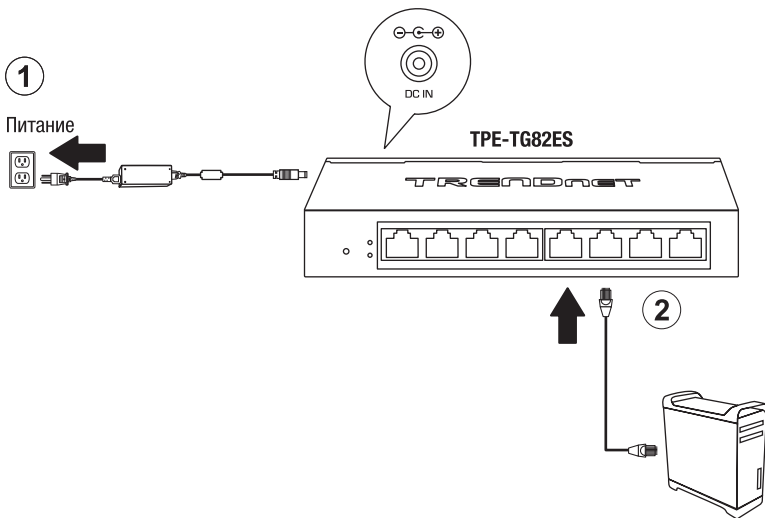

3. Необходимо назначить сетевому адаптеру компьютера статический IP-адрес в подсети 192.168.10.x (напр., 192.168.10.25) и маску подсети 255.255.255.0.
4. Откройте свой браузер, введите IP-адрес коммутатор в адресной строке и нажмите на **Enter** (Ввод). IP-адрес по умолчанию 192.168.10.200.

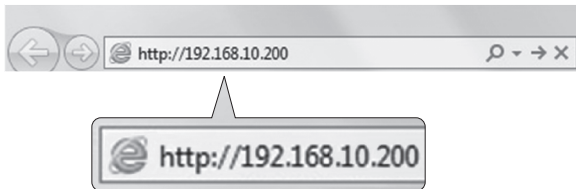


5. Введите **User Name** (имя пользователя) и **Password** (пароль), затем щелкните по кнопке **LOGIN**. По умолчанию:

User name (Имя пользователя): **admin**


Password (Пароль): **admin**

**Примечание:** Имя пользователя и пароль следует вводить с учетом регистра.

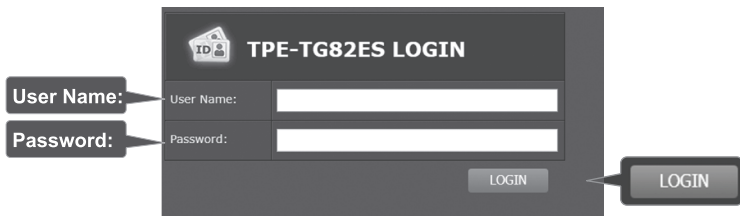


6. Нажмите **System** (Система), а затем **IPv4 Setup** (Настройка IPv4).

7. Настройте коммутатор в соответствии с требованиями сети. Нажмите кнопку **Apply** (Применить).

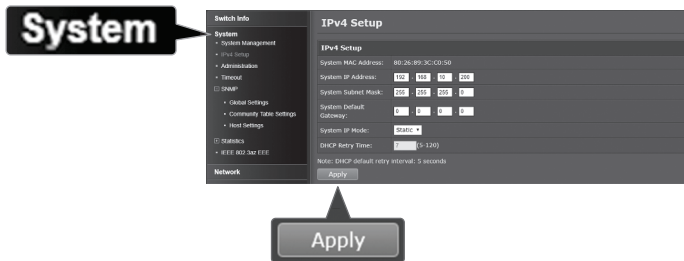


8. Щелкните на **OK**.

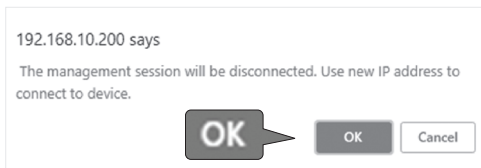


9. В левой панели выберите "**Настройки**", нажмите "**Конфигурация**", а затем нажмите "**Сохранить**".

10. Нажмите кнопку **Save Settings to Flash** (**Сохранить настройки на флэш-накопитель**) (кнопка).

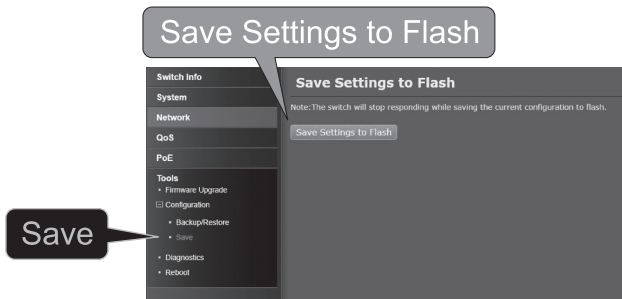

11. Щелкните на "**OK**".

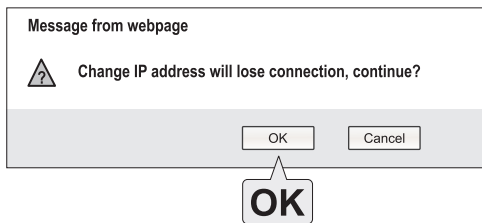

Подробную информацию о конфигурации устройства **TPE-TG50ES/TPE-TG82ES** и его дополнительных настройках, Пожалуйста, обратитесь к руководству пользователя на странице клиентской поддержки компании TRENDnet, [www.trendnet.com/support](http://www.trendnet.com/support).

## Certifications

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.

Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.

## Warning note:

### A. Earthing Warning

"The equipment power supply cord shall be connected to a socket-outlet with earthing connection."

### B. Wall-mounted instructions

The Unit has two wall-mount slots on its bottom panel.

Before you begin, make sure you have two screws that indicate a diameter measurement of 0.1377 inches (4.0mm).

1. Determine where you want to mount the modem.
2. Drill two holes into the wall. Make sure adjacent holes are 4.51 inches (114mm) apart.
3. Maneuver the modem so the wall-mount slots line up with the two screws.
4. Place the wall-mount slots over the screws and slide the modem down until the screws fit snugly into the wall-mount slots.
5. Screw type T3 x 15 mm X 2

## Technical Support

If you have any questions regarding the product installation, please contact our Technical Support.

Toll free US/Canada: **1-866-845-3673**

Regional phone numbers available at [www.trendnet.com/support](http://www.trendnet.com/support)

## TRENDnet

20675 Manhattan Place  
Torrance, CA 90501  
USA

Applies to PoE Products Only: This product is to be connected only to PoE networks without routing to the outside plant.

The equipment power cord must be connected to a socket-outlet with earthing connection.

## Note

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## Advertencia

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.

## Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at: [www.trendnet.com/register](http://www.trendnet.com/register)