



Quick Installation Guide



TVP-SP4BK

Table of Contents

English	1
1. Before You Start	1
2. How to Install	2
3. Using the ClearSky™ VoIP Bluetooth Conference Phone	7
Troubleshooting	9

1. Before You Start



Package Contents

- TVP-SP4B
- TBW-104UB
- Quick Installation Guide
- Utility & Driver CD-ROM
- 1 Meter USB Cable (mini-USB to A-type connector)

System Requirements

- CD-ROM drive
- Skype Installed
- Computer With An Available USB 1.1 or 2.0 Port
- CPU: 300MHz or Above
- Memory: 256 MB or Above
- Hard Drive Space: 50MB or Above
- Windows 2000/XP

Note: Skype must be installed before beginning the installation process. Please visit www.Skype.com for downloading and installation details.

Note: Do not insert the TBW-104UB USB adapter until instructed to do so.


2. How to Install

Note: Connect the USB cable to charge the unit. (please let the battery charge for a full 6 hours before using the phone for the first time). DO NOT connect the TBW-104UB USB adapter until instructed to do so.


1. Insert the **Utility & Driver CD-ROM** into your computer's CD-ROM Drive and then click **Install Driver/Utility**.




2. Click **Next**.

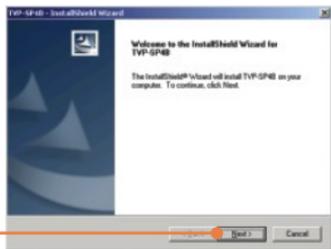

3. When you reach this screen select **Yes, I do**. Click **Next**.

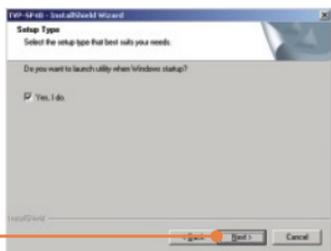

4. Click **Install**.

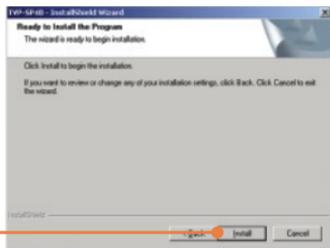

5. Click **Finish**.



6. Click **Yes** to begin Bluetooth adapter installation.



7. Select **Language** from the drop down menu. Click **OK**.



8. Click **Next**.



9. Select **I accept the terms in the license agreement**. Click **Next**.



10. Follow the InstallShield Wizard instructions and then click **Finish**.



11. Click **Yes** to restart the computer. If this window does not appear, manually restart the computer.



12. Connect the TBW-104UB into the computer's USB port. Click **OK**.



13. Click **OK**.



14. Power on the ClearSky Bluetooth Phone by pressing on the End Call (red telephone) button until you see an icon appear on the LCD.


15. Press the **Configuration** button located below the LCD screen. Select **Pairing** from the menu and then press the **Call** (Green telephone) button to enter **Pairing Mode**. Click **OK**.



16. The Setup Utility should pop-up. Click **Search**.



17. Select your Bluetooth Phone from the dropdown list (Please check the MAC address to select the right device. The MAC address will be displayed on the LCD when you are in pairing mode). Click **OK**.

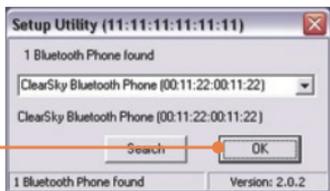

18. Select **Allow this program to use Skype**. Click **OK**.



Your installation is now complete.

For detailed information regarding the TVP-SP4B configuration and advanced settings, please refer to the User's Guide included on the Utility & Driver CD-ROM or TRENDnet's website at www.trendnet.com

3. Using the ClearSky™ VoIP Bluetooth Conference Phone

Calling a Skype Contact

1. Press the power button to power on the ClearSky VoIP Bluetooth Conference phone . Wait until the phone shows "ClearSky."



2. Press the **Sync Contacts** icon to sync the contact list with Skype.



3. Press the Up or Down navigation button to select a contact.



4. Press the Make a call button to call the Skype contact.



5. Press the End a call button to hang up.



Making a conference call

Note: A maximum of 5 users can participate in a conference call.

6. Press the **Sync Contacts** icon to sync the contact list with Skype.



7. Press the Up or Down navigation button to select a contact.



8. Click the Select button to select a contact.



9. Press the Make a call button start the conference call.



Q1: I cannot pair the TVP-SP4B VoIP Bluetooth conference phone to the TBW-104UB USB Adapter. What should I do?

A1: The TVB-SP4B Utility must first be installed and running before you can pair the VoIP Bluetooth phone to the Bluetooth USB adapter. To run the TVB-SP4B utility, click Start, click Programs, click TRENDnet TVP-SP4B, and then click TVP-SP4B.

Q2: Windows is unable to recognize my TBW-104UB USB Adapter. What should I do?

A2: Make sure your computer meets the minimum requirements as specified in Section 1 of this Quick Installation Guide. Also you must install the Phone Utility (as described in Section 2) before connecting the Bluetooth USB Adapter. If Windows is still unable to recognize your hardware, then try installing the Bluetooth USB Adapter to a different USB port on your computer.

Q3: I cannot power ON the TVP-SP4B VoIP Bluetooth phone. What should I do?

A3: Make sure the unit has been fully charged for 6 hours. To charge the phone, connect the provided USB cable into the phone and an available USB port on your computer. To power ON the phone, press the power button, located on the bottom right hand corner of the unit.

Q4: After I finish installing the TVP-SP4BK, the Skylook installation window appears. What should I do?

A4: Skylook is an optional bonus program which integrates with Microsoft® Outlook® (required). It allows you to manage your Skype™ contacts from Outlook®. To install the program, select Install Skylook (recommended) and click Next. Then follow the Install Wizard directions to complete the installation. If you do not want to install the program, select Don't Install.

If you still encounter problems or have any questions regarding the TVP-SP4B and TBW-104UB, please refer to the User's Guide included on the Utility & Driver CD-ROM or contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673

24/7 Tech Support

Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET



Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

20675 Manhattan Place

Torrance, CA 90501

USA