

# TRENDnet®



---

## Quick Installation Guide Unmanaged Industrial Switch

# Table of Contents

---

## **1 English**

1. Before You Start
2. Quick Reference
3. Hardware Installation

<https://www.trendnet.com/qig/1355>



# 1. Before You Start

---

## Package Contents

- TI-G50 / TI-G62 / TI-G80 / TI-G102 / TI-G162 / TI-E50 / TI-E80 / TI-G262
- Quick Installation Guide
- Removable terminal block
- DIN-Rail mount
- Wall mount kit

## Minimum Requirements

- Existing network
- Power Supply

## Switch Consumption Table

| Switch Model | Switch Power Consumption | DC Input Voltage Range |
|--------------|--------------------------|------------------------|
| TI-G50       | 2.76W                    | 12 – 56V               |
| TI-G102      | 5.76W                    | 12 – 56V               |
| TI-G62       | 3.84W                    | 12 – 56V               |
| TI-G162      | 13W                      | 12 – 56V               |
| TI-G80       | 5W                       | 12 – 56V               |
| TI-E50       | 2.24W                    | 12 – 56V               |
| TI-E80       | 3W                       | 12 – 56V               |
| TI-G262      | 10.64W                   | 12 – 56V               |


Unmanaged Industrial Switch Model Power Supplies.

| <b>Power Supply Model</b> | <b>Max. Power Supplied</b> | <b>DC Output</b> | <b>Type</b>                                 | <b>Note</b>                               |
|---------------------------|----------------------------|------------------|---|---|
| <b>TI-M6024</b>           | 60W                        | 24V / 2.5A       | DIN-Rail                                    |   |
| <b>TI-S12024</b>          | 120W                       | 24V / 5A         | DIN-Rail                                    |   |
| <b>TI-S12048</b>          | 120W                       | 48V / 2.5A       | DIN-Rail                                    |   |
| <b>TI-S24048</b>          | 240W                       | 48V / 5A         | DIN-Rail                                    |   |
| <b>TI-S48048</b>          | 480W                       | 48V / 10A        | DIN-Rail                                    |   |
| <b>48VDC3000</b>          | 160W                       | 48V / 3.34A      | Power Adapter<br>(4-pin DIN type connector) | Compatible only with<br>TI-G162 / TI-G102 |

**Note:** Select the appropriate power supply according to the switch model you have purchased.

## 2. Quick Reference

**Note:** The switch model and power supply may be different than the one shown in the example below.

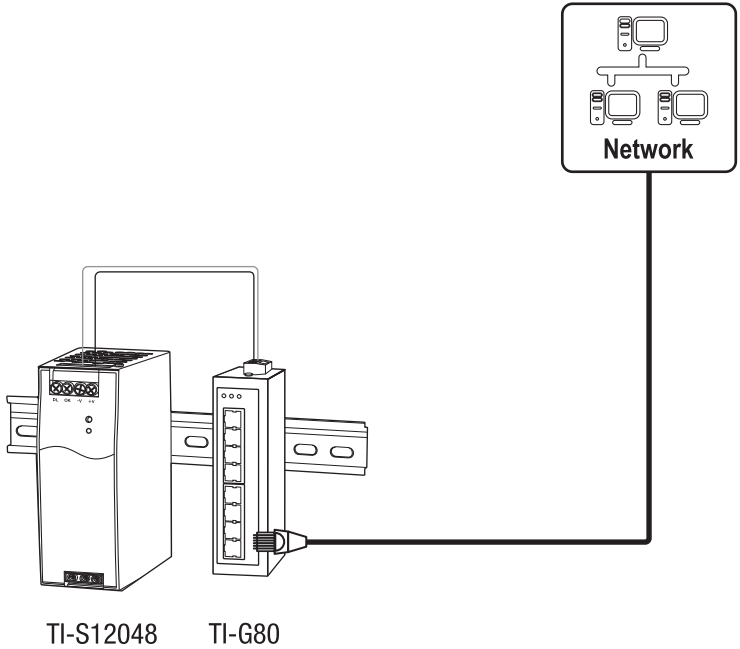


### 3. Hardware Installation

The switch can be placed on a desktop, wall mounted, or mounted to a DIN-Rail.

#### DIN-Rail Mounting Instructions


1. Attach the DIN-rail mount bracket to the switch.

**Note:** The switch may be different than the one shown in the examples below.

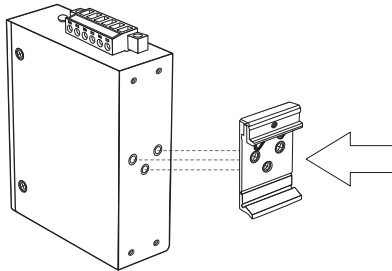


2. Position the unit in front of the DIN-Rail and hook the mount bracket over the top of the rail.

3. Rotate the unit downward towards the rail to lock it into place. You will know it is secure when you hear the click.

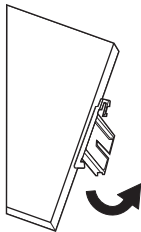

Mounting the unit

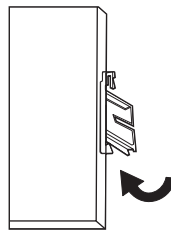


Releasing the unit

4. To remove the unit, pull down to clear the bottom of the DIN-Rail and rotate up, away from the rail.

## Wall Mounting Instructions

1. Attach the wall mount plates to switch.
2. Mount the switch.

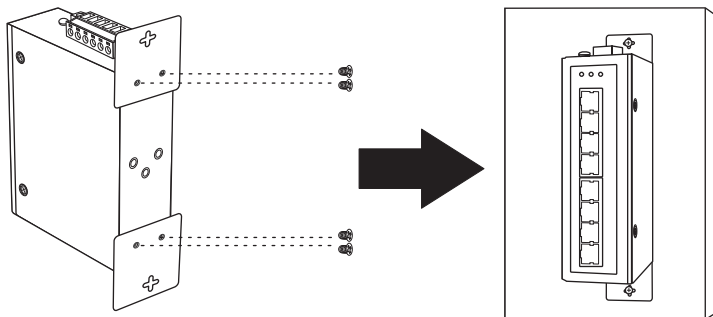


## Applying Power

1. Connect the power supply (sold separately) to the included terminal block (as shown below) and secure with the screws.

**Note:** Polarities must match.

2. Attach the terminal block to the unit, connect the ground wire to the ground, and supply power to the power adapter.

**Note:** The switch model and power supply may be different than the one shown in the example below. Terminal blocks may be 4-pin (dual power input) or 6-pin (dual power input with alarm relay output) with differences in labeling.

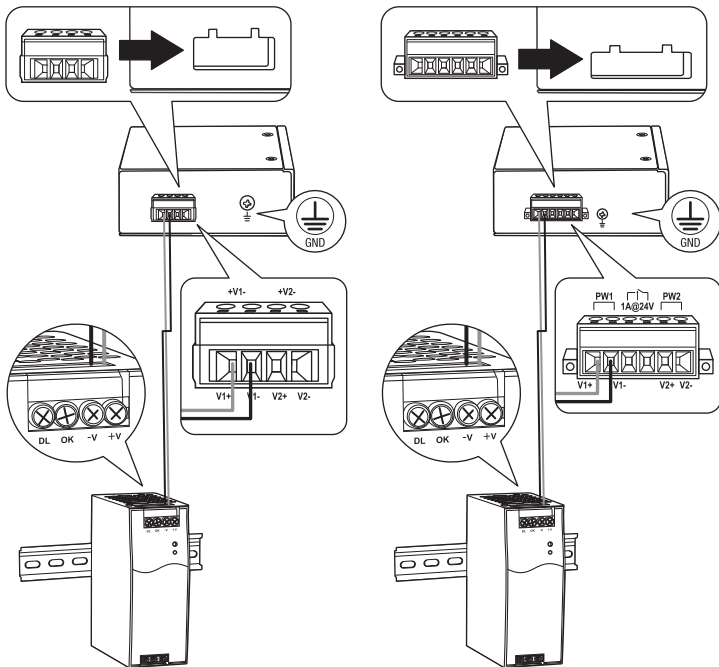




3. Connect a network source and devices to the switch. Check the LEDs to confirm the connections are established. Your installation is completed.

**Note:** Please refer to the LED definition section on page 8-13 for reference to your switch model.

If available on your switch (TI-G102 / TI-G162), the 4-pin DIN type connector can also be used as an additional power input (48VDC3000 power adapter sold separately).

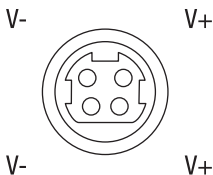

### Safety Note



- Turn off the power before connecting any module or wire. The correct power supply voltage is listed on the product label. Check the voltage of your power source to make sure that you are using the correct part. Do NOT use voltage greater than the maximum listed on the product label.
- Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If the current surpasses the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

**LED Indicators**

| <b>TI-G50</b> |                |                               |
|---------------|----------------|-------------------------------|
|               | <b>Status</b>  | <b>Description</b>            |
| <b>PW1</b>    | Solid Green    | Power is Detected             |
|               | Off            | Power is Not Detected         |
| <b>PW2</b>    | Solid Green    | Power is Detected             |
|               | Off            | Power is Not Detected         |
| <b>LNK</b>    | Solid Green    | Connected                     |
|               | Flashing Green | Data Transmitting / Receiving |
|               | Off            | No Connection                 |
| <b>SPD</b>    | Solid Amber    | Connected at 1000M            |
|               | Off            | Connected at 10/100M          |

| <b>TI-G102</b>      |                |  |
|---------------------|----------------|--|
|                     | <b>Status</b>  | <b>Description</b>                         |
| <b>PW1</b>          | Solid Green    | Power is Detected                          |
|                     | Off            | Power is Not Detected                      |
| <b>PW2</b>          | Solid Green    | Power is Detected                          |
|                     | Off            | Power is Not Detected                      |
| <b>PW3</b>          | Solid Amber    | Power is Detected                          |
|                     | Off            | Power is Not Detected                      |
| <b>RLY</b>          | Solid Amber    | Connected only PW1 or PW2 or PW3           |
|                     | Off            | Both PW1 and PW2 are connected and powered |
| <b>LNK</b>          | Solid Green    | Connected                                  |
|                     | Flashing Green | Data Transmitting / Receiving              |
|                     | Off            | No Connection                              |
| <b>SFP (F9,F10)</b> | Solid Green    | Connected                                  |
|                     | Flashing Green | Data Transmitting / Receiving              |
|                     | Off            | No Connection                              |

| <b>TI-G62</b>       |                |  |
|---------------------|----------------|--|
|                     | <b>Status</b>  | <b>Description</b>                         |
| <b>PW1</b>          | Solid Green    | Power is Detected                          |
|                     | Off            | Power is Not Detected                      |
| <b>PW2</b>          | Solid Green    | Power is Detected                          |
|                     | Off            | Power is Not Detected                      |
| <b>ERR</b>          | Solid Amber    | Both PW1 and PW2 are connected and powered |
|                     | Off            | Connected only PW1 or PW2                  |
| <b>LNK</b>          | Solid Green    | Connected                                  |
|                     | Flashing Green | Data Transmitting / Receiving              |
|                     | Off            | No Connection                              |
| <b>SPD</b>          | Solid Amber    | Connected at 1000Mbps                      |
|                     | Off            | Connected at 10/100Mbps                    |
| <b>SFP (F5, F6)</b> | Solid Green    | Connected                                  |
|                     | Flashing Green | Data Transmitting / Receiving              |
|                     | Off            | No Connection                              |

### DIP Switch Reference

|                     |     |                       |
|---------------------|-----|-----------------------|
| <b>DIP SWITCH 1</b> | On  | Enable Port T5        |
|                     | Off | Enable Port F5        |
| <b>DIP SWITCH 2</b> | On  | SFP Speed is 100Mbps  |
|                     | Off | SFP Speed is 1000Mbps |

| <b>TI-G162</b>       |                |  |
|----------------------|----------------|--|
|                      | <b>Status</b>  | <b>Description</b>                         |
| <b>P1</b>            | Solid Green    | Power is Detected                          |
|                      | Off            | Power is Not Detected                      |
| <b>P2</b>            | Solid Green    | Power is Detected                          |
|                      | Off            | Power is Not Detected                      |
| <b>P3</b>            | Solid Amber    | Power is Detected                          |
|                      | Off            | Power is Not Detected                      |
| <b>RLY</b>           | Solid Amber    | Connected only PW1 or PW2 or PW3           |
|                      | Off            | Both PW1 and PW2 are connected and powered |
| <b>LNK</b>           | Solid Green    | Connected                                  |
|                      | Flashing Green | Data Transmitting / Receiving              |
|                      | Off            | No Connection                              |
| <b>SFP (F15,F16)</b> | Solid Green    | Connected                                  |
|                      | Flashing Green | Data Transmitting / Receiving              |
|                      | Off            | No Connection                              |

| <b>TI-G80</b> |                |  |
|---------------|----------------|--|
|               | <b>Status</b>  | <b>Description</b>                         |
| <b>PW1</b>    | Solid Green    | Power is Detected                          |
|               | Off            | Power is Not Detected                      |
| <b>PW2</b>    | Solid Green    | Power is Detected                          |
|               | Off            | Power is Not Detected                      |
| <b>RLY</b>    | Solid Amber    | Connected only PW1 or PW2                  |
|               | Off            | Both PW1 and PW2 are connected and powered |
| <b>LNK</b>    | Solid Green    | Connected                                  |
|               | Flashing Green | Data Transmitting / Receiving              |
|               | Off            | No Connection                              |

| <b>TI-E80</b> |                |  |
|---------------|----------------|--|
|               | <b>Status</b>  | <b>Description</b>                         |
| <b>PW1</b>    | Solid Green    | Power is Detected                          |
|               | Off            | Power is Not Detected                      |
| <b>PW2</b>    | Solid Green    | Power is Detected                          |
|               | Off            | Power is Not Detected                      |
| <b>RLY</b>    | Solid Amber    | Connected only PW1 or PW2                  |
|               | Off            | Both PW1 and PW2 are connected and powered |
| <b>LNK</b>    | Solid Green    | Connected                                  |
|               | Flashing Green | Data Transmitting / Receiving              |
|               | Off            | No Connection                              |

| <b>TI-E50</b> |                |                               |
|---------------|----------------|-------------------------------|
|               | <b>Status</b>  | <b>Description</b>            |
| <b>PW1</b>    | Solid Green    | Power is Detected             |
|               | Off            | Power is Not Detected         |
| <b>PW2</b>    | Solid Green    | Power is Detected             |
|               | Off            | Power is Not Detected         |
| <b>LNK</b>    | Solid Green    | Connected                     |
|               | Flashing Green | Data Transmitting / Receiving |
|               | Off            | No Connection                 |

| <b>TI-G262</b>              |                |                              |
|-----------------------------|----------------|------------------------------|
|                             | <b>Status</b>  | <b>Description</b>           |
| <b>P1</b>                   | Solid Green    | Power is Connected           |
|                             | Off            | Power Disconnected           |
| <b>P2</b>                   | Solid Green    | Power Connected              |
|                             | Off            | Power Disconnected           |
| <b>RLY</b>                  | Solid Amber    | Connected only P1 or P2      |
|                             | Off            | Both P1 and P2 are connected |
| <b>LINK/ACT<br/>(RJ-45)</b> | Solid Green    | Link Established             |
|                             | Blinking Green | Data Transmitting            |
|                             | Off            | No Link                      |
| <b>SPEED<br/>(RJ-45)</b>    | Amber          | Connected at 1000Mbps        |
|                             | Off            | Connected at 10/100Mbps      |
| <b>LINK (SFP)</b>           | Solid Green    | Link Established             |
|                             | Blinking Green | Data Transmitting            |
|                             | Off            | No Connection                |

# Declaration of Conformity

TRENDnet<sup>®</sup>

## Manufacturer's Name and Address

TRENDnet, Inc.  
20675 Manhattan Place  
Torrance, CA 90501 USA

Zwolschestraat 156 2587 WB  
The Hague The Netherlands



## Product Information:

TI-G50 / TI-G80 / TI-G62 / TI-G102 / TI-G162 / TI-E50 / TI-E80 / TI-G262

5-Port Hardened Industrial Gigabit DIN-Rail Switch  
8-Port Hardened Industrial Gigabit DIN-Rail Switch  
6-Port Hardened Industrial Gigabit DIN-Rail Switch  
10-Port Hardened Industrial Gigabit DIN-Rail Switch  
16-Port Industrial Gigabit DIN-Rail Switch  
5-Port Industrial Fast Ethernet DIN-Rail Switch  
8-Port Industrial Fast Ethernet DIN-Rail Switch  
26-Port Hardened Industrial Gigabit DIN-Rail Switch

## Trade Name:

TRENDnet

TRENDnet hereby declare that the product is in compliance with the essential requirements and other relevant provisions under our sole responsibility.

## Safety

EN 62368-1: 2014 (Second Edition) (TI-G62, TI-G80, TI-E80, TI-G102, TI-G162, TI-G262)

## EMC

EN 55032: 2015 + AC: 2016 (Class A) (TI-E80, TI-G162)

EN 55035: 2017 / A11: 2020 (TI-G262)

EN 55032: 2012 + AC: 2013 Class A (TI-G102)

IEC 61000-4-2: 2008 (TI-G262)

EN 55032: 2015 (TI-E50, TI-G262)

IEC 61000-4-3: 2020 (TI-G262)

CISPR 32: 2015 (TI-E50, TI-G162)

IEC 61000-4-4: 2012 (TI-G262)

EN 55022: 2010 + AC: 2011 Class A (TI-G50, TI-G62, TI-G80)

IEC 61000-4-5: 2014 / A1: 2017 (TI-G262)

CISPR 22: 2008 + IS1: 2009 + IS2: 2010 + Corr: 2012 Class A (TI-G50)

IEC 61000-4-6: 2013 / COR1: 2015 (TI-G262)

CISPR 22: 2008 Class A (TI-G80)

IEC 61000-4-8: 2009 (TI-G262)

EN 55011: 2009 + A1: 2010 (Group 1, Class A) (TI-G62)

EN 55024: 2010 + A1: 2015 (TI-E50, TI-E80, TI-G162)

EN 55024: 2010 (TI-G50, TI-G62, TI-G80, TI-G102)

EN 61000-6-4: 2007 + A1: 2011 (TI-G62)

EN 61000-6-2: 2005 + AC: 2005 (TI-G62)

This product is herewith confirmed to comply with the Directives.

## Directives:

EMC Directive 2014/30/EU

RoHS Directive 2011/65/EU

RoHS 3 Directive 2015/863/EU

Low Voltage Directive 2014/35/EU (TI-G80, TI-E80, TI-G62, TI-G102, TI-G162)

WEEE Directive 2012/19/EU

REACH Regulation (EC) No. 1907/2006

Person responsible for this declaration.

Place of Issue: Torrance, California, USA

Date: July 10, 2023

Name: Sonny Su

Title: VP of Technology

Signature:





# Declaration of Conformity

TRENDnet<sup>®</sup>

## Manufacturer's Name and Address

TRENDnet, Inc.  
20675 Manhattan Place  
Torrance, CA 90501 USA

Authorized Representative:  
Office: +44 (0) 1635 887 399  
Unit 4 Rivermead Business Park,  
Pipers Way, Thatcham, RG19 4EP England



## Product Information:

TI-G50 / TI-G80 / TI-G62 / TI-G102 / TI-G162 / TI-E50 / TI-E80 / TI-G262

5-Port Hardened Industrial Gigabit DIN-Rail Switch  
8-Port Hardened Industrial Gigabit DIN-Rail Switch  
6-Port Hardened Industrial Gigabit DIN-Rail Switch  
10-Port Hardened Industrial Gigabit DIN-Rail Switch  
16-Port Industrial Gigabit DIN-Rail Switch  
5-Port Industrial Fast Ethernet DIN-Rail Switch  
8-Port Industrial Fast Ethernet DIN-Rail Switch  
26-Port Hardened Industrial Gigabit DIN-Rail Switch

## Trade Name:

TRENDnet

TRENDnet hereby declare that the product is in compliance with the essential requirements and other relevant provisions under our sole responsibility.

## Safety

BS EN 62368-1: 2014 (Second Edition) (TI-G62, TI-G80, TI-E80, TI-G102, TI-G162, TI-G262)

## EMC

|  |   |
|--|---|
| BS EN 55032: 2015 + AC: 2016 (Class A) (TI-E80, TI-G162)             | BS EN 55035: 2017 / A11: 2020 (TI-G262)       |
| BS EN 55032: 2012 + AC: 2013 Class A (TI-G102)                       | BS IEC 61000-4-2: 2008 (TI-G262)              |
| BS EN 55032: 2015 (TI-E50, TI-G262)                                  | BS IEC 61000-4-3: 2020 (TI-G262)              |
| CISPR 32: 2015 (TI-E50, TI-G162)                                     | BS IEC 61000-4-4: 2012 (TI-G262)              |
| BS EN 55022: 2010 + AC: 2011 Class A (TI-G50, TI-G62, TI-G80)        | BS IEC 61000-4-5: 2014 / A1: 2017 (TI-G262)   |
| CISPR 22: 2008 + IS1: 2009 + IS2: 2010 + Corr: 2012 Class A (TI-G50) | BS IEC 61000-4-6: 2013 / COR1: 2015 (TI-G262) |
| CISPR 22: 2008 Class A (TI-G80)                                      | BS IEC 61000-4-8: 2009 (TI-G262)              |
| BS EN 55011: 2009 + A1: 2010 (Group 1, Class A) (TI-G62)             |   |
| BS EN 55024: 2010 + A1: 2015 (TI-E50, TI-E80, TI-G162)               |   |
| BS EN 55024: 2010 (TI-G50, TI-G62, TI-G80, TI-G102)                  |   |
| BS EN 61000-6-4: 2007 + A1: 2011 (TI-G62)                            |   |
| BS EN 61000-6-2: 2005 + AC: 2005 (TI-G62)                            |   |

This product is herewith confirmed to comply with the Directives.

## Directives:

Electromagnetic Compatibility Regulations 2016  
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012  
Electrical Equipment (Safety) Regulations 2016 (TI-G80, TI-E80, TI-G62, TI-G102, TI-G162)  
The Waste Electrical and Electronic Equipment Regulations 2013 (as amended)  
The REACH Enforcement Regulations 2008 (as amended)

Person responsible for this declaration.

Place of Issue: Torrance, California, USA

Date: July 10, 2023

Name: Sonny Su

Title: VP of Technology

Signature:

A handwritten signature in black ink, appearing to read 'Sonny Su', written over a horizontal line.



# TRENDnet<sup>®</sup>

## Certifications

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference.  
(2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.

- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
- FCC Caution: Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## Technical Support

If you have any questions regarding the product installation, please contact our Technical Support.  
Toll free US/Canada: **1-855-373-4741**  
Regional phone numbers available  
at [www.trendnet.com/support](http://www.trendnet.com/support)

## TRENDnet

20675 Manhattan Place  
Torrance, CA 90501  
USA

Applies to PoE Products Only: This product is to be connected only to PoE networks without routing to the outside plant.

## Note

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## Advertencia

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.

## Power supply connected caution

The equipment power supply cord shall be connected to a socket-outlet with earthing connection.

## Advertencia

Le cordon d'alimentation de l'appareil doit être raccordé à une prise de courant avec mise à la terre.

If the Optical Transceiver doesn't ship with the unit, the user manual shall have description as below or equivalent: "This product is intended to be used with a UL Listed Optical Transceiver product, Rated DC3.3V, Laser Class I."

## Wall-mounted instructions

The Unit has two wall-mount slots on its bottom panel. Before you begin, make sure you have two screws that indicate a diameter measurement of 0.265748 inches (6.75mm).

- (1) Determine where you want to mount the modem.
- (2) Maneuver the modem so the wall-mount slots line up with the two screws.
- (3) Place the wall-mount slots over the screws and slide the modem down until the screws fit snugly into the wall-mount slots.
- (4) Screw type P3.5 x 16mm x 2

## Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at:  
[www.trendnet.com/register](http://www.trendnet.com/register)